



	Section
Introduction / Warranty / Body Construction .....	1
Motorhome Code .....	2
Preparing for the Road .....	3
On the Road .....	4
Arrival on Site .....	5
Safety & Security .....	6
Connection of Services .....	7
Technical Specification .....	8
Fitted Equipment .....	9
Care of your Motorhome .....	10
Useful Information .....	11
Service Section .....	12
Index .....	13





## **Welcome.**

Congratulations on your purchase of an Auto-Sleeper motorhome. We are confident it will give you many years of pleasure.

This handbook has been compiled to enable you to obtain the maximum pleasure from your vehicle. It contains the appliance instructions along with advice on safety matters.

Please read this Handbook thoroughly so that you are conversant with all the motorhome systems, operating instructions and precautions.

Failure to observe these recommendations or precautions may result in incorrect operation of equipment and subsequent risk to occupants.

Information leaflets and literature on safe operation of appliances and equipment fitted to your motorhome are included in the Auto-Sleeper Customer Pack. Please read these carefully prior to use.

Should you experience any difficulties contact your dealer who will be pleased to offer advice.

It is the policy of Peugeot and Auto-Sleeper to continually improve their vehicles, so whilst the details contained in this Handbook are correct at the time of going to press, they reserve the right to alter the specifications at any time without notice.

Auto-Sleeper motorhomes offer a variety of customer uses and whilst each vehicle features the optimum storage, fluid, seating and sleeping capabilities, it is the customer's responsibility to select the proper combinations of loads without exceeding weight capacities.

Your Auto-Sleeper motorhome conforms to the European standard of EN 1646.

## **Model**

This Handbook covers the Peugeot Kemerton, based on Peugeot Boxer 335 L3 H2 long wheelbase high roof window van.

## **Gas System**

The gas system is designed to operate on LPG stored in a re-fillable tank fitted under the vehicle. The regulator has a working pressure of 30 mbar.

## **Conversion Type**

Panel van conversion, with three seats designated for use whilst the vehicle is in motion. Vehicle has a large transverse double bed and an end bathroom.

## **Climatic Conditions**

The motorhome is designed for use in temperate climates, and is certified Grade 1 in accordance with EN 1646-1: 2004., indicating an effective heating system is fitted but has not been tested for thermal performance.

## **Handbook**

Any queries should be addressed to your Auto-Sleeper dealer.

## **Appliance Instructions**

The appliance instructions included have been extracted from those supplied from the appliance manufacturers.

## **Automotive - Peugeot**

For all automotive matters you should refer to the Peugeot vehicle instructions manual. This includes tyre pressures, referring to the type of tyres fitted.

The Auto-Sleeper conversion does not affect the tyre pressures in any way as it is built within the design envelope of the base vehicle.



## Air Suspension

Your vehicle has been fitted with a supplementary air suspension system on the rear axle. This is called Air Top, is manufactured by AL-KO, and uses additional air springs to improve the quality of the vehicle ride. The operating pressure may be adjusted by the vehicle user to suit their requirements. The system does not increase the carrying capacity of the rear axle, or the vehicle as a whole.

See Section 9 for further details.

### IMPORTANT:

In the interests of safety, replacements parts for appliances must conform to the manufacturer's specification and should be fitted by them or an authorised agent.

Your Auto-Sleeper conforms to the CEN Standard EN1646-1/2004 for habitation requirements relating to Health and Safety.

To deal with your queries efficiently, always quote your vehicle's production number which can be found in the glove compartment.

Please read and complete the warranty registration card supplied with your vehicle; and return to the address below, without delay.

Auto-Sleepers Limited,  
Orchard Works,  
Willersey,  
Nr Broadway,  
Worcestershire  
WR12 7QF  
Tele: 01386 853338  
Fax: 01386 858343  
E-mail: [aftersales@auto-sleepers.co.uk](mailto:aftersales@auto-sleepers.co.uk)



## AUTO-SLEEPERS WARRANTY

### Warranty Registration

The supplying dealer's representative and the purchaser must sign the declaration in the Warranty/Service book to verify that the dealer has explained the warranty terms and conditions and that the purchaser understands them.

The dealer must then register the sale on the Auto-Sleepers warranty system to activate the cover.

### Warranty Terms and Conditions

For full details of the warranty terms and conditions, please refer to the Warranty/Service handbook supplied with your Auto-Sleeper.



## **BODY CONSTRUCTION:**

**Peugeot Boxer L3 H2 window van.**

### **Body paint colours:**

- Golden White
- Azzura Blue
- White
- Metallic Silver
- Volcano Red
- Clipper Blue
- Horizon Yellow
- Silverstone Green

**Floor Vinyl:** Dark Wood Block.

**Furniture:** Amati.

**Furniture fittings:** Chrome.

**Work Surfaces and Table finish:** Minstrel.

**Carpet:** Mocha.

**Curtains, Cushions/Upholstery:** Judy,  
various colours.

**Exterior Graphics:** BS1820.



## THE COUNTRY & COASTAL CODES

Upon arrival at your destination you should be aware of the Country Code relating to motorhome owners. This is entitled the *Motor Caravanners' Code*.

### Code of Conduct - Camp Sites

#### Arrivals

- Report to reception immediately on arrival.

#### Vehicle Movement

- Keep to roadways unless otherwise directed.
- Adhere to speed limits. Note that these are generally 10 mph. (Remember that the stopping distance on grass is considerably greater than on tarmac).
- Only a person in possession of a current driving licence may drive on the site.
- Park correctly as advised on your pitch. Where possible leave 20ft of free space around your vehicle.

#### Use of Site

- Use the electrical mains hook-up in the correct manner and with caution.
- Ensure that all fresh water taps/connections are turned off after use.
- Have care and consideration when using all facilities (toilets and showers etc.) and leave them clean and tidy. Young children should be escorted.

To avoid possible damage to sewage purification works, only approved chemical fluids must be used. Under no circumstances may coal tar, phenol or caustic-based fluids be used. Disposable napkins and similar bulky items must not be put into chemical closet emptying points but should be wrapped in a polythene bag and placed in the container provided. (Put all litter in containers marked for the purpose).

#### Noise

- Do not make excessive noise.

- Children should be restrained from making excessive noise.
- Flying kites and model aircraft and the use of items like catapults or air-guns as well as ball games should not be permitted among, or close to, motorhomes.
- Musical instruments, record players, radios and televisions should not be used to the inconvenience of other people on site.
- Open and close doors quietly.
- Power generators must be adequately silenced and used with consideration.

#### Dogs and Pets

- All dogs and other pets should be kept under control.
- Unless permission has been granted, no animal should be allowed loose on the site and leads must not exceed 10ft.
- No animal should be allowed in the shower/toilet blocks.
- Do not let dogs foul the site.

#### Fire Precautions

Adhere to and make note of all fire precautions concerning the whereabouts of the fire points.

Although not compulsory, it is recommended that a 1 kg (2lb) dry powder fire extinguisher is carried. It should comply with BS 5423 and be marked BSI or FOC approved. It is important to check at regular intervals that the extinguisher is working as is required by types meeting BS 5423.

Careful thought is necessary for the positioning of the extinguisher, which should be near the door but not too close to the cooking equipment where sudden flames could make it unreachable. In the kitchen area, a fire blanket is a worthwhile precaution.

Unless permission has been granted, barbecues should not be used. When permission has been given, consideration should be given to the annoyance that can be caused to other users of the site. Open fires are not allowed.



## Awnings and Tents

Awnings and tents should only be used when permission has been obtained.

When on grass and staying for more than a few days, the ground sheet and/or side flaps of awnings should be periodically raised in order to avoid damage to the ground.

## Departure

- Leave the pitch clean and tidy.
- On leaving, check out with the reception paying the required dues.

## Wild camping

Camping away from licensed sites, without the permission of the landowner or his agent, is not allowed in the United Kingdom. When permission has been granted, all aspects of this Code should be adhered to.

### *On no accounts should:*

- Litter be disposed of other than in receptacles provided.
- Water be allowed to escape from the vehicle.
- Chemical toilets be emptied except into the disposal places agreed with the landowner.
- Washing or similar be hung outside the vehicle.

## Parking

Motorhomes should only be parked in approved places.

When using the facilities of a motorhome at such times, care and consideration should be given to those around them.

## Driving

When using a motorhome on either the public highway or private road, the Highway Code should be complied with and full consideration given to other road users.

In the event of a motorhome travelling slowly and there being a queue of traffic behind, the driver of the motorhome should, where possible, pull over in order to let the other traffic pass.

When the vehicle is in motion it is compulsory

that all passengers are seated and seat restraint straps worn.

Before moving off, elevating roofs **MUST** be lowered and correctly secured, and top hinged windows closed. Likewise all doors and access lockers for gas containers and chemical toilets must be properly closed.

Exterior steps should be properly retracted and secured.

When the vehicle is being refuelled, or on a ferry, all gas systems must be turned off.

Gas appliances should only be used when the vehicle is in motion when the manufacturer of the appliance permits such use.

## Handbook

Before using a motorhome all aspects of the handbooks produced by the chassis manufacturer and the converter must be read and adhered to.

## Environment

Care and consideration should be taken to protect the environment.

*Observe the Country and Coastal Codes shown below:*

### **The Country Code**

Enjoy the countryside but respect its life and work.

More people than ever before are exploring the countryside, interested in farming, plant life, bird watching or just observing the general wildlife. Whatever your interest, there is a lot to learn, but please observe the following code.

Guard against all risk of fires. Hay and heath land catch alight easily and once ablaze are very hard to put out. *Remember: Fire Spreads Quickly.*

- Keep to public paths across farmland.
- Use gates and stiles to cross fences, hedges and walls.
- Leave livestock, crops and machinery alone. View from a distance.
- Take your litter home - it is unsightly and harmful to wildlife.





- Help to keep all water clean.
- Take special care of country roads.
- Make no unnecessary noise. Most animals are very timid, noises can disturb them unnecessarily. If you want to get the best out of the country, go quietly.

## **The Coastal Code**

As our coastlines are increasingly used for recreation and education, the following suggestions are made to enable us to enjoy our inheritance and preserve it for posterity.

- Do not trample about, or move rocks unnecessarily.
- Do not frighten seals or seabirds.
- Do not spear fish.
- Do not spill detergents, solvents or fuel from boats as these can kill marine life.
- When sailing, moderate your speed - the wash from a fast boat can destroy banks and nests.
- Live mollusks and crustaceans need not be collected as souvenirs - dead shells can usually be found.
- Shellfish can take years to grow and fines can be imposed for not observing national regulations.
- Do not pull up seaweed unnecessarily.
- Make your visit instructive - not destructive.
- Look at material, don't remove it. Take notes and photographs, not specimens.
- Observe bye-laws and be considerate to others.
- National Trust property or Country Parks have regulations to protect the wildlife. Follow these.

## **Fire Precautions**

You should also make yourself aware of the local fire regulations.





## YOUR MOTORHOME (Weights explained)

### Mass in Running Order (MRO)

The weight of your motorhome as it leaves the factory, as new with standard fixtures and fittings, plus an allowance for driver and 90% fuel.

### Maximum Technically Permissible Laden Mass (MTPLM)

The maximum weight of the vehicle when fully laden for use on the road. See specification section for actual figure.


### User Payload

The load margin (payload), this represents the difference between the Mass in Running Order (MRO) and the Maximum Technically Permissible Laden Mass (MTPLM). It shows the maximum weight which can be loaded into your motorhome, covering items such as food, crockery, cutlery, clothing, bedding, gas cylinders, etc. See Technical Specification for actual figure.

Please take care to ensure that you have allowed for the masses of all items you intend to carry in the motorhome, e.g.. passengers, optional equipment, essential habitation equipment and personal effects such as clothing, food, pets, bicycles etc.

Although there are additional seat belts within the motorhome, please refer to the stated number of passengers that are allowed due to the MRO and MTPLM.

## LOADING AND DISTRIBUTION OF WEIGHT IN THE MOTORHOME

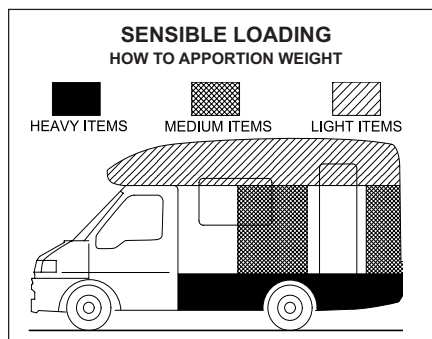

### Loading

Correct weight distribution is a major factor in making your motorhome a balanced and pleasant vehicle to drive without compromising road-holding. Care should therefore be taken to ensure that heavy items are well spaced and are in as low a position as possible, for example, low cupboards and bed boxes.

DO NOT EXCEED THE STATED MAXIMUM LOAD. ITEMS FITTED OTHER THAN STANDARD EQUIPMENT WILL DEplete THE PAYLOAD STATED IN THIS HANDBOOK.

**WARNING: Under no circumstances should the maximum permissible laden mass of the motorhome be exceeded.**

### Roof Loading

DO NOT ALLOW CHILDREN TO CLIMB ONTO THE ROOF.

### Roof Rack Bars and Ladder (optional)

When using the optional roof rack, care should be taken to see that all the items are securely anchored. Apart from general cleaning and polishing, the roof rack and ladder require no special maintenance.

**WARNING: Take special care when on the roof in wet or frosty weather conditions, which cause it to be particularly slippery.**

Maximum load within the area encompassed



by the roof rack should not exceed 75 kgs (165 lbs) with a maximum loading of 8 kg (17 lbs) per square foot.

### Before Moving Off

Whenever making a journey with your motorhome, either setting off on holiday or returning home, it is good practice to run through this simple checklist.

1. Close and secure all cupboards and drawers and check any loose articles. Do not store tins, bottles, etc. in overhead lockers.
2. Close and secure all windows and roof lights.
3. Leave all curtains and blinds open to aid visibility.
4. Check that gas cylinders are securely fastened and turn off all gas appliances, except those heating appliances designed to function while the vehicle is in motion. Also, ensure that the gas locker door is securely fastened.
5. Ensure that there is sufficient gas to meet your needs.
6. Switch off 230 volt supply at source, disconnect mains cable from site supply before disconnecting from vehicle. Beware of potential electric shock from wet cable. Coil cable and store in a safe place.
7. Check your RCD's/MCB's for operation.
8. Check and if necessary, charge the conversion battery.
9. Check battery selection switch is in the OFF position.
10. Check that the battery is secure and that the battery box lid is fastened.
11. Ensure the fridge is on 12V operation and door lock is set. (**Note:** the electrical relays will allow the fridge to be run on the vehicle battery when the engine is running.)
12. Remove any external fresh water connections etc.
13. Make sure any heavy articles are stored in accordance with the loading procedure. Tables should also be made secure.
14. Lock the motorhome exterior door (remember to take out your keys).
15. Check your external rear view mirrors and adjust if necessary.
16. Check that all corner steadies are wound up and that, if a step is used, it is put away before moving off.
17. Check wheel nuts are secure and tyre pressures are correct.
18. Ensure, if required, that your fresh water tank is full and your waste tank is empty.
19. Referring to your base vehicle manual, check all fluid levels including automotive fuel and tyre pressures. Remember to check that your spare tyre is of the recommended pressure.
20. Ensure that, on models fitted with an elevating roof, the roof is securely locked down with the exterior catches applied.
21. The fridge vent covers should be fitted when the vehicle is to be driven in order to comply with European Type Approval regulations for vehicle external projections.
22. Ensure that the toilet flush tank only contains a small amount of water (1-2 litres) in order to minimise the risk of leaks or spillage whilst the vehicle is in motion.
23. Check underneath the vehicle for stray items.
24. Safely store levelling blocks away in an appropriate place.



## Pulling Off

Engage the clutch smoothly.

Avoid wear and tear on clutch and transmission by taking extra care.

Change gears smoothly.

Try not to jerk the clutch.

## MOTORWAY DRIVING

### Speed Limits (UK)

If a speed limit is not in force, your motorhome can be driven up to 70mph on motorways and dual carriageways.

1. Reduce Speed:
  - i) In high or cross winds.
  - ii) Downhill.
  - iii) In poor visibility.
2. High sided vehicles cause air buffeting, so extra care must be taken when passing or being passed. As much space as possible should be given.

### Motorway Handling

Do not bump the kerb with the wheels.

When passing other vehicles allow more than the normal clearance.

Allow longer to get up speed to pass.

Do not swing out suddenly.

Carry out all manoeuvres as smoothly as possible.

Use nearside wing mirror to check motorhome has cleared when overtaking.

### Changing a Wheel

Refer to the vehicle handbook

**WARNING: Ensure the wheel is of the same construction and size as the one that has been removed.**

### Jacking

Front and Rear - use the standard jacking points as per the base vehicle handbook.

## Removing the Spare Wheel

**CAUTION: Exercise care when lowering the wheel frame due to its weight.**

### Removal

- a. The spare is located in front of the rear step.
- b. Tools - The jack, handle and wheel brace are stored under the nearside rear seat.
- c. Follow the procedure for changing a wheel as described and illustrated in the base vehicle handbook.

## Replacement of Spare Wheel

Follow the procedure as described in the base vehicle handbook.

### Caravan Door Step

Your vehicle is fitted with an electrically operated side step. In the event of the step being left extended a buzzer, positioned under the dashboard, will sound (when the ignition is switched on) and the step will self-retract.

### Cycle Rack

In the event of a cycle rack being fitted, the cycle rack when folded will increase the vehicle length by 400mm. Your Auto-Sleeper dealer will give further advice or assistance if required.

### Whilst Driving

Whilst the vehicle is being driven ensure that:

- Both the passenger and driver wear seat belts - this is a legal requirement.
- Heavy loads are not stored in top cupboards or in areas from which they may become detached. Please ensure that heavy items are stored low down and take care not to overload individual wheels, the axles or the MTPLM.
- Table(s) are stowed in the correct position and table legs secured in their retaining clips.
- Furniture lids are lowered; cupboards and flaps are closed and secured.
- The refrigerator door is closed and secured by its travelling catch.



- The retractable rear step if fitted, is folded away or, if a separate step is supplied, it is safely stowed in the vehicle.
- Roof ventilators are closed and locked in the down position.
- The bathroom is not used whilst the vehicle is in motion. (Note: Refers only to models fitted with shower or toilet compartment).
- Top hinged windows are closed, and securely fastened.
- Children do not roam around the vehicle; they may fall and injure themselves.

## **Front Seat Swivel (where fitted)**

Your vehicle may be fitted with a swivel base to either or both of the front seats, so that they may be turned to face the rear of the vehicle.

The release lever, coloured red, is located at the front of the seat and is pushed downwards to unlock the swivel mechanism.

**WARNING: It is important that while the vehicle is in motion, any seat swivels are locked in the forward facing position.**

## **Map Storage**

In the rear of each cab seat there is a map pocket for storage of maps, periodicals and light items.



### **CHECK SITE REGULATIONS**

#### **Siting your Motorhome**

When siting your motorhome, keep to the roadways unless otherwise directed. Obey the speed limit which, in general, is 10 mph. Only a person in possession of a current driving licence is permitted to drive on the site. Stopping distances on grass are considerably greater than on tarmac.

#### **Selecting a Pitch**

Carefully select where you wish to park your motorhome. The site should be as level as possible, well drained and away from boggy areas and, preferably, not under or near trees. Consider also, how you will move your motorhome when leaving the site. For example, on sloping ground in wet conditions, pitch facing downhill.

#### **Levelling**

It is important to site your motorhome level to ensure correct operation of the refrigeration, cooker, etc by using purpose made ramps and NOT bricks or such items.

#### **Awning Light**

The exterior awning light is controlled by a switch located on the side of the nearside rear seat, accessed when the side door is opened.







## SAFETY

**Important:** Your attention is drawn to the notice affixed in the motorhome advising on fire prevention, ventilation and what to do in case of fire.

### Children

Do not leave children alone in the motorhome in any event, keep potentially dangerous items out of reach as at home. e.g. matches, drugs, etc.

**WARNING: When upper bunks are used by children especially under six years of age care shall be taken against the risk of them falling out.**

### Fire Extinguishers

It is recommended that a 1 kg (2lb) minimum capacity dry powder fire extinguisher be located by the main exit door at all times.

A pan fire should not have an extinguisher aimed at it but be smothered with a fire blanket (which should be stored by the cooker).

### In case of fire

1. Get everyone out of the motorhome as quickly as possible using whichever exit is the quickest including windows. Do not stop to collect any personal items.
2. Raise the alarm — Call the fire brigade.
3. Turn off gas container valve if safe to do so.

### Ventilation and Condensation

The ventilation points on your motorhome are fixed points of ventilation which are stated by the European Standards. Under no circumstances must these vents be blocked or obstructed. It is advised that fixed ventilation points and any protective screens are checked and cleaned (if necessary) on a regular basis.

Fresh air circulation should be allowed below the motorhome when appliances are in use and when flues terminate below the floor to allow free evacuation of the products of combustion. At least three sides of the underfloor space should always be kept open and unobstructed especially by snow. Do not

make any additional openings in the floor.

**Under no circumstances must these vents be blocked or obstructed.**

Additional night time ventilation is obtained by releasing the window catches and placing them in the second groove on the frame catch.

### Awnings

There is no danger of pollution of an enclosed awning space by the LPG exhaust from the refrigerator venting into it.

**WARNING: Space heaters may produce sufficient exhaust gases to pollute the awning space if it is totally enclosed (from a general comfort, smell, and hygiene point of view). In the extreme case, there could be a build up of carbon dioxide to a dangerous level.**

**Note:** Motorhome owners are advised to allow some fresh air circulation into the awning space when such appliances are in use.



## ELECTRICAL SYSTEMS

### Batteries

Battery terminals and connectors should be firmly attached. Battery surfaces should be free of moisture and dirt.

Where removable cell taps are fitted these must be screwed firmly home.

When removing a battery always remove the negative cable first. On re-connection the negative cable should be connected last. Switch off all lamps and appliances before disconnecting the battery. Do not smoke while working on or near to the battery.

### Fuses

Always replace blown fuses with one of a correct rating.

### Overload

Never overload any electrical circuit, especially the 12-volt socket outlet. The rating of appliances should be checked before connection.

### Shower Compartment Light

Ensure that water does not ingress into the light unit.

### Charger Unit

Keep the charger unit well ventilated and never allow material or bags to be in contact with the unit casing which gets hot when the unit is operating.

### 230 Volt Mains Operation

Before connecting to the supply, ensure that the contacts in both the plug and the socket are clean and dry and that the hook-up plug is firmly located and locked into the socket. The RCD must be easily accessible at all times.

## GENERAL

Before using your Auto-Sleeper, you should be fully conversant with the following safety precautions; if you are in any doubt as to the meaning of any of them you should contact your supplying Auto-Sleeper dealer. Please read the following carefully.

In the interests of safety, replacement parts

for appliances should conform to the appliance manufacturer's specification and should be fitted by them or their authorised agent.

### WARNINGS:

- 1 Never use portable cooking or heating equipment, other than electric heaters that are not of the direct radiant type, as it is a fire and asphyxiation hazard.**
- 2 Do not use cookers as heaters or dry clothes etc on the cooker or space heater.**
- 3 Make sure that combustible materials can not come into contact with hot surfaces or burners.**
- 4 Surfaces of appliances may become hot in use and the guard provided does not give full protection to the young and elderly.**
- 5 Do not use additional independent gas appliances inside the vehicle.**
- 6 Never allow modifications of electrical or LPG systems or appliances except by qualified technicians.**

The water heater fitted to this vehicle is of the "room sealed" type, any replacement should be the same, i.e. "room sealed".

Turn off all gas equipment and cylinders/tanks and any other heating appliances before travelling.

Ventilation openings are located below all the gas appliances, and in the base of the gas locker. In winter conditions make sure the vents are clear of snow and mud. These openings should be regularly checked and any mesh covering them cleaned with a stiff brush to prevent any risk of them becoming blocked. The openings are provided for your safety - please do not obstruct them.

### Air Bags

Do not fit rear-facing children's seats to front facing seat protected by air bags. It is recommended that small children do not sit in the front passenger seat whilst the vehicle is in motion. Follow the advice given in your base vehicle instruction book.



## Smoke Alarm

### Features

- Battery operated.
- Operating light (LED) flashes approximately every 45 seconds confirming unit is powered.
- Low battery warning. Unit “beeps” approximately every 45 seconds for up to 30 days when the battery needs replacing.
- Sensitivity test button. Tests sensitivity, circuitry, battery, horn (and emergency light, model 350 only).
- Loud 85 decibel Piezo electric alarm. Automatically resets when hazardous condition has passed.

**WARNING: Test smoke alarm operation after vehicle has been in storage, before each trip and at least once per week during use.**

Your alarm requires one 9 volt battery. Under normal use, the battery should last approximately one year.

### Simple maintenance

Vacuum every six months to help keep the unit working efficiently. Open cover and gently vacuum interior of detector. Keep vacuum nozzle from touching the unit.

Problems are indicated by two events:

1. The alarm does not sound upon pressing the test button.
2. The operating light remains steadily on or off (i.e. does not flash approximately once every 45 seconds, when the unit is not in alarm).

*Try the following:*

1. Inspect for obvious damage.
2. Visually check that unit contains recommended battery type.
3. Check that battery is properly connected.
4. Gently vacuum as recommended above.
5. Replace battery.

If these procedures do not correct the problem, do NOT attempt repairs. Contact the manufacturer.

## Carbon Monoxide Alarm

A Fire Angel CO-808 battery operated alarm is fitted near the ceiling on the wardrobe side panel.

### Features

- An advanced electrochemical sensor designed to accurately measure low levels of carbon monoxide (CO) providing an early warning of toxic CO levels in your motorhome.
- Detects carbon monoxide continuously.
- Resistant to false alarms caused by normal household contaminants.
- Sounds a loud 85dB alarm (at 3 metres/ 10 feet) to alert you in case of an emergency.
- Test/Reset button.
- Simple to mount, portable, ideal for travelling.
- Conforms to the British Standards Institute (BSI) Carbon Monoxide Standard BS7860 : 1996.
- Five year limited warranty (batteries excluded).

## Operating Features

Your FireAngel detector offers many features which set it apart from other CO detectors on the market today.

### Test/Reset Button Feature

This button will:


- Test your horn, battery and circuitry.
- Silence the loud 85dB (at 3 metres/10ft) horn during an alarm.
- Allow you to test the sensor by blowing smoke into the detector vents.

### Testing the Horn, Battery and Circuitry

Test the horn, battery and circuitry by pressing the Test/Reset button to confirm that the detector is operating properly. The horn



should sound as soon as the button is pressed, and both the red LEDs will flash indicating that the horn is working and the battery is providing power to the unit. This test for the horn, battery and circuitry should be performed on a weekly basis.

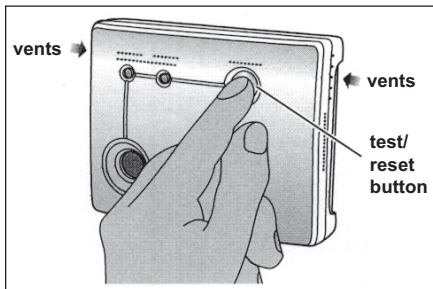


## Testing the Sensor

**CAUTION:** All sensor testing should only be performed by a responsible adult. This test should only be performed once a month. Excessive testing will cause the battery life to be shortened.

**Note:** CO test kits may be used in order to avoid having to burn cigarettes, incense sticks etc.

**Please read all steps thoroughly before attempting to test your alarm.**

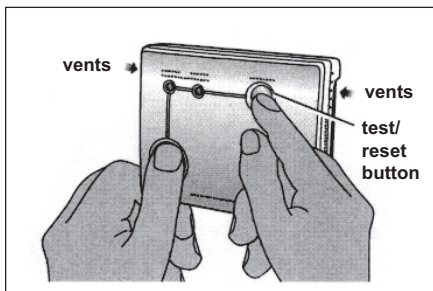

**Step 1:** If alarm is wall mounted remove by unhooking unit from wall fixing screws.

**Step 2:** Place left thumb/finger over the sounder vent. Hold the Test/Reset button down with right thumb/finger until the High Level LED stops flashing and only the Low Level LED flashes once per second (this

should happen after around 5 seconds). Upon releasing the Test/Reset button the High Level LED will begin to flash twice in quick succession every 5 seconds. This indicates that the detector is now monitoring continuously for CO and may be tested using a known source of CO.


**Step 3:** Light a cigarette or an incense stick using a match or lighter. Extinguish the lighter, or put out the match and place it into a dish of water.

**Step 4:** Turn the alarm on its side so that the vents nearest the Test/Reset button on the side of the alarm are pointing down ward (see diagram below). Hold the burning cigarette or incense stick 15-20cm (6-8 in) below the detector, so that the smoke moves towards the holes in the sides of the detector. An increase in the carbon monoxide level to more than

100ppm will cause the horn to sound momentarily and the High Level LED to illuminate continuously for a short time and then flash rapidly. (Note - it make take up to 2 minutes of exposure to the smoke for the carbon monoxide levels to reach over 100 ppm).

**Step 5:** After step 4, put out the incense stick or cigarette by placing it into a dish of water. Ensure that all flames have been extinguished. As the level of CO falls the High Level LED will stop flashing and will again continuously illuminate for a short time. The unit will then return to sensor test mode with the High Level LED flashing twice every 5 seconds.

**Step 6:** After four minutes the detector will

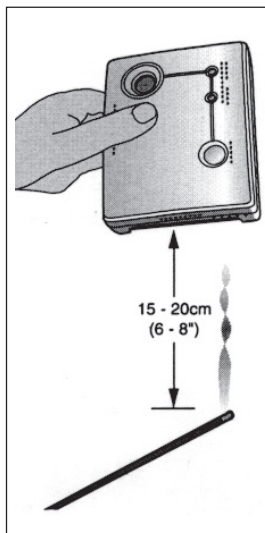



return to normal monitoring mode and the High Level LED will flash once per minute.

**Note:** The reason we recommend using cigarettes or incense sticks to test your alarm's sensor is that carbon monoxide is contained within the smoke given off by them as they burn inefficiently. Candles/matches etc will not provide a source of CO as they do not burn inefficiently. Your CO detector cannot detect smoke.

## Understanding different alarms

### High Level Alarm

If a high level of CO (above 70ppm) has been detected for a specified period of time, a loud continuous 85dB (at 3 metres) alarm will sound and the High Level LED will flash once every 5 seconds. Press the Test/Reset button to silence the alarm for 6 minutes. If the CO level remains above 70ppm during this 6 minutes, the alarm will again sound.

### Low Level Alarm

The detector will sound a loud continuous 85dB (at 3 metres) alarm and the Low Level LED will flash once every 5 seconds when a low level of CO (35ppm-70ppm) has been continuously detected for 4 hours. To silence the alarm, press the Test/Reset button. If the CO level remains above 35ppm for the next 4 hours, the alarm will again sound.

Continued low level alarms are an indication that the potential of a high level alarm exists. You should treat this alarm very seriously. Prolonged low levels of CO are believed to cause brain damage and heart disease, particularly in children and pregnant women. Call a qualified service engineer and have the problem investigated and rectified immediately. In the case of gas appliances this must be a GAS SAFE registered installer.

**WARNING: If both the High Level LED and the Low Level LED are flashing, the unit has detected both High and Low levels of carbon monoxide. You should treat this as a High Level Alarm, and act accordingly.**

### Low Battery/Error Warning

When your battery needs replacing, the High Level LED will continue to flash once per minute and the detector will chirp once per

minute for up to 30 days. Replace the battery immediately! When there is no battery in place, the red 'missing battery' indicator will appear at the top of the unit to remind you to replace the battery. If the unit continues to chirp, even with a fresh battery, then your detector is indicating that a fault has developed.

On discovering a fault please contact the FireAngel Technical Support Line between 10am-4pm, Monday to Friday.  
Tel: 024 7623 6663 (1-800 523171 in Eire).  
E-mail: [technicalsupport@fireangel.co.uk](mailto:technicalsupport@fireangel.co.uk)

## Quick Reference Label

A Quick Reference Label is located on the back of your detector and provides you with general instructions on the actions to take when your alarm sounds. For full details, read this owner's manual carefully.

## What to do in the event of an alarm

**WARNING: A loud alarm is a warning that high and potentially lethal levels of carbon monoxide are present. Never ignore this alarm, further exposure can be fatal. Immediately check residents for symptoms of carbon monoxide poisoning, and contact the proper authorities to resolve all CO problems.**

## NEVER IGNORE A LOW-LEVEL OR HIGH-LEVEL ALARM

Please carefully review these instructions to ensure that you know what actions to take in the event of both high and low-level alarms.

## What to do during a high-level alarm

- Open the doors and windows to ventilate.
- Turn off the appliance where possible and stop using the appliance.
- Silence the alarm by pressing the Test/Reset button.
- Evacuate the property leaving the doors and windows open.
- Ring your gas or other fuel supplier on their emergency number, keep the number in a prominent place.
- Do not re-enter the property until the alarm has stopped.
- Get medical help immediately for anyone


suffering the effects of carbon monoxide poisoning (headache, nausea), and advise that carbon monoxide poisoning is suspected.

- Do not use the appliance again until it has been checked by an expert. In the case of gas appliances this must be a GAS SAFE registered installer.

## What to do during a low-level warning

- Open all doors and windows to ventilate.
- Turn off all appliances that are potential sources of CO when possible, and stop using the appliance. These may include gas and wood-burning fireplaces, all gas appliances, and barbecues.
- Silence the alarm by pressing the Test/Reset button.
- Do not use the appliance again until it has been checked by a qualified service engineer. In the case of gas appliances this must be a GAS SAFE registered installer.
- Get medical help immediately for anyone suffering the effects of carbon monoxide poisoning (headache, nausea), and advise that carbon monoxide poisoning is suspected.

## Battery installation/replacement

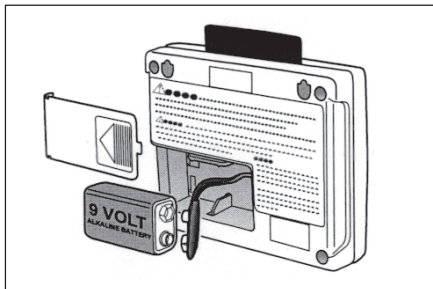

- If the detector is wall mounted then unhook it from the mounting screws.
- Remove the battery cover located on the back of the detector.
- Replace the battery with an approved 9 volt alkaline battery, making sure the battery terminals align properly with the

detector terminals and push the battery into place. Use of a battery other than the battery recommended by FireAngel Ltd can have a detrimental effect on the detector operation. Replace the battery cover and return the detector to the original position.

- When the battery is first inserted the detector will shortly emit a single beep and the LEDs will flash to indicate that the battery is properly connected.
- Your advanced FireAngel detector does not require a prolonged 'power-up' period. If you have followed all of the above steps correctly, your unit will begin monitoring for CO in 20 minutes. After the 20 minute warm-up period, the High-Level LED will flash once per minute to indicate that the detector is powered up and is monitoring for CO.
- Test the horn, battery and circuitry by pressing the Test/reset button to confirm that the detector is operating properly. The horn should sound as soon as the button is pressed, and the LEDs will flash indicating that the horn is working and the battery is providing power to the unit. This test for the horn, battery and circuitry should be performed on a weekly basis.

**WARNING: Prolonged exposure to the horn in close proximity will damage your hearing.**

When there is no battery in place, a red missing battery indicator will remind you to replace the battery. Under normal operating conditions, the battery should last one year.

The battery life in full alarm is 7 days. The detector will not protect against the risk of CO poisoning when the battery has drained.

**Caution:** Constant exposure to extreme high or low temperatures may reduce battery life.

## Maintaining/Testing your detector

### Maintenance

Your detector will alert you to potentially hazardous CO concentrations in your home when maintained properly. To maintain your Fireangel detector in proper working order,



and to ensure that your sensor will maintain its 5 year life, it is recommended that you:

- Test horn, battery and circuitry at least once per week.
- Test sensor once per month.
- Keep the detector free of dust by gently vacuuming the case with a soft brush attachment once per month.
- Never use cleaning solutions on your detector. Simply wipe with a slightly damp cloth.
- Do not paint the detector.
- Do not spray aerosols on or near the detector.
- Move the detector to a safe location and store in a plastic bag before painting, wall papering, using or performing any other activities that use materials that emit strong fumes. **WARNING:** Your alarm will not detect CO when it is stored in this way). Remember to remove it from the bag and replace the detector when these activities are finished.

## Technical information

*Detector specifications:* Model CO-808.

*Sensor Type:* Electrochemical.

*Sensor Life:* 5 years.

*Sensor range:* 10ppm-999ppm.

*Alarm Sound Level:* 85dB (at 3 metres/10ft).

*Recommended Batteries:* Duracell 9V Ultra, Duracell MN1604, Energizer 522, Energizer 9V Ultra+, Gold Peak 1604A.

*Battery Life:* Exceeds 1 year, replaceable.

## SECURITY

### Chassis number

Record the chassis number and the factory job number of your motorhome, and keep them in a safe place at home.

The chassis number is a 17 digit number, beginning with the letters VF3, and is found stamped on a plate visible through a window in the bottom left hand corner of the windscreen, and also on a plate under the bonnet attached to the bonnet closing crossmember. (This plate also contains the permissible weight data).

The factory job number is an alphanumeric code consisting of a letter followed by four numbers, and is found on a label inside the glove box.

### Motorhome Theft

The theft of a motorhome can occur in the most unlikely circumstances; from a motorway service area, even from an owner's driveway.

Secure all windows and doors when your motorhome is unoccupied even if only for a short length of time.

### Additional security

Consider fitting any device which might deter or prevent intrusion by thieves. A wheel lock prevents removal of the wheel.

Window etching of the chassis number is a cost effective deterrent.

### Free crime prevention

Advice about securing your motorhome, protecting your valuables, property marking, either at home or whilst on site, can be obtained from the Crime Prevention Officer through your local Police Station.







Please read and become familiar with operating instructions for equipment fitted in your motorhome.

Connection of services are dealt with under separate headings, Water, Electricity and Gas.

## WATER SYSTEMS

### Fresh/Waste Tanks

The fresh and waste water tanks are located under the floor near the middle of the vehicle. The drain taps for both tanks are clipped to the underside of the vehicle on the offside, with the waste drain being nearer to the rear of the vehicle.

For capacities of both see the Technical Specification Section.

The fresh water tank is filled through the lockable cap on the exterior of the vehicle. All pipe work is manufactured to food grade material specification.

### Breathers

Both tanks are fitted with breathers, which allow air displacement when filling. When filling the fresh water tank, water may escape through these breathers; this should give no cause for concern.

### Frost Precaution

If the vehicle is not being used during freezing conditions the water must be drained. Whilst the vehicle is being used in such conditions, and the water heater is at risk of freezing, it should be drained by opening the drain valve.

### FRESH WATER PUMP

A Whale submersible water pump is fitted in the freshwater tank of your vehicle. This is a compact, self venting, high flow pump which is quiet in operation and has a maximum flow rate of 15.8 litres per minute.


### Maintenance

The pump is a sealed unit so no maintenance is required other than a check as part of the annual habitation service.

Ensuring the water supply is free of debris when filling the tank will reduce the likelihood of pump clog.

### Winterising

To protect against damage as a result of freezing, drain the entire water system.

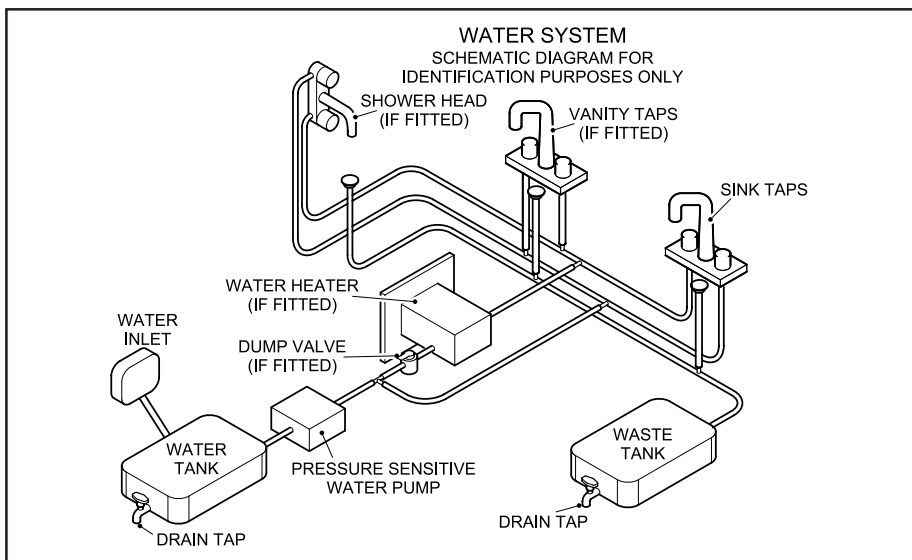

## GAS

### GENERAL INFORMATION

The gas appliances in this vehicle are powered by Liquefied Petroleum Gas (LPG) which is stored, under pressure, in a tank located under the floor in the centre of the vehicle. This tank is refilled, when required, at a re-fuelling station using a nozzle and hose in a similar way to refilling the engine fuel tank. Make sure that heating and cooking appliances are switched off before you move the motorhome.

### The regulator

Your motorhome is fitted with a regulator as standard equipment. The gas regulator has a working pressure of 30mbar and is suitable for use with all commercially available brands of LPG. It is fitted adjacent to the tank installation under the vehicle and requires no attention from the owner whilst using the vehicle.

### Availability

LPG is becoming more widely available as more vehicle engines are converted to run on it. Many garages now have an LPG pump and other outlets are available in more rural areas, often near farming communities for

instance. Look for signs advertising 'Autogas'.

If you have internet access, search for 'LPG filling stations' and there are many sites where input of your postcode will locate the nearest filling station to your location.


There are many companies producing LPG but all brands are suitable for use in your vehicle.

### LPG Re-fuelling

LPG re-fuelling is simple and efficient, carried out in much the same way as petrol and diesel with a hose and nozzle designed to lock onto the filling connector on the vehicle. The refuelling point is located behind a black plastic cover on the nearside of the vehicle behind the side door.

Once the connection is made, the customer simply presses and holds down a button on the dispenser until they have put the required amount of fuel into the vehicle or until the tank is full.


LPG tanks are fitted with a valve that stops the flow once the tank has reached its maximum safe filling level. Once the meter stops the customer simply disconnects the nozzle and returns it to the dispenser.

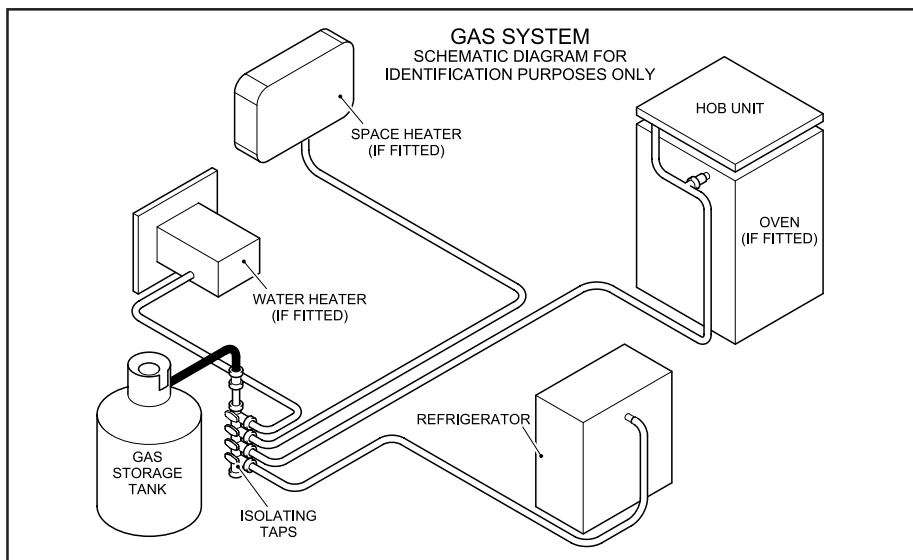

## Safety Note

- When pulling up to the Autogas dispenser ensure the vehicle is parked with the filling connector located nearest to the dispensing pump.
- Apply the handbrake and switch off the engine.
- No smoking, naked flames or mobile phones are allowed on the Service Station forecourt.
- The use of an adaptor is not recommended.
- Refilling of portable LPG cylinders is not allowed.
- All dispensing nozzles should be fitted with a nozzle shield. Please report to staff if missing.

## Filling Nozzles




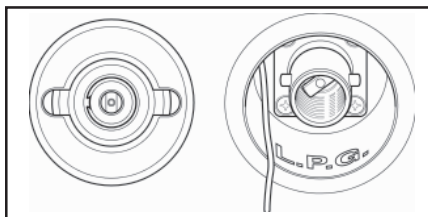


When connecting the nozzle to the filler valve on your vehicle always check that the locking pins are aligned.

There are two main types of filling nozzles used in the UK - 'Gas Guard' and 'De Visser'. Gas Guard uses a rotating barrel to lock on to the filler valve whereas De Visser uses a lever.

## 1 - Gas Guard nozzle filling instructions

Ensure Gas Guard nozzles are fitted with protective nozzle shields. Report to site staff if missing. (Nozzle shields have been removed from picture for clarity).

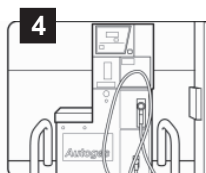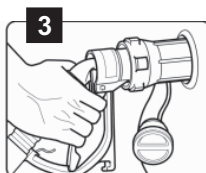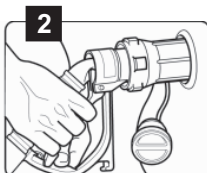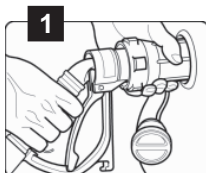

### Connecting

**(1)** Push nozzle over the lugs on the filler valve and turn barrel a quarter turn clockwise to lock. Do not squeeze lever before nozzle is connected.

**Caution:** From this moment onwards ensure hands are away from the nozzle barrel.

**(2)** Pull back lever and latch into place. Ensure lever is latched securely. Follow instructions on dispenser to commence dispensing.

### Disconnect


**(3)** Ensure hands are away from the nozzle barrel.

**Caution:** When dispensing has ended, squeeze back lever and release latch. Release lever fully. A small release of gas will occur as you release the lever. This is normal! Do not place hands on barrel until after the gas has been released.

**(4)** Turn barrel anti clockwise a quarter turn to release nozzle from vehicle. Replace nozzle in holder on dispenser.

## 1 - De Visser nozzle filling instructions

Ensure De Visser nozzles are fitted with protective nozzle shields. Report to site staff if missing. (Nozzle shields have been removed from picture for clarity).

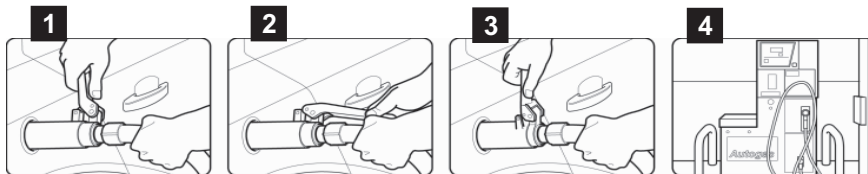

### Connecting

**(1)** Hold the hose behind the nozzle and the guard, keeping lever pushed forward with the handle at 12 o'clock position. Locate the nozzle over the lugs on the filler valve and turn the lever a quarter turn clockwise to lock.

**Caution:** From this moment onwards ensure hands are away from the nozzle barrel.

**(2)** Pull back lever towards hose and latch into place. Ensure lever is latched securely. Follow instructions on dispenser to commence dispensing.

### Disconnect

**(3)** Ensure hands are away from the nozzle barrel.

Hold hose behind guard and release lever by pushing forward. A small release of gas will occur as you release the lever. This is normal!

**(4)** Turn lever anti clockwise a quarter turn to release nozzle from vehicle. Replace nozzle in holder on dispenser.

## GAS SAFETY ADVICE

### Facts about LPG

- LPG is not poisonous.
- LPG has been given a smell by manufacturers in order to identify leaks.
- Bi-products of combustion are harmless.
- There is danger if all air and oxygen are excluded, therefore ventilation holes must be kept clear at all times.

### PRECAUTIONS

- Never look for a leak with a match. Always use a soap solution or its equivalent when testing connections. Do not operate any electrical apparatus whatsoever, especially light switches. If the leak is not obvious, the vehicle should be evacuated and qualified personnel consulted.
- Avoid naked lights when re-fuelling.
- LPG is more dense than air. Consequently any vapour may flow along the ground and into drains, sinking to the lowest level of the surroundings and be ignited at a considerable distance from the source of leakage. In still air the vapour will disperse slowly.

### MAINTENANCE

The bulk tank installation requires no attention other than a check at the annual habitation service, however, it should be noted that the bulk tank itself must be pressure tested by an approved test house every 10 years.

## VENTILATION

### General

Fixed ventilation is a statutory requirement in all motorhomes. These ventilation apertures are positioned at both high and low level and for your safety should not be obstructed, even partially.

### Low Level Ventilation

Under each appliance is a fixed ventilation aperture, of a size commensurate with the rating of the appliance itself. It is either gauze covered or incorporates a fixed plastic vent. This should be checked regularly to see that it has not become blocked.

### High Level Ventilation

High level ventilation is provided by the roof vents. The ventilation provided has been carefully calculated and relates to the rating of the appliances in the vehicle. Roof vents must not be covered with anything that may limit or affect the ventilation they provide.

### Maintenance

Under no circumstances should any fixed ventilation aperture be blocked, covered, either partially or fully, or be modified in any manner whatsoever. They should be checked at least annually for damage or blockage.

Screens and/or grilles should be kept clean and free from dust. See diagram of upper/lower ventilation.


All ventilation complies with BS EN 721 and vents should not be obstructed in any manner as this could lead to insufficient fresh air. In this case the confined atmosphere becomes depleted of oxygen which leads to the formation of the highly poisonous gas 'carbon monoxide'. Carbon Monoxide is odourless, colourless and tasteless and will rapidly cause unconsciousness and death with little or no warning prior to collapse. **THERE IS NO DANGER WHEN ADEQUATE VENTILATION IS PROVIDED.**

When you are cooking, it is essential to provide additional ventilation such as opening windows near grill, cooker or oven.

### Roof-mounted Flue installations

All flue installations should be inspected once a year throughout their length for corrosion. Flues should be replaced if any sign of perforation is found. Ensure that the replacement is of an approved type.

**WARNING: Never allow modification of LPG systems and appliances except by qualified persons.**

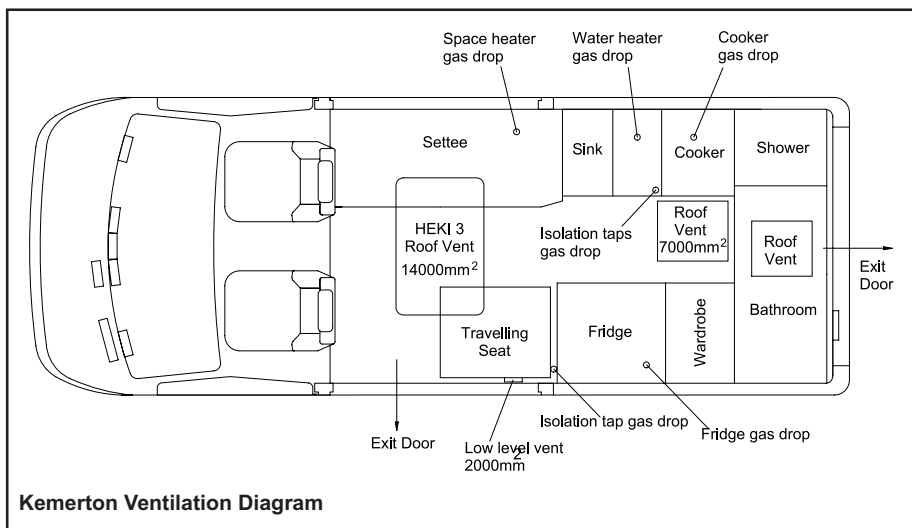



## Connection


Before turning on the gas supply, ensure that all gas operated equipment in the motorhome is turned off.

All gas equipment is supplied through a central Gas Manifold System which has individual isolation taps for each appliance denoted by a symbol (see below).

### WARNINGS:

- 1 Interior outlet sockets must only be used with original appliances supplied by manufacturer.**
- 2 No appliance must be used outside when connected to an internal socket.**
- 3 No additional appliance must be used inside the motorhome.**

Never use portable cooking or heating equipment other than electric heaters, that are not of the radiant type as they are a fire and asphyxiation hazard.

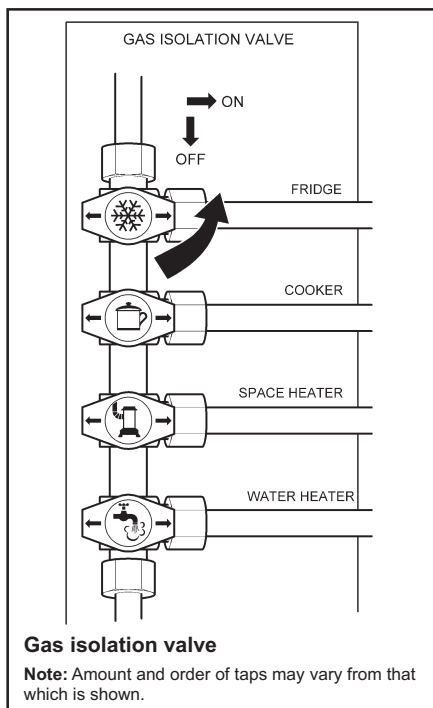

## Safe Usage

To avoid accidents, the following fundamental advice should be carefully read before using gas appliances.

- Always read and follow the use and maintenance instructions provided by the manufacturers of gas equipment. Should any soot accumulate on pans, fire radiants, etc., or any smell be produced, consult a competent installer on the correct maintenance and adjustment of burners.
- Never check for gas leaks with a naked flame.
- Never use gas appliances without adequate ventilation. All gas appliances require a plentiful supply of fresh air for correct operation. Fixed ventilators or air inlets should not be stopped up. Where practicable, turn off all appliances before retiring to bed, preferably at the cylinder or inlet to the motorhome or other dwelling.
- Unless the appliance incorporates automatic ignition, when lighting an appliance always make sure you apply a lighted match or taper to the burner before turning on the gas.
- If any appliance is disconnected for repair, maintenance, etc., ensure that the gas line is capped off.
- If taps are stiff to operate or appear to be a source of leakage, call in a competent installer to rectify. LPG taps require a special grease.
- Always seek advice when in doubt.

## Input Ratings

Input rating for the gas appliances are as follows:

Refrigerator .....	0.1kW
Heater .....	2.4kW
Grill .....	1.5kW
Water heater .....	1.5kW
Oven .....	1.5kW
Hob burners (x3) .....	1.5kW (each)

## ELECTRICITY

As with electricity in the home, care must be exercised when handling mains electricity.

Your attention is drawn to the following notice as laid down by the Institute of Electrical Engineers.

### INSTRUCTIONS FOR ELECTRICITY SUPPLY

#### On arrival at caravan site

The motorhome mains inlet flexible supply cable and its limits are shown on page 7-12.

1. Before connecting the motorhome installation to the mains supply, check that:
  - (a) the mains supply is suitable for your installation and appliances, i.e. whether it is a.c. or d.c. and whether it is at the correct voltage and frequency,
  - (b) your installation will be properly earthed. Never accept a supply from a socket outlet or plug having only two pins, or from a lighting outlet, and
  - (c) any residual current device (earth leakage circuit breaker) in the mains supply to the motorhome has been tested within the last month.

In case of doubt, consult the site owner or his agent.

#### 2. **MAKE SURE THAT THE SWITCH AT THE SITE SUPPLY POINT IS OFF.**

3. Lift the cover of the electricity inlet provided on the motorhome, and insert the connector of the supply flexible cable.
4. Remove any cover from the socket outlet provided at the site supply point, and connect the plug at the other end of the supply flexible cable to this. Switch on the main switch at the site supply point.

**Note:** Use mains cable fully uncoiled and protect from traffic.

**Caution:** Be aware that the 12V appliances, except the refrigerator, will not operate whilst the ignition is switched on and the vehicle engine running. The master switch on the electrical control panel controls the 12 volt supply.

**IT IS IMPORTANT THAT THE MAIN SWITCH AT THE SITE SUPPLY POINT SHOULD BE SWITCHED OFF, THE SUPPLY FLEXIBLE CABLE DISCONNECTED, AND ANY COVER REPLACED ON THE SOCKET OUTLET AT THE SITE SUPPLY POINT BEFORE DISCONNECTING THE FLEXIBLE CABLE FROM THE MOTORHOME. IT IS DANGEROUS TO LEAVE THE SUPPLY SOCKET OR SUPPLY FLEXIBLE CABLE LIVE.**

**Note:** Please check appliance manufacturers handbook to see if suitable for use with generator or charger.

A generator may only be connected via the mains socket. If using a generator you also need to comply with the requirements/ instructions supplied with the generator.

Because motorhomes are sometimes left unused for long periods in the open, it is strongly advised that the mains installation is inspected periodically to ensure that it is safe to use. The IEE Wiring Regulations recommend that mains installations in motorhomes are re-inspected every 3 years by a qualified person (see list) who should sign and issue a periodic inspection report. (The manufacturer recommends annual inspections).

Suitably qualified persons acceptable to the NCC to sign and issue inspection and completion certificates are:

- an approved contractor of the National Inspection Council for Electrical Installation Contracting\* or
- a member of the Electrical Contractors' Association
- a member of the Electrical Contractors' Association of Scotland
- a qualified person acting on behalf of the above (in which event it should be stated for whom he is acting).



*\*The names and addresses of Approved Contractors in any locality (there are over 10,500 in the UK) can be obtained from Electricity Shops, or direct from:*

## NICEIC

Vintage House, 37 Albert Embankment,  
London SE1 7UJ  
Telephone: 0171 582 7746

*The names and addresses of members of the Electrical Contractors' Associations can be obtained direct from:*

## ECA

Esca House  
Palace Court  
London W2 4HY  
Telephone: 0171 229 1266

ECA of Scotland  
23 Heriot Row  
Edinburgh EH3 6EW

Telephone: 0131 225 7221

**WARNING: Current consumption in the motorhome must not exceed 16 amps or the pitch permitted maximum if this is less than 16 amps.**

**It is dangerous to attempt modifications and additions yourself. Never allow modification of electrical systems and appliances except by qualified persons. Lampholder-plugs (bayonet-cap adaptors) should not in any circumstances be used.**

**CAUTION:** Electrical heaters have the potential to draw 8 amps at 2kW. It is, therefore, advisable to check the supply rating before switching on two loads (items) greater than the supply as this may cause an overload and the circuit breaker to trip.

## OVERSEAS CONNECTION

**Note:** Connection to a mains voltage supply OVERSEAS requires particular attention.

Care must be taken when connecting supplies abroad since the supplies can be of REVERSE POLARITY.


The significance of REVERSE POLARITY is that when equipment is switched off it may not be electrically isolated.

The only certain way of making equipment safe is to unplug it.

If electrical polarity indication is not included in your motorhome electrical equipment, it is useful to have a means of checking polarity of the mains supply, especially when touring overseas. There are available several proprietary makes of equipment for testing polarity.

If it can be achieved, it is preferable to connect live to live, and neutral to neutral to maintain full electrical protection.



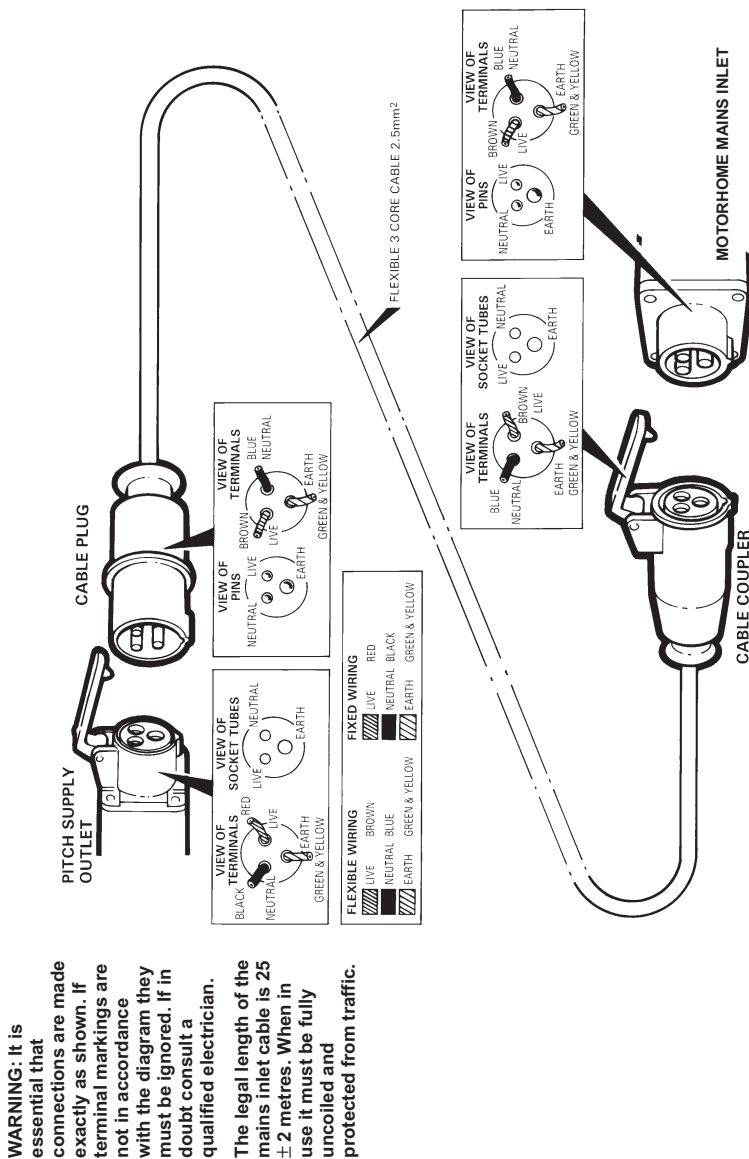

## WIRING OF CONNECTING CABLE AND MOTORHOME MAINS INLET



## EC155 POWER CONTROL SYSTEM

## Key features


150W (~12A) combined Power Converter/  
Battery Charger - Converts the 230v mains  
supply into 12V DC power to run the leisure  
equipment and charge the battery.

Low current switching voltage drop in the circuit and improved circuit fusing provides better protection for the harness and equipment.


Links to the EC50 series LED control panel to provide simple but intelligent control of the 12V equipment and built in over discharge software protects the leisure and vehicle batteries.

## System overview

The following diagram shows the typical configuration of the EC155 system. The key component is the EC155 power supply unit (PSU), which is the hub of the system and provides connectivity to the ancillary components and the EC50 series control panel.

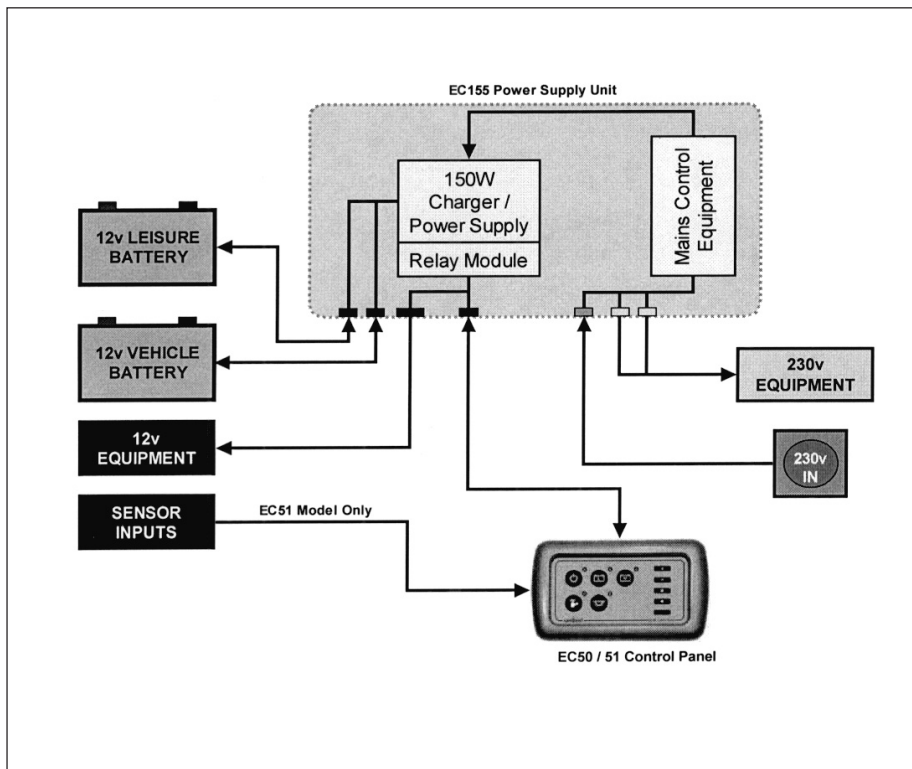

## POWER DISTRIBUTION UNIT (EC155)

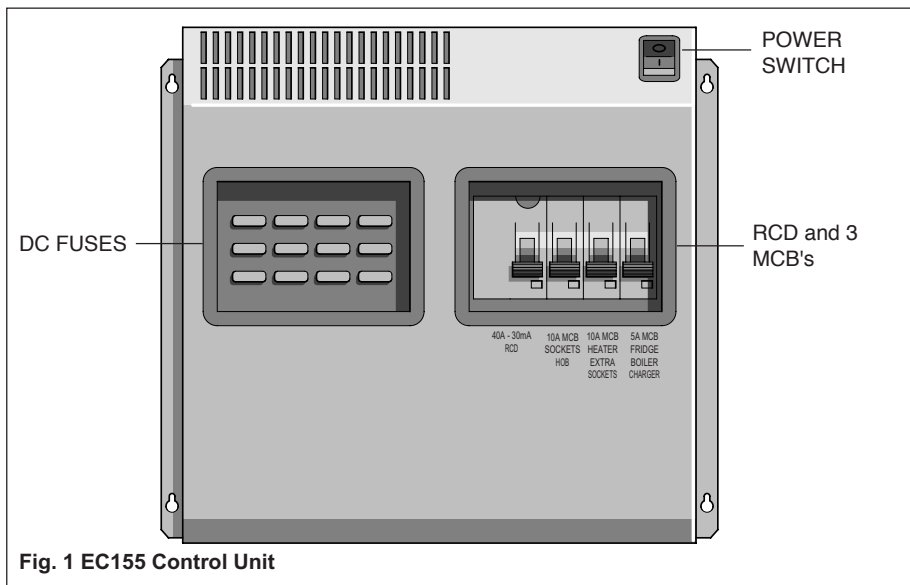

**Fig. 1 EC155 Control Unit**

### Power supply details

For the safe operation of all electrical equipment within your leisure vehicle it is important that you read and fully understand these instructions. If you are unsure of any point please contact your dealer/distributor for advice before use.

Fig. 1 shows the EC155 PSU layout.

### WARNING

**Under heavy loads the EC155 PSU case may become hot. ALWAYS ensure the ventilation slots and the cooling fan have a clear flow of air. Do not place combustible materials against/adjacent to the EC155 PSU. The PSU will shutdown if overheated and will restart automatically when cool.**


### Battery charger/power converter

The EC155 PSU incorporates a fixed voltage battery charger/power converter. The battery charger/power converter also powers the leisure equipment when the mains supply is connected. This module supplies 13.8V DC to the leisure equipment up to a maximum of

12 amps (155 watts), therefore the available power is distributed between the leisure load and the battery, with the leisure load taking priority as per the following example:

Leisure load	Available power for battery charging
3A	9 Amps
6A	6 Amps
9A	3 Amps
12A	0 Amps

### Residual Current Device and Miniature Circuit Breakers

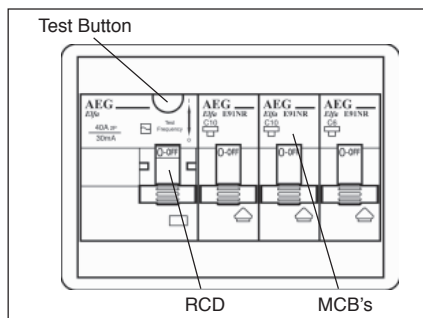



The Residual Current Device (RCD) is basically provided to protect the user from lethal electric shock. The RCD will turn off (trip) if the current flowing in the live conductor does not fully return down the neutral conductor, i.e. some current is passing through a person down to earth or through a faulty appliance.

To ensure the RCD is working correctly, the test button should be operated each time the vehicle is connected to the mains supply (see page 7-20).

The Miniature Circuit Breakers (MCB's) operate in a similar way to traditional fuses and are provided to protect the wiring installation from overload or short circuit. If an overload occurs the MCB will switch off the supply. If this occurs you should investigate the cause of the fault before switching the MCB back on.

The following table shows the rating and circuit allocation for the three MCB's.

MCB	Rating
1	10 Amps
2	10 Amps
3	6 Amps

## Fuses

### WARNING

**When replacing fuses always replace a fuse with the correct value. NEVER replace with a higher value/rating as this could damage the wiring harness. If a replacement fuse 'blows' do not keep replacing the fuse as you could damage the wiring harness. Please investigate the fault and contact your dealer.**

The following table shows the fuse allocation for the 12 fuses fitted to the EC155 PSU.

### FUSE/MCB TABLE

Fuse	Rating
1	15 Amps
2	10 Amps
3	5 Amps
4	10 Amps
5	10 Amps
6	10 Amps
7	10 Amps
8	5 Amps
9	20 Amps
10	20 Amps
11	10 Amps
12	15 Amps
Battery	20 Amps



## BATTERY

### Type/Selection

For optimum performance and safety it is essential that only a proprietary brand 'leisure' battery is used with a typical capacity of 75 to 120 Ah (ampere/hours). A normal car battery is NOT suitable. This battery should always be connected when the system is in use.

The EC155 PSU is designed to charge standard lead acid 'leisure' batteries, however it may be used with Gel batteries depending on their composition. Please consult the battery documentation for further advice.

The battery feed is fitted with an inline fuse between the battery and the electrical harness, and is usually located immediately outside the battery compartment or within 500mm of the battery. The maximum rating of this fuse is 20A per battery.

### Installation & Removal

Always disconnect the 230V mains supply and turn the EC155 PSU charger switch to the OFF (0) position before removing or installing the battery.

When connecting the battery, ensure that the correct polarity is observed (black is negative [-] and red is positive [+]) and that the terminals are securely fastened. Crocodile clips must be used.

## WARNING

**Explosive gases may be present at the battery. Take care to prevent flames and sparks in the vicinity of the battery and do not smoke.**

### Operation/Servicing

Under normal circumstances it should not be necessary to remove the battery other than for routine inspection of the terminals and "topping up" of the battery fluid where applicable. Please see instructions supplied with the battery.

**Note:** Do not over-discharge the battery. One of the most common causes of battery failure is when the battery is discharged below the recommended level of approximately 10V.

Discharging a battery below this figure can cause permanent damage to one or more of the cells within the battery.

To prevent over discharge, the EC155 PSU in conjunction with the EC50 series control panel incorporates a battery protect circuit that warns and then disconnects the batteries when they fall below the following conditions:

Vehicle battery voltage cut off point: 10.9V.

Action after cut off: Battery selection is changed from vehicle battery to leisure battery. If the leisure battery is below 9V then a further warning will occur (see following).

Notes: This cut off level is designed to protect the vehicle battery from over discharge. The 10.9V level ensures there is sufficient power in the battery to run the vehicle electronics and start the vehicle. This cut off only applies to power drawn from the battery by the leisure equipment; it will not protect the battery if you leave the vehicle lights on.


Leisure battery cut off point: 9V.

Action after cut off: Power is turned off.




Notes: This is an emergency cut off level to protect the battery from severe damage. You should not rely on this cut off level during normal operation, but manage your power consumption to a discharge level of 10V.

This cut off only applies to power drawn from the battery by the leisure equipment that is controlled by the control panel power switch; it will not protect the battery from discharge by the radio or other permanently connected equipment.




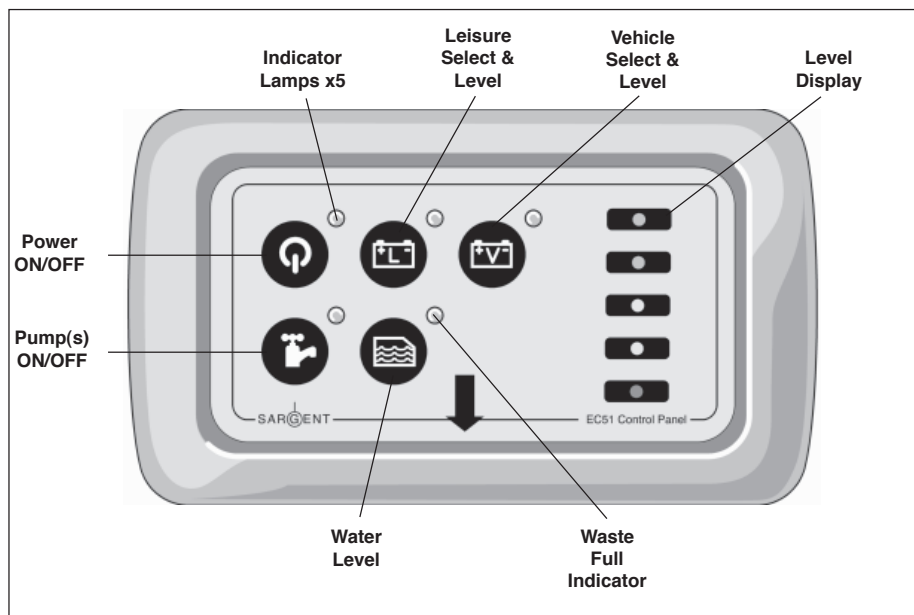
## EC51 CONTROL PANEL



## EC51 operation

Symbol	Function	Description
	Main 12V power switch	This switch turns on (or off) the 12-volt power. As the power is turned on the leisure battery is automatically selected and the LED display shows the battery voltage.
	Water pump power switch	This switch turns on the power to the internal water pump ready for use. It can be used to turn off the pump overnight to avoid any noise from the pump. When the switch is on, the LED will show green.
	Auxiliary power switch	This switch turns the Awning or Entry light on (or off). When the switch is on the LED will show green.

## EC51 operation (continued)

Symbol	Function	Description
	Select LEISURE battery and display battery voltage.	<p>This switch is used to selected the Leisure battery and to display the battery voltage level. Press once to select and display the voltage. This display will turn off automatically after two seconds.</p> <p>The LED next to the button will show that the battery has been selected.</p> <p>If the Leisure battery drops below 9V an alarm will trigger to warn you that the battery is low. This alarm lasts for one minute and then the power will be switched off to protect the battery.</p>
	Select VEHICLE battery and display battery voltage.	<p>This switch is used to select the Vehicle battery and to display the battery voltage level. Press once to select and display the voltage. This display will turn off automatically after two seconds.</p> <p>the LED next to the button will show that the battery has been selected.</p> <p>If the Vehicle battery drops below 10.9V an alarm will trigger to warn you that the battery is low. This alarm lasts for one minute and then the battery selection will automatically switch over to the Leisure battery to protect the vehicle battery.</p>
	Water Level test.	<p>This switch is used to display the fresh water level within the onboard water tank. Press once to select the Fresh tank and show the water level. The tank has five levels Empty, 1/4, 1/2, 3/4 and Full. This display will turn off automatically after two seconds.</p>
	Waste Full indicator.	<p>The LED adjacent to the water level button is used to show when the Waste Water Tank is full. The tank is full when the LED is illuminated.</p>

**Note:** The middle of the five lights of the level display will flash while the engine is running. This is to show that the system is functioning correctly, and is supplying power to the fridge and to charge the leisure battery.



## System Disable

To meet EMC (Electro Magnetic Compatability) directive 89/336/EEC the EC50 series control panel will shutdown, and the electrical accessories within the vehicle will be disconnected while the vehicle is in motion. When the engine is stopped the control panel returns to standby mode ready to be turned on by the power button.

This does not apply to the fridge, which will continue to operate while the vehicle is in motion provided that 12V is selected on the fridge energy selection control.

## Bar Graph technical data

LED	Voltage reading	Water reading
5	13.5-14.4	100% full
4	12.5-13.5	75% full
3	11.5-12.5	50% full
2	10.5-11.5	25% full
1	<= 10.5	Less than 25%

## Operational and Safety Information

### Mains connection

For your safety it is IMPORTANT that you follow these connection instructions each time your Motorhome is connected to a mains supply.

#### 1. Ensure suitability of the Mains Supply.

Your Leisure Vehicle should only be connected to an approved supply that meets the requirement of BS7671. In most cases the site warden will hold information regarding suitability of supply. If using a generator you also need to comply with the requirements/instructions supplied with the generator.

#### 2. Switch the EC225 PSU internal Charger unit OFF.

Locate the red power switch on the EC155 and ensure the switch is in the OFF (0) position before connection to the mains supply.

#### 3. Connect the Hook-up Lead.

Firstly connect the supplied hook-up (orange cable with blue connectors) to the Leisure Vehicle and then connect to the mains supply.

#### 4. Check Residual Current Device operation.

Locate the RCD within the EC155 PSU and ensure the RCD is switched on (lever in up position). Press the 'TEST' button and confirm that the RCD is

turned off (lever in down position). Switch the RCD back to the on position (lever in up position). If the test button failed to operate the RCD see the TROUBLE SHOOTING section.

- 5. Check correct Polarity.** Locate the 'Reverse Polarity' indicator on the EC155 PSU and ensure that the indicator is NOT illuminated. If the indicator is illuminated see the TROUBLE SHOOTING section.
- 6. Check Miniature Circuit Breakers.** Locate the MCB's within the EC155 PSU (adjacent to the RCD) and ensure they are all in the ON (up) position. If any MCB's fail to latch in the on position see the TROUBLE SHOOTING section.
- 7. Turn the EC155 PSU ON.** Locate the red power switch on the EC155 PSU and turn to the ON (I) position. The switch will illuminate when turned on.
- 8. Check operation of equipment.** It is now safe to check the operation of the 12V and 230V equipment.

## Technical data

Input 230V: 230 Volts/0 to 12 Amps (+ / - 10%).

Output 230V: RCD protected, 3 x MCB outputs of 10, 10 and 6A via 2 x 9 way connectors.

Input12V: 2 x 20A battery inputs via a single 9 way connector.

Output 12V: 20A total output via 4 x 16A switched channels protected by 12 fused outputs via a 12 way connector.

Integrated Charger: Input 220-230 volts AC +/- 19%, Frequency 50 Hz +/- 6%, Current 3A max.

DC output 13.8 Volts nominal, Current 12 Amps (155 Watts).

Signal Input: 1 x Engine running via PSU connector (4 x Fresh water level, 1 x Waste water level on EC51 version).  
Fresh water negative sensed. Waste waster 5V sensed.

Data In/Out: Data communication and power to Control Panel via 8 way RJ45 connector.

IP rating: IP31.

Operating temperature: Ambient 0 to 35 deg Centigrade. PSU case temperature with full load 65 deg Max.

Automatic shutdown and restart if overheated/overloaded.






## COMMON FAULT TABLE

Fault	Possible Cause	Proposed Fix
<b>No 230 volt output from PSU.</b>	Connecting lead between the site and Leisure Vehicle not connected.	Check and connect lead as per page 7-18, note 3. Check also input connector at the base of the ED155 PSU.
	RCD switched off.	Reset RCD as per page 7-18, note 4.
	RCD not operating correctly.	Check supply polarity; if the RCD continues to fail contact your dealer, as there is probably an equipment or wiring fault.
	MCB switched off.	Reset MCB by switching OFF (down position) then back ON (up position), if the MCB continues to fail contact your dealer, as there is probably an equipment or wiring fault.
	No or deficient supply from site.	Contact site warden for assistance.
	Other fault.	Contact your dealer.
<b>Control Panel Problems.</b>	Control Panel has no display.	Check batteries and fuses, turn EC155 PSU charger switch on, and ensure mains supply is connected.
		Check control panel connecting lead at EC155 PSU and behind Control Panel.
		Contact your Dealer.
	12V Power turns off.	Battery save feature has operated to protect the vehicle battery and or the Leisure battery. See page 7-15.
		Engine has been started, all equipment has been disconnected to meet EMC requirements. See page 7-18.
		Observe control panel handling instructions.
	Control Panel display corrupt/erratic function.	Control panel software may have crashed. Reboot control panel by turning off the EC155 PSU charger switch and removing fuses 9 and 10 at the EC155 PSU (2x20A fuses for leisure and vehicle batteries). Wait 30 seconds then replace the fuses and turn the charger switch on. (Alternatively, remove the bezel at the control panel by pulling down in the centre at the bottom, unplug the control panel multi-way connector, wait 30 seconds, then plug back in and reassemble.
<b>No 12 volt output from PSU</b>	No 230V supply.	Check all above.
	Charger not switched on.	Switch charger switch on (I) position, switch will illuminate.
	Battery not connected and /or charged.	Install charged battery as per page 7-15.
	Power switch on control panel not switched to ON.	Turn power on at control panel.
	Battery flat/Battery fuse blown.	Recharge battery, check fuses, check voltage is present at battery.
	Fuse blown.	Check all fuses are intact and the correct value fuse is installed as per fuse table.
	Equipment switched off/unplugged.	Check equipment is switched on and connected to the 12V supply.
	PSU overheated/auto shutdown operated.	Reduce load on system. Allow PSU to cool down. PSU will automatically restart when cool. See page 7-13.
	Other fault.	Contact your dealer.
<b>Pump not working.</b>	Fuse blown.	Replace fuse.
	Pump turned off.	Turn pump on by pressing the pump button at the EC155 control panel (tap symbol).



## 12V/230V WIRING DIAGRAM

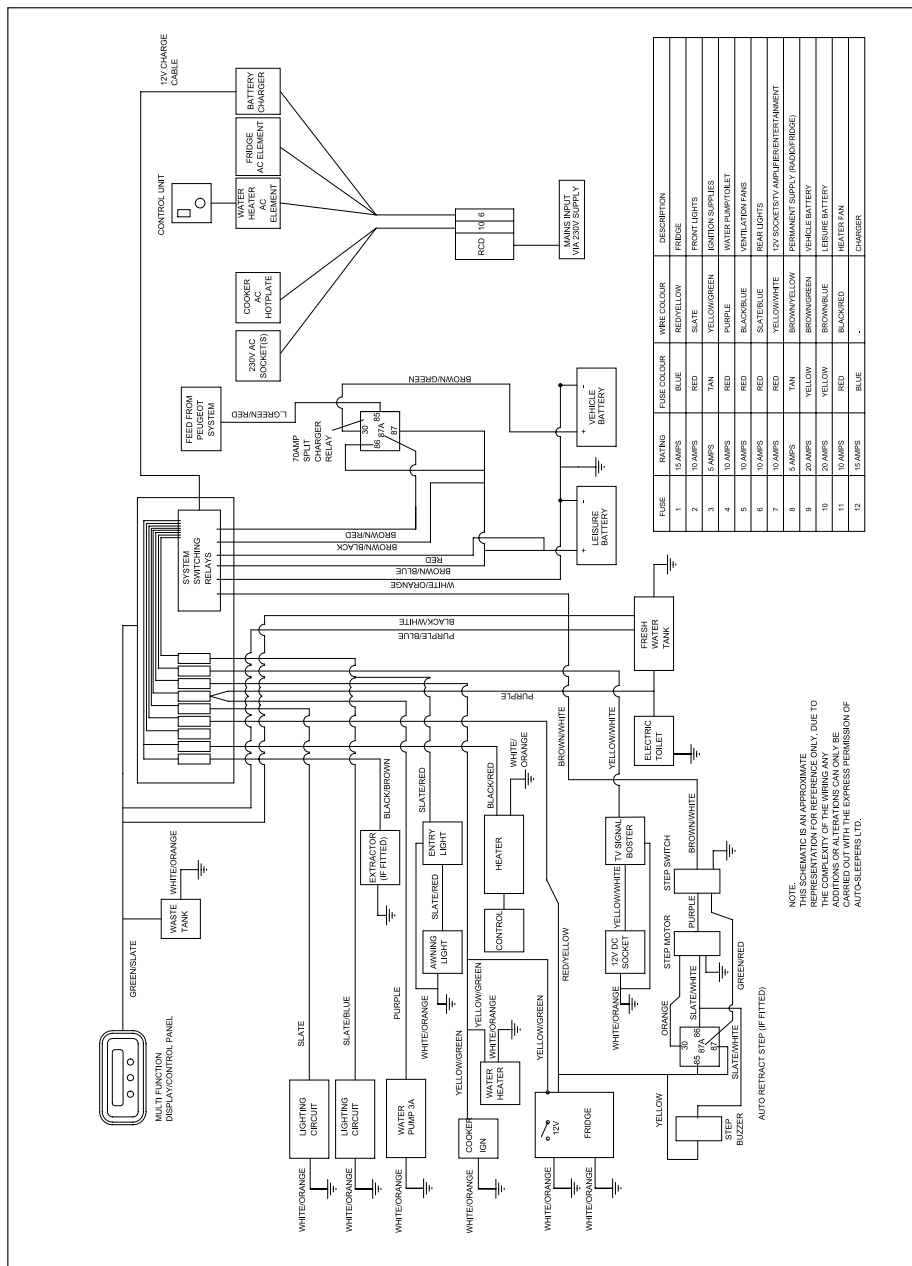



## TECHNICAL DATA

### Base Vehicle Data

For all matters relating to the base vehicle, and particularly tyre pressures, refer to the base vehicle instruction book or if in doubt consult your local base vehicle commercial dealer.

### Weights, Dimensions and Capacities

Before using your Auto-Sleeper you should be fully conversant with all matters relating to weights. The following definitions should be fully understood and then related to the tabulated base vehicle weight data.

### Weights

Details of vehicle weights are found below, and are presented in the manner prescribed in the European Standard EN1646-2 for Payloads. All weights are in kilograms (kg).

Take care to ensure that heavy loads are stored low down in bed boxes and low cupboards, and distribute weight evenly side to side as far as possible.

*Note 1:* Please take care to ensure that you have allowed for the masses of all items you intend to carry in the motor caravan, e.g. passengers, optional equipment, essential habitation equipment and personal effects such as clothing, food, pets, bicycles, sailboards, sports equipment, etc.

*Note 2:* Warning - Under no circumstances should the maximum technically permissible laden mass of this motor caravan, or its individual axles, be exceeded.

## DEFINITIONS

### Maximum Technically Permissible Laden Mass (MTPLM)

The Maximum Technically Permissible Laden Mass is a figure given by the manufacturer of the base vehicle. It is the combined maximum permitted weight of the vehicle and all of its contents, both inside and out. The MTPLM is unaffected by the Auto-Sleeper conversion.

### Mass in Running Order (MRO)

The Mass in Running Order is defined as the mass of the standard converted vehicle with bodywork including the following:

- Coolants (oil and water)
- 90% of automotive fuel
- Spare wheel
- Crockery
- Washer fluid
- Tools
- Driver (at 75 kg, 11st 12lb)
- Fire extinguisher

All other optional equipment whether on the base vehicle or part of the conversion is excluded from the mass in running order.

### Mass of the User Payload

The Mass of the User Payload is the difference between the MPTLM and the MRO. It is the motor caravans carrying capacity for everything placed in or on the vehicle, including the passengers. Please note that a driver (at 75kg, 11st 12lb) is included in the MRO. Everything listed in *italics* below must be subtracted from the payload.

### Mass of the Conventional Load

The Conventional Load is the mass of the passengers carried and must be subtracted from the payload. The "EC standard person" weighs 75kg (11st 12lb). The user should adjust the figure according to the mass and number of passengers carried. Motorhome Manufacturers designate passenger seats as being suitable for travelling, and provide seat belts accordingly. Multiplying the weight of the passengers by the number of passengers gives the Conventional Load. Please note that a driver (at 75kg, 11st 12lb) is included in the MRO.



## ***Essential Habitation Equipment***

For the purpose of EN1646-2, the mass of the Essential Habitation Equipment includes the mass of the following:

- the LPG cylinders, 90% full.
- the freshwater tank, 90% full.
- the water heater system, full.
- the waste water tank, empty.
- the toilet system flushing tank, full.
- the toilet system holding tank, empty.

All of these must be subtracted from the user payload.

Auto-Sleepers include the low voltage (230V) connection cable and the second battery in the mass in running order.

## ***Options, Personal Effects and Accessories***

When options, personal effects and accessories are fitted or carried the mass must be subtracted from the user payload. All optional equipment whether on the base vehicle or part of the conversion is excluded from the mass in running order. Personal effects are any items of any description carried by the vehicle.

To determine accurately if a vehicle is exceeding one of its maximum technically permissible laden masses, the vehicle with all of its load (that is passengers, contents, luggage and external load) should be weighed on a weighbridge.

You may wish to allocate the user payload to suit your own use. For example, to increase the available payload, the water system may be emptied. If the vehicle is not being used for camping the gas bottles can be left at home to increase the mass available for other items.

## **Gross Train Mass (GTM)**

If you are towing a trailer with your Auto-Sleeper, the Gross Train Weight is the maximum allowable weight of the towing vehicle, the trailer and the mass of every item carried. The GTM is given by the base vehicle manufacturer and is unaffected by the Auto-Sleeper conversion. Please check your driving licence to ensure you are allowed to drive a vehicle combination at this weight.

## **Maximum Braked Trailer Mass (MBTM)**

This is the maximum allowable weight of the trailer together with its load, provided the trailer has a braking system, which complies with the local Construction and Use Regulations. The MBTM is given by the base vehicle manufacturer and is unaffected by the Auto-Sleeper conversion.

## **MTPLM of the Axles**

The individual axles also have MTPLM's. The sum of the two axle MTPLM's usually exceeds the overall vehicle MTPLM, but this does not mean you can load each axle to its maximum, because doing so would exceed the overall MTPLM of the whole vehicle.

**WEIGHT AND DIMENSION DATA****WEIGHT DATA TABLE****All weights in kg**

<b>KEMERTON</b>	<b>2.2 Hdi</b>	<b>3.0 Hdi</b>
Vehicle Designation	335 L2	335 L2
MTPLM	3500	3500
Mass in Running Order	2890	2940
Mass of the User Payload	610	560
Designated Passenger Seats (excluding driver)	2	2
Conventional Load @ 75kg per person)	150	150
Essential Habitation Equipment	103	103
Personal Effects (standard minimum figure)	90	90
Remainder for Personal Effects / Options / Accessories	267	217
Optional Omni Vent	2	2
Gross Train Mass	6000	6000
MBTM	2500	2500

**Axle Weights**

Front, in Running Order	1575	1625
Rear, in Running Order	1315	1315
MTPLM Front	1850	1850
MTPLM Rear	2000	2000

**WEIGHT AND DIMENSION DATA (continued)****DIMENSIONAL DATA****All dimensions in mm****MODEL****KEMERTON**

Base Vehicle Manufacturer

Peugeot

Base Vehicle Model

335 L2

Wheelbase

3450

**METRIC DIMENSIONS**

Overall Length

5998

Overall Width (mirrors extended)

2508

Overall Width (mirrors folded)

2260

Overall Height

2600

Internal Height (maximum)

1890

Internal Height (minimum)

1860

Double Bed (transverse)

1800 x 1470

Single Bed (nearside)

n/a

Single Bed (offside)

n/a

Overcab Bed

n/a

Fresh Water Tank Capacity (litres)

69

Waste Water Tank Capacity (litres)

40

Gas, Refillable Tank, LPG

25 Litres


## IMPORTANT

To maximise the usage of fitted equipment in your motorhome it is essential that any accompanying manufacturers' literature is read fully. All recommended maintenance and preparation procedures should be followed. The information provided in this manual is only intended as a guide. If in any doubt consult your manufacturer appointed dealer, particularly before attempting to install extra equipment.

In the interests of safety, replacement parts for an appliance shall conform to the appliance manufacturer's specifications and should be fitted by him or his authorised agent.

## MICROWAVE

**Model: Daewoo KOR6L1B**

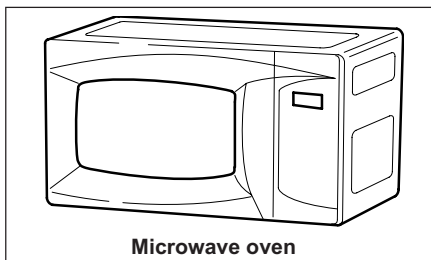

**Microwave oven**

Features:

- Oven volume in Litres: 20.
- Ten power steps.
- Maximum Wattage: 700.
- Turntable.
- Electronic time control.
- Touch control.

*Separate operating instructions are supplied with this equipment.*

## BARBECUE GAS POINT

An external gas point is located on the nearside of the van behind a lockable flap. The Reich unit has a tap to enable the gas supply to be cut off prior to connection or disconnection of an external gas appliance.

## SPINFLO TRIPLEX COMBINATION OVEN

### BURNER OPERATION

The burners on this appliance have fixed aeration and no adjustment is required. The burners should flame as follows:

**Propane** - The flames should burn quietly with a blue/green colour with no sign of yellow tips.

**Butane** - Normally on initial lighting, a small amount of yellow tipping will occur and then slightly increases as the burner heats up.

**IMPORTANT** - The right hand control knob operates both the Grill and Oven burners. To ensure safe operation it is not possible to operate both burners at the same time.

### Cautions:

- The two in line hob burners will support pans from 10 to 20cm. The single hob burner will support pans from 10 to 22cm. Care should be taken not to overload the appliance as reduced performance may result.
- When using small pans the flames should not spread beyond the base of the pan as this will reduce the efficiency of the burner. In the event of the burner flame being accidentally extinguished, turn off the burner control and do not attempt to re-ignite the burner for at least one minute.
- Avoid old or mis-shapen pans as these may cause instability.
- The lid must be opened fully prior to using the hotplate burners.

### Using the hotplate gas burners

1. Ensure gas cylinder/supply is connected and turned on. In the event of a gas smell turn off at gas cylinder/mains and contact supplier.
2. Flame supervision: Each burner is controlled individually and is monitored by a thermocouple probe.



3. To light: Push in the control knob and turn anti-clockwise until the large flame symbol is in the vertical position, adjacent to the circle mark. Hold a lit match or taper to the burner and push the control knob in and hold. It is necessary to hold the knob depressed after the burner has ignited for approximately 10-15 seconds, to allow the thermocouple probe to reach temperature, before releasing the knob. Should the flame go out when the knob is released, the procedure should be repeated holding the knob depressed for slightly longer.
4. For models fitted with spark ignition the procedure is similar except that the burner can be ignited by depressing the ignition button, which is located on the fascia. If the burner has not lit within 15 seconds the control knob should be released and the burner left for at least one minute before a further attempt to ignite the burner is made.
5. For simmering, turn the knob further anti-clockwise so that the small flame symbol is adjacent to the mark.
6. To turn off: Turn the control knob clockwise as far as possible. Always make sure the control knob is in the off position when you have finished using the hotplate burners.

### WARNINGS

- **Glass lids may shatter when heated. Turn off all burners before shutting the lid.**
- **Spillage on the surface of the lid should be removed before opening the lid.**





## USING THE GRILL

### WARNINGS

- The grill **MUST** only be used with the door open.
- The heat deflector below the fascia should be pulled out prior to lighting the grill. Never adjust the heat deflector position without using hand protection - i.e. oven gloves.

### Important

- The grill pan supplied is multi functional, for use in grill or oven.
  - The handle design allows removal or insertion whilst the pan is in use.
  - Always remove the handle when the pan is in use.
  - The grill **MUST** only be used with the door open.
1. Ensure gas cylinder/supply is connected and turned on. In the event of a gas smell turn off at gas cylinder/mains and contact supplier.
  2. To light: Open door, push in the control knob and turn clockwise as far as possible. Hold a lighted match or taper to the burner and push the control knob in and hold. The burner should ignite and the control knob should be held in for 10-15 seconds before release. If the burner goes out, repeat procedure, holding control knob for slightly longer.
  3. For models fitted with spark ignition the procedure is similar except that the burner can be ignited by depressing the ignition button, which is located on the fascia. Ignition must be carried out with the door open, and if the burner has not lit within 15 seconds the control knob should be released and the grill left for at least 1 minute before a further attempt to ignite the burner.
  4. On first use of the grill, it should be heated for about 20 minutes to eliminate any residual factory lubricants that might impart unpleasant smells to the food being cooked. A non-toxic smoke may occur when using for the first time so open any windows and turn on

mechanical ventilators to help remove the smoke.

5. Although the grill does heat up quickly, it is recommended that a few minutes preheat be allowed.
6. Flame Failure Device (FFD): the grill burner is fitted with a flame sensing probe, which will automatically cut off the gas supply in the event of the flame going out. In the event of the burner flames being accidentally extinguished, turn off the burner control and do not attempt to re-ignite the burner for at least one minute.
7. It is normal for the flames on this burner to develop yellow tips as it heats up, particularly on butane.
8. A reversible grill pan trivet enables the correct grilling height to be achieved. Grilling should be carried out on the middle shelf position.  
  
Fast Toasting ..... trivet in high position  
Grilling Sausages ..... trivet in high position  
Grilling Steak/Bacon ..... trivet in high position  
Grilling Chops, etc ..... trivet in low position  
Slow Grilling ..... trivet removed
9. To turn off: Turn the control knob anti-clockwise to the vertical position. Always make sure the control knob is in the off position when you have finished grilling.

**Caution:** The grill must only be used with the door open.



## USING THE OVEN

1. Ensure gas cylinder/supply is connected and turned on. In the event of a gas smell turn off at gas cylinder/mains and contact supplier.
2. ***To light:*** Open door, push in the control knob and turn anti-clockwise to full rate (gas mark 9). Hold a lighted match or taper to the burner and push the control knob in and hold. The burner should ignite and the control knob should be held in for 10-15 seconds before release. If the burner goes out, repeat procedure holding control knob for slightly longer.
3. For models fitted with spark ignition the procedure is similar except that the burner can be ignited by depressing the ignition button, which is located on the fascia. Ignition must be carried out with the door open, and if the burner has not lit within 15 seconds the control knob should be released and the oven left for at least 1 minute before a further attempt to ignite the burner.
4. Place the oven shelf in the required position and close the door. Set control knob to approximately gas mark 5 and heat the oven door for about 30 minutes to eliminate any residual factory lubricants that might impart unpleasant smells to the meals being cooked. A non-toxic smoke may occur when using for the first time so open any windows and turn on mechanical ventilators to help remove the smoke.
5. Although the oven does heat up quickly, it is recommended that a 10 minute preheat be allowed. The oven should be up to full temperature in about 15-20 minutes.
6. ***To turn off:*** Turn the control knob clockwise until the line on the control knob is aligned with the dot on the control panel.
7. Shelf: The shelf has been designed to allow a good circulation at the rear of the oven and is fitted with a raised bar to prevent trays or dishes making contact with the back of the oven. To remove a shelf, pull forward until it stops, raise at front and remove.

## Oven temperature control

The temperature in the oven is controlled by a thermostatic gas tap and is variable over the range 130°C to 240°C. Approximate temperatures for the settings on the control knob are shown in the following table. The temperatures indicated refer to the centre of the oven and at any particular setting the oven will be hotter at the top and cooler towards the base. The variation between top and centre, and centre to bottom is approximately equivalent to one gas mark. Good use can be made of the temperature variation in several dishes requiring different temperatures may be cooked at the same time. In this way maximum benefit can be obtained from the gas used to heat the oven. Care should be taken not to overload the oven, adequate spacing being used to allow free circulation for heat.

## Cooking guidelines

Best results will be obtained by the shelf positions in this guide - please see chart on next page. It is not necessary to preheat the oven but advisable for a range of dishes. The oven is capable of full temperature in 15-20 minutes.

Most cookery books give details of the shelf positions and gas mark settings for each recipe. If in doubt about a recipe you intend to use, study the recipe carefully then find a similar dish in our guide and use our shelf position and gas mark setting recommendation. Shelf positions are from the top down. When roasting with aluminium foil care must be taken that the foil does not impair circulation or block the oven flue outlet.

**Important:** Always ensure food is properly cooked prior to serving.

## Do's and Don'ts

- Do** read the user instructions carefully before using the appliance for the first time.
- Do** allow the oven to heat before using for the first time, in order to expel any smells before the introduction of food.
- Do** clean the appliance regularly.



- Do** remove spills as soon as they occur.
- Do** turn handles away from the front of the cooker so that they cannot be caught accidentally.
- Do** always use oven gloves when removing food shelves and trays from the oven.
- Do** check that controls are in the off position when finished.
- Do not** allow children near the cooker when in use. All outer surfaces will get hot when in use.
- Do not** allow fats or oils to build up in the oven trays or base.
- Do not** use abrasive cleaners or powders that will scratch the surfaces of the appliance.
- Do not** under any circumstances use the oven as a space heater.
- Do not** put heavy objects onto open grill and oven doors.

### Leaks

If a smell of gas becomes apparent, the supply should be turned off at the cylinder IMMEDIATELY. Extinguish naked lights including cigarettes and pipes. Do not operate electrical switches. Open all doors and windows to disperse any gas escape. Butane/Propane gas is heavier than air, any escaping gas will therefore collect at low level. The strong unpleasant smell of gas will enable the general area of the leak to be detected. Check that the gas is not escaping from an unlit appliance. Never check for leaks with a naked flame, leak investigation should be carried out using a leak detector spray.



Gas Mark	Temperature			
1/4 - 1/2	265-275°F	130-135°C	Very cool	Meringues
1	285	140	Cool	Stewed fruit
2	300	150	Cool	Rich fruit cake
3	330	165	Warm	Baked custard
4	355	180	Moderate	Victoria sandwich
5	385	195	Fairly hot	Whisked sponges
6	410	210	Hot	Shortcrust pastry
7	430	220	Hot	Bread, scones
8	445	230	Very hot	Puff pastry
9	465	240	Very hot	Quick browning
Dish	Gas Mark	Shelf Position	Cooking Time	
Scones	7	2	8-15 mins	
Small cakes	5	2	15-25 mins	
Victoria sandwich	4	2	20-30 mins	
Very rich fruit cake	2	2	Approx. 60 mins per 500g	
Puff pastry	8	2	15-30 mins	
Flaky pastry	7	2	15-30 mins	
Shortcrust pastry	6	2	15-55 mins	
Shortbread fingers	3	2	25-30 mins	
Ginger nuts	5	2	12-16 mins	
Rice pudding	2	3	100-120 mins	
Baked custard	3	3	50-60 mins	
Fruit crumble	5	3	30-40 mins	
Beef	3	3	25 mins per 500g plus 25 mins	
	7	3	15 mins per 500g plus 20 mins	
Pork	3	3	30 mins per 500g plus 35 mins	
	7	3	25 mins per 500g plus 25 mins	



## DOMETIC CK2000 AIR CIRCULATING COOKER HOOD

With 50 m<sup>3</sup>/h capacity 'Circulair' performs more efficiently than conventional cooker hoods - while offering a low DC-consumption of only 5 watts.

A roof mounted ventilator is no longer necessary as the cleaned air is returned downwards while the suction is concentrated along the edges. This creates an air-dome which stops fumes escaping.

### Features:

- Lateral air suction ensures efficient performance with 50 m<sup>3</sup>/h.
- Easy installation as no roof-mounted ventilator is necessary.
- With 2 fan-speed regulation and integrated halogen lights.
- Washable grease filter and exchangeable carbon filter.
- Snap-on releases for easy access to filters and lamps.

### Technical data:

Weight .....	2.2 kg
Height .....	55 mm
Width .....	400 mm
Depth .....	280 mm
Halogen lamps .....	2 x 10W
Lamps (V) .....	12

## SEITZ CONCERTINA BLINDS

The windows of the habitation area are fitted with concertina blinds and flyscreens.


The flyscreens pull down from the top, the concertina blinds up from the base and a combination of both may be achieved by clipping both units together in the centre to adopt the required position. It should be remembered that both the flyscreens and concertina blinds are relatively delicate and those in the living area should be treated with care. They should be kept in a dry and dust-free state, it is advised that the mechanisms are only lightly lubricated when they become a little stiff and inoperative - otherwise no maintenance is needed.

The concertina blinds are manufactured from a paper type material and thus cleaning solvents and aerosols should be kept well clear from them.

Unlike Seitz roller blinds, they will not need to be re-tensioned - any problems that should arise should be addressed to your Auto-Sleeper dealer or the Motorhome Service Centre at Willersey.

## EXTERNAL TV SOCKET

An external weatherproof cable entry point for TV and satellite cable is fitted to the offside of the motorhome.

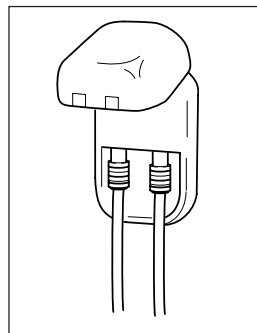



## WATER HEATER

Your vehicle is fitted with a Whale Water Heater which will operate on LPG or 230V mains electricity. The unique design has a 13L capacity hot water tank, sufficient for two 5 minute showers with minimal reheat, and incorporates versatile controls for low current draw or fast heat up settings. With robust insulation and no removable flue cover the Whale Water Heater needs minimal maintenance.

### WARNINGS

**In the unlikely event of leaks in the gas system, or if there is a smell of gas:**

- Extinguish all naked flames
- Do not operate any electrical switches
- Switch off all appliances
- Open windows and doors for ventilation
- Do not smoke
- Shut off gas connection

**Get the system thoroughly checked by a registered gas engineer at a Whale Approved Service Centre**

**The appliance must not be operated while the vehicle is being re-fuelled.**

**This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**

**Children should be supervised to ensure that they do not play with the appliance.**

**Ensure the water system including water heater is full of water, and the vehicle is level before operating.**

**This appliance must be drained if there is a risk of frost. Frost damage will not be covered by warranty.**

**The water temperature cannot be**

**adjusted. It is automatically set to approximately 70°C to prevent bacteria growth. To avoid scalding, the temperature of the hot water supplied to the taps and showers should be controlled. Do not use the water as drinking water.**

**Any alteration to the appliance, including flue plate, use of non-Whale spare parts/accessories and non-observation of the installation and operation instructions shall lead to cancellation of the warranty and exclusion of liability claims and results in it becoming illegal to use the appliance.**

### INSTRUCTIONS FOR USE

Please read the following instructions carefully.

Observe all warnings.

Never operate the water heater without water in it.

This appliance must not be connected directly to the mains water supply without a pressure regulator fitted, or any water supply greater than 190 kPa (1.9 bar).

Ensure the vehicle water system including water heater is full of water, and the vehicle is level before operating.

#### Operating Instructions

For operation of the heater, a 12 V dc supply must be connected at all times. To operate the heater's electric elements, it must also be connected to a suitable 230V ac supply.

Upon initial operation, or to refill after the system has been drained, check the drain valve is closed then fill the system with clean fresh water. To fill, open one hot tap and switch on the water pump. Leave the tap open to allow air to escape while the water heater is filling. Once water flows smoothly out of the hot tap, the water heater is filled. To allow the remainder of air to escape from the system open each hot water tap in turn until water flows smoothly.

**Please note:** In cold temperatures the water in the supply pipe work may freeze and



prevent filling.

Check that all the gas and/or electricity supplies are turned on.



**Gas operation.** Operate the left-hand switch to the on (flame) position. There will be a pre-purge pause of approx. 5 seconds to allow any un-burnt gas to leave the flue. A green LED will light upon successful flame ignition. If there is air in the gas supply line it may take a few attempts for the gas to ignite. See later section for gas lockout re-setting. If the ignition is not satisfactory the red LED will flash, refer to the trouble shooting guide.

**Electric operation.** The water heater is equipped with twin 600W / 230 V ac immersion heater elements offering operation at 600W or 1200W. Operate the right-hand rocker switch to the top position (⤴) to turn on one electric element. To turn on both electric elements, operate the right-hand rocker switch to the bottom position (⤵).

**Note:** The electric elements will still operate if the appliance is in gas ignition lock-out.

**Gas and electric operation.** For faster heating the appliance can be operated with both gas and electric.

**Switching off.** Operate the left-hand gas switch to the top Off position (○) and the right-hand electric rocker switch to the centre position (○). If the heater is not going to be used for some time, isolate the gas supply and drain water if there is a risk of freezing.

**Please Note:** The water may drip from the discharge pipe of the pressure-relief valve during heating up. This pipe must be left open to the atmosphere, must be installed in a continuously downward direction and in a frost free environment. The pressure relief valve must be operated regularly by turning the red knob in the anti clock wise direction, to remove lime deposits and to verify that it is not blocked.



## TROUBLESHOOTING

The heater is equipped with an electronic diagnostic system which will detect fault conditions ranging from poor gas or dc supply to internal heater malfunctions. In the event of a failure, the red light on the control panel will flash a number of times, pause, and repeat until switched off. Count the number of flashes and refer to the table below.

Number of flashes	Fault	Remedy
1	No flame detected	Check gas supply making sure there is gas in the bottle and no blockage in the gas line. Ensure propane is used at temperatures below +5°C. Clear lockout as described below.
2	Overheat	Check there is water in the appliance. We recommend you wait at least 5 to 10 minutes to allow the heater to cool before clearing lockout as described below.
3	Low/high supply voltage	Minimum operating voltage is 10v, maximum is 15v, when measured at the heater. Check battery voltage. If between 10v and 15v, check connections between heater and battery. Check alternator or external battery charging. Clear lockout as described below.
5	Other/ internal fault	Attempt to clear lockout as shown below. If this fails, contact a Whale Authorised Service Engineer.

### Gas Lockouts

Gas lockouts must be cleared by moving the gas switch from on position to off position then back to the on position. The complete sequence of switch movements must be completed within 2.5 seconds for a lockout to be successfully cleared. If there is air in the gas line, eg after a gas bottle change, the water heater may require several attempts before it lights.

### Other Lockouts

If the lockout is caused when the unit is operated on electric, the lockout can be cleared by moving the electric switch from on position to off position then back to the on position. The complete sequence of switch movements must be completed within 2.5 seconds for a lockout to be successfully cleared.

**Note:** A cycling of the power supply to the unit will not clear a lockout. Some gas lockouts, eg ignition lockout will still permit

use of the appliance in electric only operation.

If the problem persists contact Whale Support on 0845 217 2933

### Winterising / Draining

When using the heater in winter ensure the flue is not blocked by snow or fallen leaves etc. When not in use, ensure the heater is drained. This is particularly important during the winter months as a precaution against freezing. To drain, switch off the water pump at either the pump switch or main switch. Open all the hot water taps in the vehicle and operate the drain valve fitted in the system. The drain valve should be left in the open position to ensure all the water drains out.

### Service Support

For serviceable parts advice please contact Whale Customer Support:

Tel: 0845 217 2933

Email: [info@whalepumps.com](mailto:info@whalepumps.com)





## Warranty

The Whale Water Heater is covered by a 3 year warranty.

Please complete the enclosed warranty card and return to Whale.

For warranty details, please refer to the Whale Website [www.whalepumps.com](http://www.whalepumps.com)

Note that any alteration to the appliance, including flue components, use of non-Whale spare parts/accessories and non-observation of the installation and operation instructions shall lead to cancellation of the warranty and exclusion of liability claims and results in it becoming illegal to use the appliance.

## Specification

Nominal water capacity: 13 L

Nominal heat input, Gas: 1.25 kW.

Nominal heat input, Electric: 1.2 kW.

Electric: 230 V ac: 50 Hz, 600/1200 W

Maximum current ac: 6 Amps

Maximum current dc: 0.36 Amps (0.01Amps on standby)

Maximum water temperature: Approx. 75°C

Typical heating up times from 15°C to 70°C:

Gas only: approx 43 minutes

Two electric elements only: approx 38 minutes

Gas and both electric elements: approx 22 minutes



## SPACE HEATER

Your vehicle is fitted with a Whale Space Heater which operates on LPG or 230V mains electricity. The nominal heat output is 2kW on gas and 2kW on mains electricity. When on electric mode, heat is adjustable to low, medium or high settings with an automatically adjusting fan speed which minimises noise and current draw. The design is compact and needs minimal maintenance. The vehicle internal temperature is set by a room controller which can be manually adjusted to a wide range of temperature settings, or to warm weather ventilation.

### WARNINGS

**Do not operate the appliance while the vehicle is in motion.**

**In the unlikely event of leaks in the gas system, or if there is a smell of gas:**

- Extinguish all naked flames
- Do not operate any electrical switches
- Switch off all appliances
- Open windows and doors for ventilation
- Do not smoke
- Shut off gas connection

**Get the system thoroughly checked by a registered gas engineer at a Whale Approved Service Centre**

**The space heater shall not be operated in the following situations:**

- When refuelling the vehicle
- When the vehicle in which the heater is installed is in motion.
- When the vehicle in which the heater is installed is in a confined space, such as a garage

**This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction**

**concerning use of the appliance by a person responsible for their safety.**

**Children should be supervised to ensure that they do not play with the appliance.**

**Ensure that a minimum of one of the hot air outlet vents is permanently open. This should be the vent furthest away from the heater.**

**When operating using gas, the combustion air flue and outlet opening for the products of combustion (exhaust flue) shall never be obstructed. They should be checked regularly, and if necessary cleaned by the user (eg in winter, snow shall be removed from the combustion outlet and air intake).**

**Where the open end of the exhaust flue terminates, three sides of the under-floor space are to be kept open and not obstructed, and not contain through floor ventilation openings.**

**The heater, its gas supply, and flues for the products of combustion are to be inspected in accordance with national regulations or if these do not exist, the manufacturer's recommendations, however, it is advised that this should be done at least annually.**

**The Whale Space Heater should be checked periodically by a Whale Approved Service Centre / Technician, or competent person, at least annually. This should be completed according to the practice in the country where it is used and according to the Whale instructions. We recommend annual testing of gas soundness and combustion by an accredited LPG gas engineer. The appliance contains ESD sensitive components and therefore should only be opened by a Whale Approved Service Centre / Technician.**

**Please note: The heater and ducts will become hot. Please avoid anything directly touching the heater or ducts.**




## INSTRUCTIONS FOR USE

Please read the following instructions carefully.

Observe all warnings.

### Operating Instructions

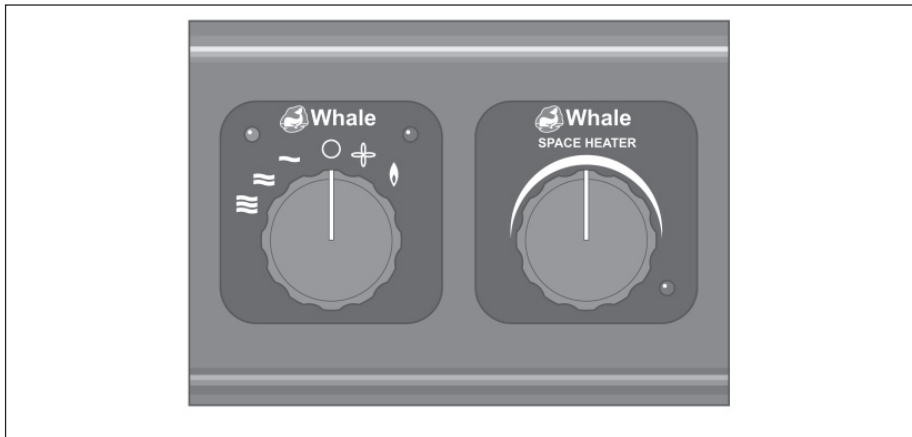

For operation of the heater, a 12 V dc supply must be connected at all times.

**Fan only operation.** Turn the selector knob to the fan on (⊕) position.

**Gas operation.** Turn the selector knob to the gas on (flame) position. There will be a pre-purge pause of approx. 30 sec's to allow any un-burnt gas to leave the flue. A green LED will light upon successful flame ignition. If there is air in the gas supply line it may take a few attempts for the gas to ignite. See troubleshooting section for gas lockout re-setting. If the ignition is not satisfactory the red LED will flash, refer to the trouble shooting guide.

**Electric operation.** The space heater is equipped with 3 power settings 500W / 1000W / 2000W. Turn the selector knob to low power setting (≡) for 500W. Turn the selector knob to medium power setting (≈) for 1000W. Turn the selector knob to high power setting (≡) for 2000W. When operating on low and medium electric power settings the blown air fan runs at a reduced

speed to minimise noise and current draw.

**Note:** The electric elements will still operate if the appliance is in gas ignition lock-out. The appliance cannot be operated with both gas and electric.

**Switching off.** Turn the selector knob to the Off position (○). Note that the fan will continue to run for 3 minutes to allow the heater to cool down.

**Adjusting the temperature.** Turn the temperature control knob clockwise to increase and anti-clockwise to reduce the room temperature. The heater will automatically turn itself on and off to maintain the desired ambient temperature.

Note that the controls incorporate a low frost protection setting. This can be activated by turning the temperature control knob fully anti-clockwise.

### Maintenance

If the heater has not been used for some time dust may have settled inside the heater and the ducting. Run the heater on the "Fan only" setting until it clears. The outside of the



appliance should not normally require cleaning. If it does, isolate the electrical supplies and wipe down with a soft, damp cloth only. Allow to fully dry before reconnecting the electrical supplies.

The Whale Space Heater should be checked periodically by a Whale Approved Service Centre / Technician, or competent person, at least annually. This should be completed according to the practice in the country where it is used and according to the Whale instructions. We recommend annual testing of gas soundness and combustion by an accredited LPG gas engineer. The appliance contains ESD sensitive components and therefore should only be opened a Whale Approved Service Centre / Technician.

## TROUBLESHOOTING

The heater is equipped with an electronic diagnostic system which will detect fault conditions ranging from poor gas or dc supply to internal heater malfunctions. In the event of a failure, the red light on the control panel will flash a number of times, pause, and repeat until switched off. Count the number of flashes and refer to the table below.

Number of flashes	Fault	Remedy
1	No flame detected	Check gas supply making sure there is gas in the bottle and no blockage in the gas line. Ensure propane is used at temperatures below +5°C. Clear lockout as described below.
2	Overheat	Check the air ducts and vents are not blocked or restricted. We recommend you wait at least 5 to 10 minutes to allow the heater to cool before clearing lockout as described below.
3	Low/high supply voltage	Minimum operating voltage is 10v, maximum is 15v, when measured at the heater. Check battery voltage. If between 10v and 15v, check connections between heater and battery. Check alternator or external battery charging. Clear lockout as described below.
4	Combustion Air Fault	Check combustion air flue and exhaust flue for blockages.
5	Other/internal fault	Attempt to clear lockout as shown below. If this fails, contact a Whale Authorised Service Centre/Technician.



## Gas Lockouts

Gas lockouts must be cleared by turning the selector knob from gas (flame) position to 'off' position then back to the 'on' position. The complete sequence of switch movements must be completed within 2.5 seconds for a lockout to be successfully cleared. If there is air in the gas line, eg after a gas bottle change, the space heater may require several attempts before it lights.

## Other Lockouts

If the lockout is caused when the unit is operated on electric, the lockout can be cleared by turning the selector knob from electric 'on' position to 'off' position then back to the 'on' position. The complete sequence of switch movements must be completed within 2.5 seconds for a lockout to be successfully cleared.

**Note:** A cycling of the power supply to the unit will not clear a lockout. Some gas lockouts, e.g. ignition lockout and combustion air faults will still permit use of the appliance in electric only operation. If the problem persists contact Whale Support on +44 (0)845 217 2933.

## Winterising

When using the heater in winter ensure the flues are not blocked by snow or fallen leaves etc. When the Space Heater is not going to be used for a long period of time, we recommend that the open end of the combustion air and exhaust flue are covered to prevent ingress of leaves etc.

## Service Support

For serviceable parts advice please contact Whale Customer Support:

Tel: +44 (0)845 217 2933

Email: [info@whalepumps.com](mailto:info@whalepumps.com)

## Warranty

The Whale Space Heater is covered by a 3 year warranty.

Please complete the enclosed warranty card and return to Whale.

For warranty details, please refer to the Whale Website [www.whalepumps.com](http://www.whalepumps.com)

Note that any alteration to the appliance, including flue components, use of non-Whale spare parts/accessories and non-observation of the installation and operation instructions shall lead to cancellation of the warranty and exclusion of liability claims and results in it becoming illegal to use the appliance.

## Specification

Nominal heat input, Gas: 2.0 kW.

Gas Consumption: 150g/h.

Nominal heat input, Electric: 2.0 kW.

Mains Electric:

Nominal voltage: 230V ac: 50 Hz.

Power options: 500 / 1000 / 2000W.

Maximum current ac: 9 Amps.


Battery Supply:

Nominal voltage: 12V dc.

Maximum current dc, gas operation: 1.7 Amps (0.01 Amps on standby).

Maximum current dc, electric operation: 2.2 Amps (0.01 Amps on standby).

## REFRIGERATOR

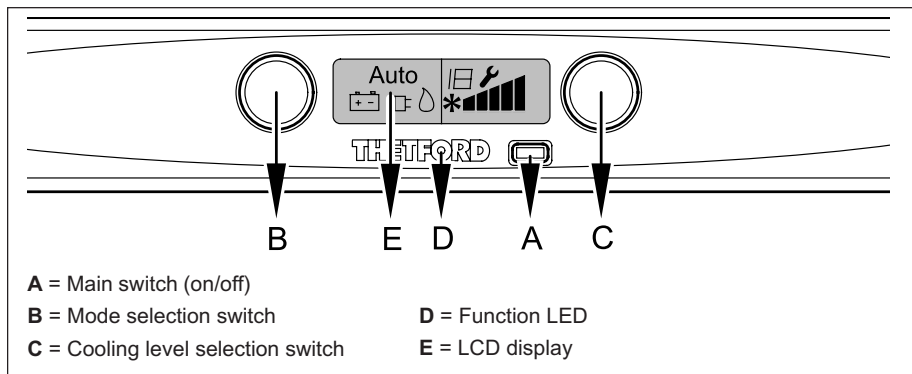

### Introduction

Your vehicle is fitted with a Thetford Premium LCD absorption type refrigerator. The control panel allows you to select your preferred energy source and cooling level.

### Cold space

Cooling fins are located on the inside of the refrigerator and the absorption system uses these to withdraw heat from the refrigerator. Therefore, never cover these fins with plastic or paper. Air must be able to circulate freely through the refrigerator so that the heat can be extracted.

To limit frosting on the cooling fins:

- Always cover liquid foods before placing them in the refrigerator
- Always let hot food cool before placing it in the refrigerator
- Do not keep refrigerator door open longer than necessary

### Freezer compartment

The freezer compartment is not suitable for freezing foods although it will maintain the temperature of already frozen food.

Ice cubes are best made at night when the refrigerator has less work to do and has more reserves.

### Automatic defrosting cycle

All LCD refrigerators have an automatic defrosting cycle which is activated at the end of each 49 hours of operation. The system

switches itself off and on again when defrosted, and resets the internal timer.

There is normally no need to manually defrost the refrigerator.

### Door locking mechanism

The refrigerator door has an automatic locking mechanism. The door locks automatically when you press it firmly shut. The mechanism keeps the door shut while driving.

### OPERATION

Before first use it is recommended that the inside of the refrigerator is cleaned, and that it is allowed to operate for at least eight hours before putting any food into it.

### Smart Energy Selection

Your refrigerator is equipped with Smart Energy Selection (SES) which means that it will automatically select the best power source available. When you start the refrigerator you should usually select the AUTO mode, and the refrigerator will then apply the following priority: mains voltage (230V), direct current (12V), liquid gas. The system will always try to operate using the highest priority energy source available. If a fault occurs with one energy source the system will automatically switch to the next available. If no energy sources are available, the blue LED will flash and show an error code.

### Switching on

Important note – The SES memory saves



every change made to the settings, hence the system will start up on each subsequent occasion in the last selected setting.

## Switching on

Refer to page 9-18 for illustration of the control panel.

**A** = Main switch (on/off). Press, and the function LED will turn blue. The LCD display will show the most recent settings for 10 seconds and then backlight will go out.

**B** = Mode selection switch. Press, and the LCD display will show the setting, for 10 seconds. Pressing the switch successive times moves through the menu in the following sequence:

- AUTO
- Manual DC (12V)
- Manual gas
- Manual mains voltage (230V)
- AUTO

Select either the AUTO option or one of the other power supplies you wish to use, as shown on the LCD display. Ten seconds after releasing the switch the backlight will go out.

**C** = Cooling level selection switch. Press, and the LCD display will show the setting, for 10 seconds. Pressing the switch successive times will set the refrigerator one position cooler. On reaching the coldest temperature the system will start again at the warmest setting. Ten seconds after releasing the switch the backlight will go out.

**D** = Function LED

**E** = LCD display

- Open the valve of the gas bottle
- Open the isolator taps
- Press the main switch (A). The function LED will turn blue and all symbols on the LCD display will light up.
- Use the mode selection switch (B) to select the AUTO function (or one of the power sources you want). The LCD display will show the selected option.

- Set the desired cooling level by means of the selection switch (C). The LCD display will show the selected option.

## Powering with electricity

Powering with electricity can be selected by the AUTO mode or manually.

- AUTO mode, mains voltage (230V): This energy source will be selected if the mains voltage is greater than 200V.
- AUTO mode, direct current (12V): This energy source will be selected only if mains voltage (230V) is unavailable, the vehicle engine is running and a voltage higher than 11V is available.
- Manual selection, mains voltage (230V): The LED warns you whenever insufficient voltage is available or if a fault occurs. If this happens the LED will flash and the LCD show an error code.
- Manual selection, direct current (12V): Powering from the battery is only suitable for maintaining the temperature of the refrigerator and its contents once it has been refrigerated. Always use the gas connection or mains voltage to start up the refrigerator and cool it. The LED warns you whenever the engine is not running, if insufficient voltage is available or if a fault occurs. If this happens the LED will flash and the LCD show an error code.

**Note:** If the refrigerator has been manually set to operate on 12V, it will not automatically switch to another energy source when the engine is not running. In this case the refrigerator will stop cooling.

## Powering with gas

Powering with gas can be selected by the AUTO mode or manually.

- AUTO mode: The system will select gas operation if mains voltage (230V) is unavailable or the vehicle engine is not running. Once either of these is available again the system will switch to the highest priority energy source. *Note:* if the system switches from 12V DC to gas operation while in AUTO mode, it will wait for about 15 minutes before igniting the gas, although the gas indicator lamp will



come on. This delay is built in to avoid switching to gas operation, and igniting the burner, whenever you stop to refuel the vehicle. If the system selects gas operation, the ignition will be activated automatically. The gas will flow to the burner and be lit by the electric ignition. If the flame goes out, the gas will immediately be lit again.

- Manual selection: *Note: If the flame cannot be lit within 30 seconds, the gas supply will stop and gas mode will be switched off, the LED start flashing and an error code shown on the LCD display.* The gas mode can be reset only if the refrigerator is switched off. If you switch the refrigerator on again and the gas mode is still not working, the LED of the manual gas mode will flash to indicate that gas is unavailable and an error code is shown in the LCD display.

### Important Note:

- It is prohibited to use gas to power the refrigerator while you are driving. If a road accident results in a fire, there is danger of an explosion.
- It is prohibited to use gas to power the refrigerator in the vicinity of petrol stations. If it will take longer than 15 minutes to refuel your vehicle you should switch the refrigerator off using the main switch (A).

### Switching off

- Push the main switch (A)
- The blue LED will go out
- The refrigerator is now completely switched off.
- Use the special door latch on the door locking mechanism to hold the door open, in order to prevent unpleasant odours and mould in the refrigerator.

### Maintenance

Regular maintenance is necessary to ensure the correct functioning of your refrigerator.

### Cleaning

- Clean the refrigerator with a soft cloth and mild detergent
- Dust the refrigerator with a soft moistened cloth
- Do not use soap or aggressive detergents that are abrasive or soda-based.
- Note the removable interior components of the refrigerator are not dishwasher proof.

### Defrosting

- The refrigerator should defrost itself automatically. However, should it be necessary to manually defrost the refrigerator observe the following:
- Act once the frost layer reaches about 3mm thick.
- Remove contents of refrigerator and switch off.
- Leave the door open.
- Place dry towels inside to absorb the water.
- Place trays of hot water in the freezer compartment.
- After defrosting use a cloth to dry the inside
- Switch on again

*Important:* Do not use force or sharp objects to remove frost. Do not try to accelerate defrosting by using (for example) a hairdryer.

### Door locking mechanism

Frost will form in the refrigerator if the door is not closed properly. To check this, close the door with a piece of paper between the door and the refrigerator. Pull at the piece of paper. If you feel resistance, the door closes properly. If you feel no resistance, the door does not close properly. Perform this test regularly on all sides of the door. If you find that the door does not close properly, check whether the door locking mechanism keeps the door properly shut.



## Winter operation

If you use the refrigerator when the outdoor temperature is below 8°C, install the Thetford vent winter/storage cover (see fig A) on the ventilation grills. The cover, which is available from your dealer, protects your refrigerator from excessively cold air. It is also advisable to fit the cover if you are not going to use the vehicle for a long period.

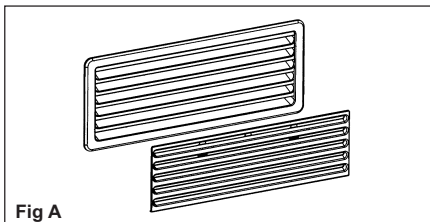


Fig A

## Maintenance of gas equipment

- A qualified engineer must inspect and maintain gas and electrical equipment.
- **Important:** Laws covering gas appliances make it the user's responsibility to observe the following rules:
- Appliances that run on LPG must be inspected every year.
- The gas burner must be cleaned at least once a year.
- Gas hoses must be checked annually and replaced regularly as required.
- These items will be checked as part of your motorhome annual habitation check. Refer to section 12 of the handbook.

## Maintenance checklist

- Your refrigerator will give years of trouble-free use if you run through this check list regularly:
- Keep the refrigerator clean
- Check that the refrigerator is defrosting itself regularly
- Check the door closing mechanism regularly, as previously described.
- Make sure that the ventilation grills are not blocked.
- Regularly clean the ventilation grills.

## Vent screen

The vent has a screen to prevent bugs from entering the combustion area of the refrigerator. These vents need to be cleaned regularly to ensure a good airflow. When the refrigerator performs poorly due to high external temperatures the vents can be removed to improve the airflow and hence cooling performance.

## Storage

If you do not expect to use your refrigerator for a lengthy period, carry out the following actions:

- Remove all food
- Switch off the refrigerator
- Clean the refrigerator as described earlier
- Shut off the gas tap to the refrigerator
- Leave the door ajar using the special closure hook (storage position)
- Place the winter cover on the ventilation grill



## Troubleshooting

If your refrigerator does not refrigerate properly or will not start, run through the following checklist:

- Check that you have followed the instructions in 'Switching on' section.
- Check that the refrigerator is on a level surface.
- Check that there is an available energy source.

Problem	Possible cause	Action you can take
Refrigerator will not work on gas	Gas bottle is empty	Replace the gas bottle
	Valve of the gas bottle or one of the isolation valves is closed	Open the valves
Refrigerator will not work on 12V DC	12V fuse is defective	Fit new fuse number 3
	Habitation battery is flat	Test the battery and charge it
Refrigerator will not refrigerate sufficiently	Insufficient ventilation	Check whether the ventilation grills are covered
	Thermostat set too low	Increase the setting of the thermostat
	Too much ice on the condenser	Check that the door shuts properly and defrost the fridge
	Too much food stored simultaneously	Let the food cool off first
	Gas burner is dirty	Have the gas burner cleaned
	Door does not close properly	Check the door closing mechanism

## Technical data

Model. .... N97

Usable capacity, incl freezer compartment... 88 litres

Freezer compartment capacity..... 11 litres

Electricity consumption / 24 hr..... 2.8kW (average at 25°C ambient)

Gas consumption / 24 hr.....0.33 kg (average at 25°C ambient)



## Control panel diagnostics

Your refrigerator has a LCD control panel with a special diagnostics area which displays an error code if there is a fault.

Fault code	Cause	Action
1	AC heater low current	Contact your dealer or Thetford Service Centre
2	DC heater low current	
3	AC heater ON, should be OFF	
4	DC heater ON, should be OFF	
5	Senses flame when gas should be OFF	
6	Senses gas output terminal ON when should be OFF	
7	Senses gas output terminal OFF when should be ON	
8	AC mains supply is 20% below nominal	Your controls are in manual AC mode but there is no power available. Check 230V is plugged in, if so, the voltage supply is too low. Contact site owner.
9	Gas lock-out because flame fails to ignite after 30 seconds.	Your controls are in manual gas mode but flame fails to ignite. Check if gas cylinder is empty, or if isolation valve is closed. Select another energy source. Reset the refrigerator 3 or 4 times in gas mode until flame ignites. Contact your dealer or Thetford Service Centre if problem persists.
10	No 'engine running' signal is present and control is in manual DC mode	Your controls are in manual DC mode and the engine is not running. The refrigerator can only cool on 12V when the engine is running. Start the engine or select a different energy source.
11	No energy source is available and control is in AUTO mode	Your controls are in AUTO mode, but no energy source is available. Start the engine, connect the 230V supply or open the gas supply and reset the refrigerator by turning off and on again.
12		Contact your dealer or Thetford Service Centre
13	Thermistor fails; control automatically switches to Backup mode (BOS)	Check if the connector above the fin on the inside of the cabinet is correctly plugged in. If so, contact your dealer or Thetford Service Centre
14	Display board and power board lost communication with each other	Contact your dealer or Thetford Service Centre
18	No fault, only lighting all LCD segments on start-up	Wait a few seconds for the refrigerator to start up normally



## THETFORD CASSETTE C-402 TOILET

### Preparing for use

Open the access door on the outside of your motorhome.

Turn the water filling funnel outwards, remove the cap and add the stated amount of Thetford toilet fluid for the water tank. This ensures a better and cleaner flush and keeps the water in the flush tank fresh. After this, fill the water tank with clean water.

Screw the cap back onto the water filling funnel and turn it back inwards towards the side of the flush water tank.

**Note:** 150 ml water remains in the water filling funnel when the water tank is empty.

1. Remove the waste tank by pulling the safety catch upwards.
2. Pull the waste tank outward to the stop. Tip it slightly and take the tank fully out.
3. Place the tank upright and turn the emptying spout upwards.
4. Remove the cap, with the measuring cup inside, from the emptying spout and pour the stated quantity of toilet fluid into the waste tank. This avoids unpleasant smells in the waste tank and keeps the inside of the waste tank clean. Next add approximately 2 litres of water - enough to ensure that the bottom of the waste tank is covered. Screw the cap back onto the emptying spout. Turn the emptying spout back to its original position.

**WARNING:** Never add toilet fluid via the valve blade or via the toilet bowl.

5. Slide the waste tank back into its original position via the access door.

**Note:** Never use force if you cannot get the tank back into place easily. This may cause serious damage.

6. Make sure that the waste tank is secured with the safety catch. Shut the access door and lock it.
7. Run water into the bowl by pressing the flush knob briefly or open the valve blade by turning the handle anti-clockwise. Your Thetford toilet is now ready for use.

8. After use, open the valve blade (if still closed) by turning the handle anti-clockwise. Flush the toilet by pressing the flush knob for several seconds. Close the valve blade after use.

**Note:** Do not leave water in the bowl if the toilet is not being used. This does not help to reduce unpleasant smells and only leads to flooding.

Comment: To avoid blockages we advise the use of Thetford's fast dissolving toilet paper, Aqua Soft.







### Emptying

The waste tank has a capacity of 17 litres and must be emptied at the latest when the red light in the level display lights up. The indicator lamp will light up when the waste tank can still take about 2 litres, which is about three uses. It is advisable to empty the waste tank earlier.


**Note:** Do not allow the waste tank to become too full.

9. Make sure that the valve blade is closed. Open the access door located outside the vehicle. Pull the safety catch upwards and remove the waste tank.
10. Stand the waste tank upright (Pull-out handle at the top, wheels at the bottom). Press the handle down and move it away from the waste tank until it snaps out of its locked position.
11. Pull the handle up and wheel the waste tank to an authorised waste dump.
12. Push the handle back. Turn the emptying spout upwards and remove the cap from the spout. Hold the waste tank by the upper handle with one hand, while placing your other hand by the rear handle so that during emptying you can operate the vent plunger with your thumb. To empty the tank without splashing, depress the vent plunger while emptying the tank. After emptying, flush the tank thoroughly with water. Also clean the valve blade with water.


**Note:** The vent plunger should only be pressed once the emptying spout is pointing downwards!

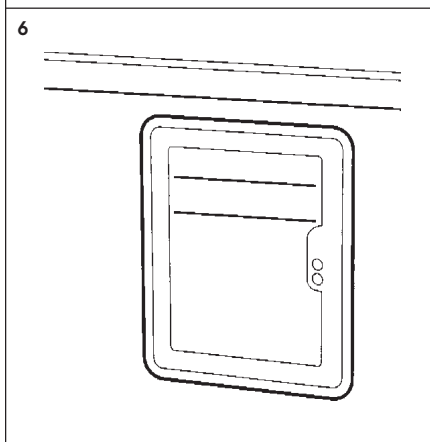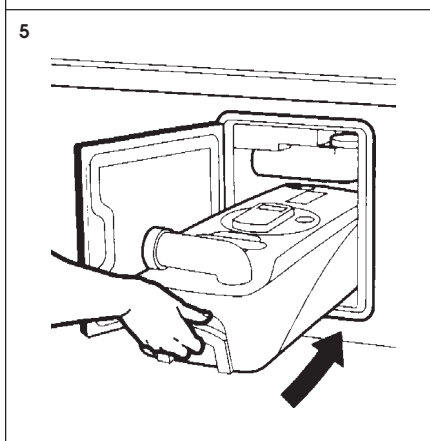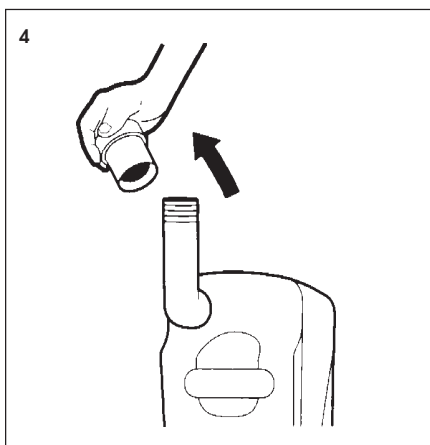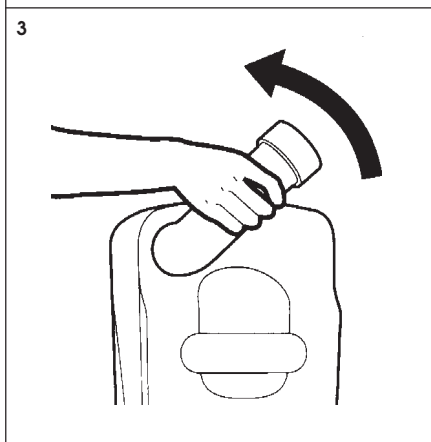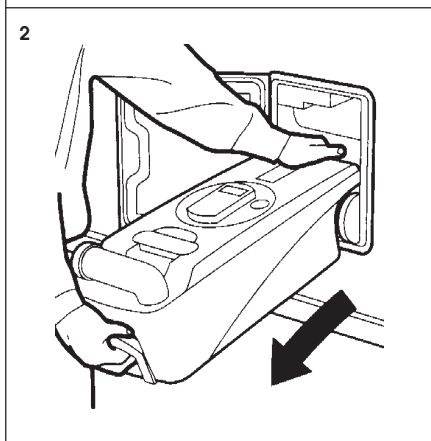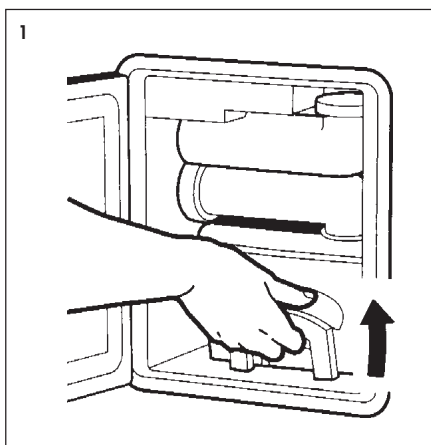


7

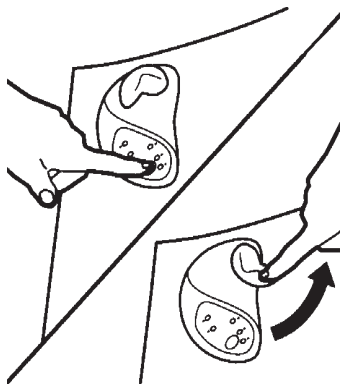


8

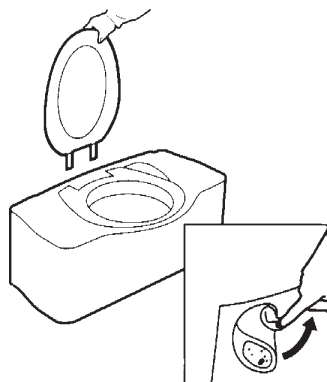


9

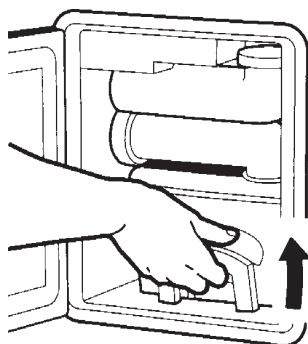


10

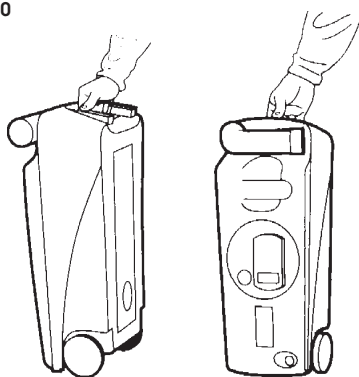


11

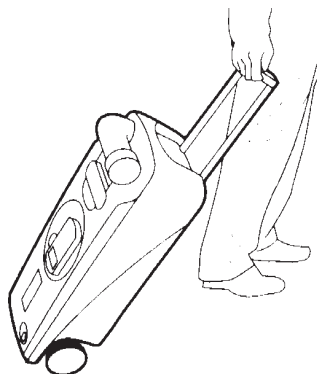


12

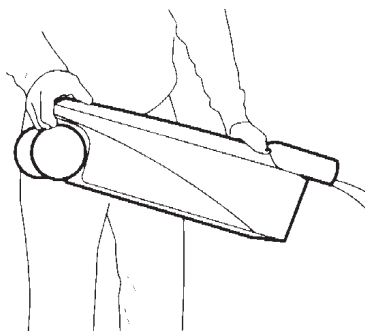


13

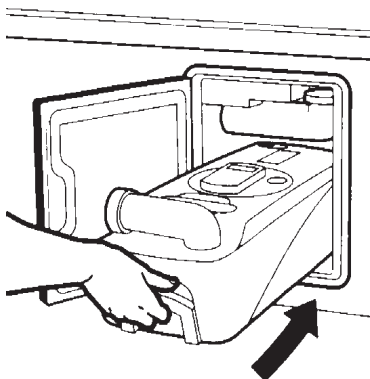


14

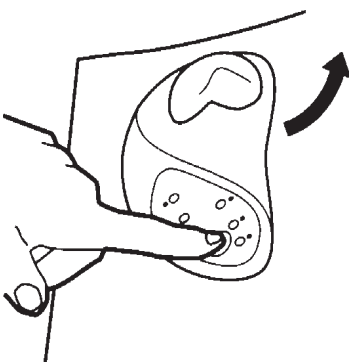

15

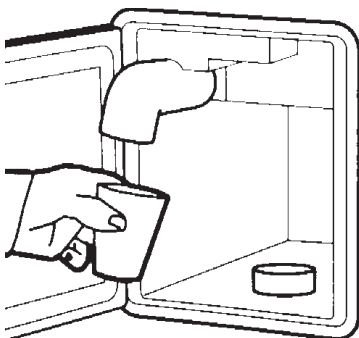

16

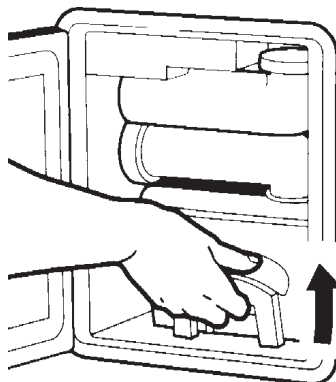

17



13. If required make the toilet ready for use once again. Slide the waste tank into the toilet and close the access door.

### Storage

It is important that you follow the instructions below if you do not expect to use the Thetford toilet for a long period.

14. Open the valve blade by turning the handle on the toilet anti-clockwise. Press the blue knob until the water stops flowing into the bowl. Close the valve blade.
15. Open the access door on the outside of your motorhome and turn the water filling funnel outwards. Remove the cap and



empty the water filling funnel by turning it a quarter turn anti-clockwise.

16. Remove the waste tank and empty this at an authorised waste dump. Follow the instructions for cleaning and maintenance.
17. Replace the waste tank and open the valve blade by moving the handle on the toilet to the left.

## Cleaning and Maintenance

The toilet should be cleaned and maintained regularly, depending on the amount of use. To clean Thetford toilets, we advise using water and Thetford Plastic Cleaner.

**Note:** Never use household cleaners (bleach, solvents or other powerful cleaning agents). These may cause permanent damage to the seals and other toilet components.

### *Toilet:*

- \* Squirt Thetford Plastic Cleaner in the toilet.
- \* Flush the bowl with water and wipe down the rest of the toilet with a damp cloth.

**TIP:** For a really shining toilet, dry it with a soft dry cloth after cleaning.

- \* Clean seat and lid. The seat and lid can easily be removed. Lift the lid and seat together and pull upwards. After cleaning, replace the seat and lid by positioning the round pins above the holes and then pushing the lid and seat downwards.

### *Waste Tank:*

We advise a thorough cleaning of the waste tank once each season.

- \* Remove the mechanism from the waste tank by turning it anti-clockwise, as shown on the waste tank. Rinse the complete mechanism under a tap.
- \* Remove the cover plate from the automatic pressure release vent by prising it up using a screwdriver. Use one hand to push the automatic pressure release vent open, while holding the float of the automatic pressure release vent on the inside of the tank with the other

hand. Push the float upwards, turn the float a half turn and remove it from below. Remove the rubber seal that is under the float. Rinse the float and rubber seal under a tap. Replace the rubber seal and the float for the automatic pressure release vent in the same way.

The rubber seal in the toilet (the valve blade seal, the mechanism seal, the automatic pressure release vent seal and the cap seal) should be regularly treated with Thetford High Grade Seal Lubricant. This will ensure that the seals remain supple and in good condition. If the toilet is not to be used for any length of time, it is important to treat the seals with Thetford High Grade Seal Lubricant after cleaning.

**NOTE:** Never use Vaseline or any vegetable oil except olive oil. These may cause leakage.

**N.B.:** The valve blade seal is a part of the toilet that is subject to wear. Depending on the extent and manner of service, after a certain period the seal will become less effective and must be replaced.

## Winter operation

You can use your Thetford cassette toilet as usual in cold weather, as long as the toilet is situated in a heated location. If this is not the case there is a risk of freezing. In that case we advise that the toilet is drained by following the instructions under 'Storage'.

For environmental reasons the use of antifreeze, such as that used in a car radiator, is not advised.





## TELEVISION

If your vehicle is fitted with an Avtex TV/DVD then please note the following points:

- For detailed operating instructions and specification please refer to the literature supplied with the vehicle.
- Avtex operate a helpline for users experiencing problems with any of their products. Whether it is difficulty with tuning, setting up the equipment or a physical malfunction then contact their Service Department on 02920 020279 (normal business hours).  
They will be able to talk to you through many issues, but if there is still a problem they will arrange for a courier to collect your set from any UK postcode (including campsites) for return to their factory overnight. The repaired equipment will normally be despatched the following day for return to the customer.  
This service is free during the warranty period. After the warranty has expired the service is still available but there will be a charge.
- **Warning:** If for any reason the support bracket is unscrewed from the back of the TV, ensure that when it is re-fitted that only the original screws (or ones of the same length) are used. If longer screws are used they may damage the internal components of the equipment.

## ELECTRIC STEP

Your vehicle is fitted with an electrically operated side step. In the event of the step being left extended a buzzer, positioned under the dashboard, will sound (when the ignition is switched on) and the step will self-retract.

### Maintenance

Dirt and frost can prevent the step from operating properly. In this case the moving parts should be cleaned or defrosted. All points of movement are layered in maintenance-free bearings.

*Consult manufacturers literature for further maintenance details.*

## REVERSING CAMERA

A wide angle, colour reversing camera is fitted to your vehicle, adjacent to the high mounted rear stop lamp.

The monitor is clipped over the original interior mirror and is automatically activated when reverse gear is selected.

Take care to avoid hard objects from scratching the LCD surface of the screen.



## INTERNAL LAYOUT

### General

The Kemerton is designed as a two berth model, with a front lounge and a full width end bathroom.

### Cab Seats

Both the reclining cab seats have full forward and rearward movement by releasing the catch on the front of the seat and sliding it to the required position.

### Accommodation Seating

The Kemerton features a forward facing rear seat, with seat belt, on the nearside and an inward facing settee on the offside. The settee has a lift up base giving access to the underseat storage area.

Please note that Auto Sleepers advise against the retrofitting of additional seat belts.

### Security

Passengers are reminded that it is a legal requirement to wear the seat belts provided whilst the vehicle is in motion.

### Table

Two tables are supplied with the Kemerton. A large table with folding legs can be positioned along the vehicle to form a large dinette, with the nearside seat lowered to the bed position to provide additional seating. When not required this table should be securely stowed in the front overcab shelf area.

A smaller pedestal leg table may be fitted to the hole in the floor at the front of the vehicle for use with the swivelling front seats. When not in use the bung should be fitted to the hole in the floor, and the table top and leg stored in the clips in the wardrobe.

**Caution:** Ensure that the folding legs are locked in place before using the table. The table must be stored when the vehicle is in motion.

### Kitchen Area

The kitchen area is located towards the rear of the vehicle and features a Spinflo Triplex combination oven, grill and hob with three

gas burners. Adjacent to this is a stainless steel sink with cutlery rack and drainer, concealed by a Chincjilla glass lid which may also be used as a chopping board. The sink is fed by a chrome mixer tap mounted to the right of the sink. Below the sink is a drawer, containing a cutlery tray, and two storage cupboards, one of which contains the red isolation taps for the gas appliances. For explanation of the symbols on each tap, please refer to page 7-6.

Above the cooker is an overhead unit, housing the microwave oven with it's isolation switch on the panel nearby, and a cooker hood mounted underneath. Another overhead locker contains the storage racks for the crockery, which is supplied separately in its own storage bag.

On the other side of the vehicle is a Thetford absorption refrigerator with automatic energy selection and LCD display. The red isolation tap for it is located on the side of the refrigerator behind the seat. Above the refrigerator is a work surface, and to the left on the wardrobe side, is a cupboard housing the concealed flat screen TV mounted on a swing out bracket.

Lighting in the kitchen area is by oval shaped LED lights, individually switched, mounted below the overhead lockers, with a large LED light in the ceiling and also an opening roof vent.

### Bathroom


The bathroom occupies the whole width of the rear of the vehicle and consists of an electric flush toilet, a dropdown basin with mixer tap and a shower with sliding doors.

The shower features a chrome mixer tap and shower head, a mirror above the basin and a storage shelf below the basin for bottles etc. There is a motorised extractor fan in the ceiling, a blown warm air duct fitted near the floor, and a plastic mat prevents damage to the shower tray when not in use.

Lighting in the bathroom is provided by two LED lights, individually switched, one in the shower and another fitted below the overhead locker, to illuminate the toilet area. There is also an opening roof ventilator with hinged flyscreen and roller blind.



ARRANGEMENT OF EQUIPMENT

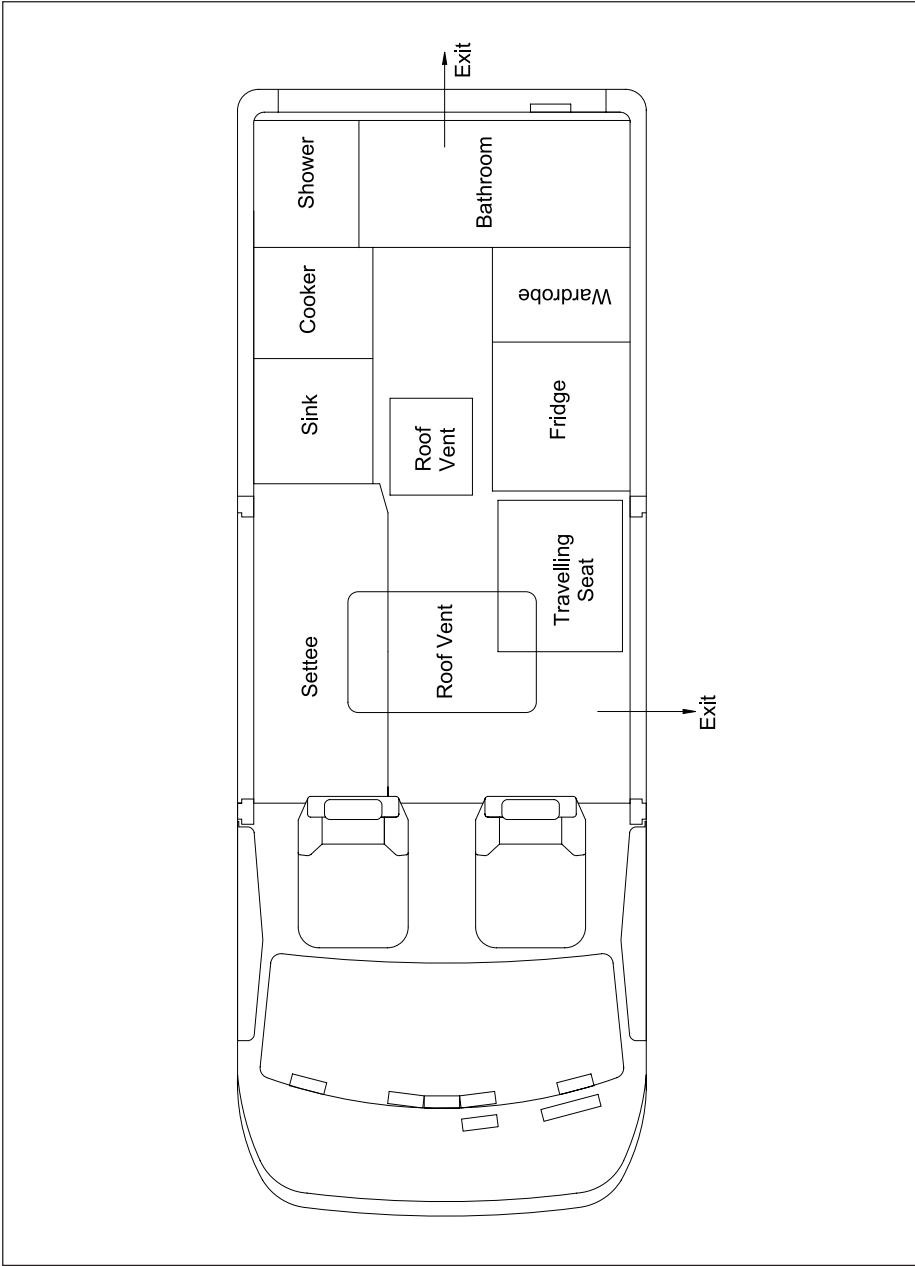



The dropdown basin may be removed, by simultaneously lifting upwards and forwards, for cleaning and retrieval of items (soap etc) that may have fallen into the catchment basin.

The toilet is fed through its own integral water supply and is serviced from the rear of the vehicle by opening the nearside rear door.

## Wardrobe

The wardrobe is located on the nearside of the vehicle, forward of the bathroom, and incorporates a full width hanging rail and storage for the pedestal table leg and top.

## Lounge Area

The lounge area is at the front of the vehicle and consists of an inward facing sofa on the offside and the travelling seat, on the nearside, which can be extended to form a bench seat. The offside sofa has a slatted base which lifts up to provide access to an equipment and storage area. (In order to make lifting the seat easier it is recommended that the backrest is first laid flat against the seat cushion). This area contains the habitation battery, the space heater and the main electrical system control box. There is also a storage locker accessible via a door in the sofa front panel.

At the front of the nearside seat is a dropdown door which reveals a bottle storage area with four bottle clips. On the outside of this seat, and accessible when the side door is open, is the switch for the retractable step, the exterior awning light and the interior step lights.

On a panel above the side door is located the electrical control panel with scrolling menu display and programmable control of all the vehicles electrical services. It incorporates a fresh water level indicator and master switches for the water pump and 12 volt circuits. Adjacent to this are individual controls for the Whale water and space heaters.

Lighting is provided by a roof mounted LED light and three individually switched reading lamps, two under the overhead lockers and one above the nearside seat. Blue LED

feature lights are fitted in the front face of the interior step, and are controlled by a switch on the outside of the nearside seat.

A carbon monoxide alarm is fitted on the lounge end of the nearside overhead locker, with a smoke alarm on the ceiling at the front end of the side door. A fire extinguisher is clipped to the inside of the drivers seat.

## Storage

Storage is provided by the cupboards, lockers and within the seat bases. Additional storage is available in the overcab shelving area and various small pockets around the vehicle.

Heavy items must not be stored in any overhead locker, nor in any storage area from which they could come free and cause injury to the occupants of the vehicle. Ensure all cupboards are securely fastened before moving off (i.e. that the push buttons are in the 'locked' position).

Ensure any articles stowed below the cab seats will not come loose when the vehicle is being driven.



LOCATION OF KEY FACILITIES	
Awning light switch	On outside panel of nearside rear seat
Control for space heater	On panel above side door
Control for water heater	On panel above side door
Electric step switch	On outside panel of nearside rear seat
Electrical isolation switch for water heater	Under rear of offside settee
Electrical isolation switch for space heater	Under rear of offside settee
Fuses, 12V DC	On electrical control unit front panel
Gas isolation taps	In cupboard under sink Behind rear of nearside seat
Main 12V control panel	On panel above side door
Main 12V switch for lighting	On 12V control panel
Microwave oven isolation switch	On panel above microwave oven
Miniature circuit breakers (MCBs)	On electrical control unit front panel
Radio isolation switch	Not available with modern vehicle wiring
Radio rear speakers	Under rear overhead lockers, volume may be balanced side to side
Reading lights	Under overhead lockers in lounge area, all individually switched
Residual current device (RCD)	On electrical control unit front panel
Smoke alarm	On ceiling above side entrance door
TV aerial socket	In TV cupboard
Water heater safety / drain valve	In cupboard under sink
Water pump / Filter	In freshwater tank
12V DC socket	1 off in TV cupboard 1 off in nearside overhead locker
230V AC sockets	1 off above fridge worktop 2 off on offside kitchen pillar 2 off on offside settee front panel



## SLEEPING ARRANGEMENTS


### Transverse double bed

Release the catch on the side of the nearside rear seat and pull forward to its full extent.

Pull the offside sofa base and cushion towards the centre of the vehicle until it meets the nearside bed. Adjust the height of the support legs if necessary. Arrange the sofa backrest cushion to fill the remaining gap.




## NORMAL SEATING ASSEMBLY

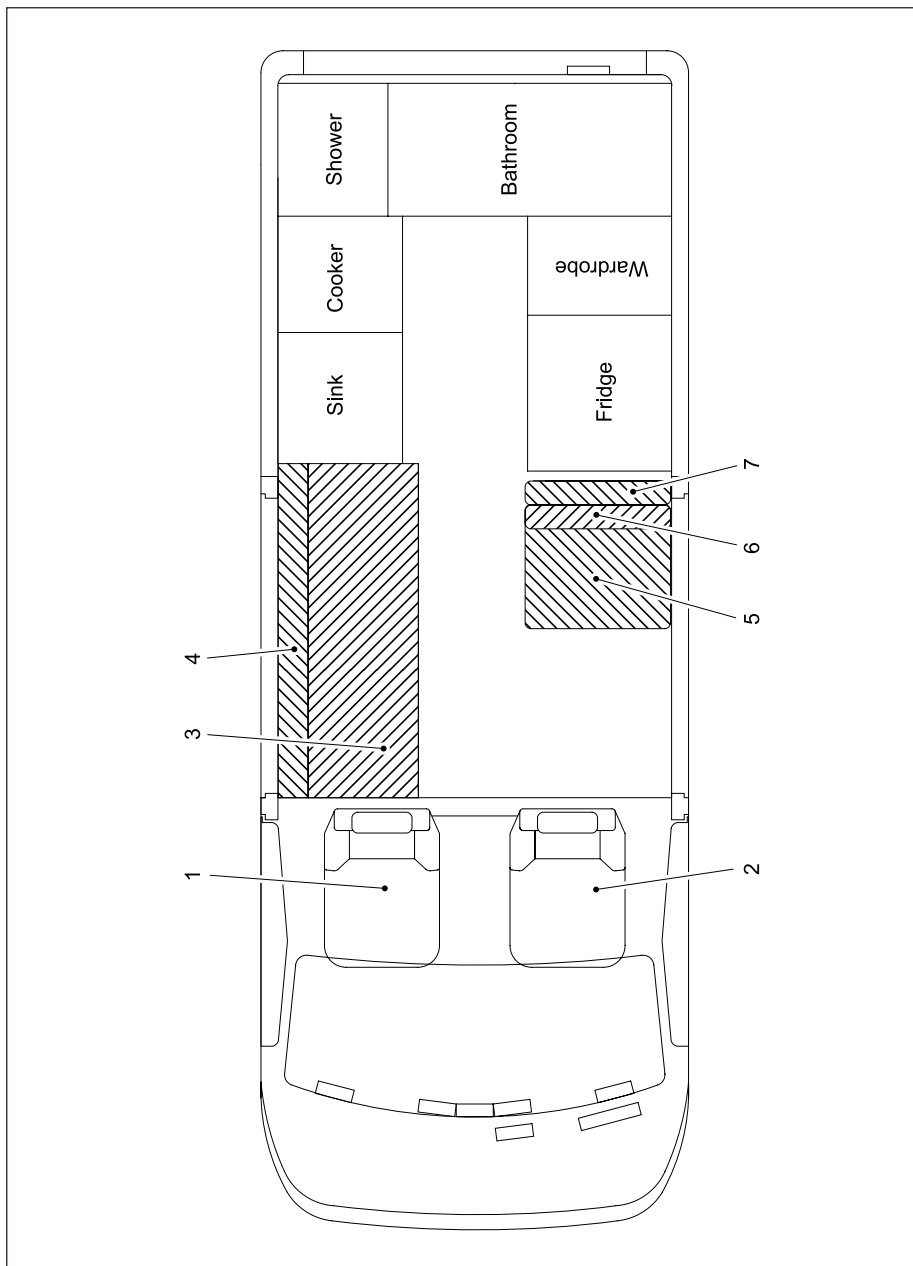



DOUBLE BED ASSEMBLY

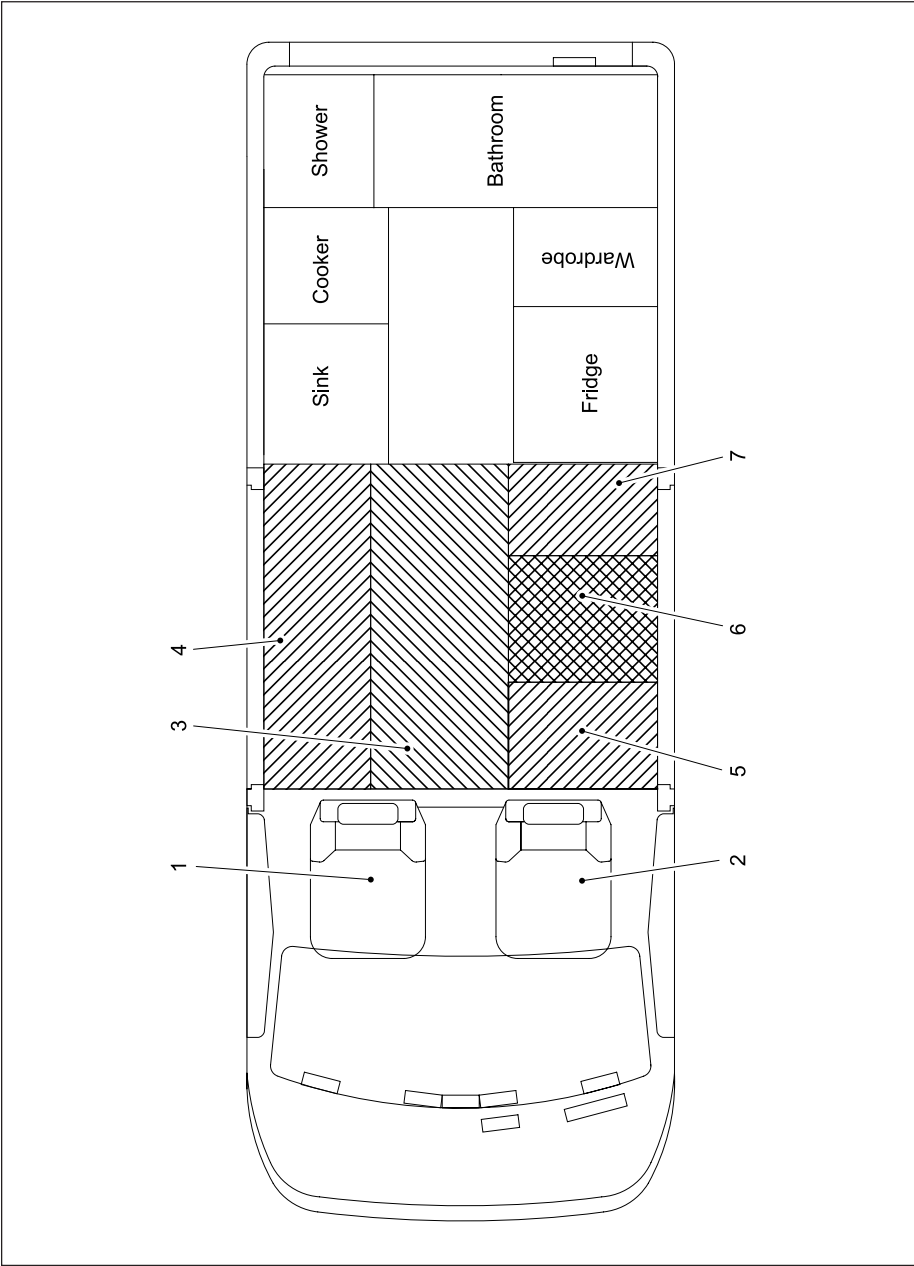





9-35



## EQUIPMENT ARRANGEMENT

### Ventilation

The Kemerton is fitted with three roof ventilators, a Midi-Heki in the lounge area, a Mini-Heki in the kitchen area and a small MPK type in the bathroom.

### Heki Roof Light

To operate the Heki roof lights, press the button and pull the handle to raise the cover. Use the slotted channels to hold the roof light open in the desired position. When closing ensure that the handle is locked in place by the button.

### MPK Roof Light

The MPK roof light is fitted with a hinged cover which incorporates a roller blind and a fixed flyscreen. Opening the hinged cover gives access to the adjustment handles for the five way opening facility. Grasp the handles and push upwards to fully open or tilt in the required direction.

When the vehicle is being driven the roof ventilators should be fully closed. Wind noise may be reduced by closing the night blind.

The roof ventilators are designed to flow a certain amount of air even fully closed. Do not obstruct them - your safety depends on them.

### Insulation

All body panels, except the front doors and engine bulkhead, are insulated using fibreglass insulation material, giving protection against extremities of hot and cold, and, at the same time, minimising condensation.

### Stainless Steel Sink and Drainer

The stainless steel sink and drainer should only be cleaned with light detergent. Under no circumstances should bleach be used since this will react adversely with the stainless steel and may cause small holes in the metal. Immediately beneath the sink is a slide-out cutlery drawer. The chrome mixer tap has a small rubber end cap to eliminate water droplets marking the work surface whilst in transit.

### Habitation Battery

This is located beneath the offside sofa. The battery is a 110AH 12V, low maintenance, leisure battery which should only require attention at the annual habitation service.

If a replacement habitation battery should be required then it is important that the replacement be of the same type and specification as that originally fitted.

**WARNING: Switch off all appliances and lamps before connecting or disconnecting the habitation battery.**



## Electronic Control System/Battery Charger

A Sargent EC155 Power Control System is fitted. It features a built in battery charger, an LED control panel to provide intelligent control of the 12V equipment and built in over-discharge software to protect the batteries. For a full description of this unit including operating instructions and fault finding, refer to the Connection of Services section.

## Electrical - General

The 230V AC sockets fitted to your vehicle are suitable only for medium demand components such as televisions and hairdryers. Safety/overload protection is provided by the MCBs in the electrical control box. A further 12V socket is also provided.

An EM50 electrical interface adaptor box is located on the bulkhead behind the driver's seat. This contains fuses and relays for systems connected directly to the base vehicle electrical system, and these are unlikely to require attention from the owner.

The mains hook up cable, provided as standard with the vehicle, is stored under one of the seats.

A strip LED awning light is provided above the side entrance door.

## Factory Fitted Options

The following optional items are available at the time of build:

- Cycle rack.
- Awning.

## Retrofit Options

Whilst this list is not comprehensive, below are listed suitable retrofit options. Contact either your local Auto-Sleeper dealer or the Motorhome Service Centre, Willersey for further details.

- Cycle Rack. The Fiamma 200D or 200DJ is recommended for fitment to the offside rear door.
- Top Box. A specific top box is not recommended because of the small amount of suitable space available on the roof. If a box is fitted it should be bolted through the roof, and the weight of it and its contents must not exceed 50kg.
- Air Conditioning. The Dometic B2200 is recommended for air conditioning in the habitation area.
- Back Box. The Fiamma Ultrabox 180 or 320 would be suitable, and is fitted to the cycle rack.
- Rear Ladder. The Fiamma Deluxe 6 DJ may be fitted to the nearside rear door to combine with the 200 DJ cycle rack.
- Towbar. The standard Peugeot towbar is recommended.



## AIR SUSPENSION

Your vehicle has been fitted with a supplementary air suspension system on the rear axle. This is called Air Top, is manufactured by AL-KO, and uses additional air springs to improve the quality of the vehicle ride.

The operating pressure may be adjusted by the vehicle user to suit their requirements.

*The system does not increase the carrying capacity of the rear axle, or the vehicle as a whole.*

### Use

The pressure is adjusted by attaching a garage airline or footpump to the car tyre type valves located in the passenger door stepwell. Adjust the pressure on the gauge to any value in the range stated for the optimum working pressure, in order to obtain the ride characteristics you require.

If you choose to have different pressures side to side, ensure that the difference between them is not greater than 0.7 bar (10 psi).

Do not inflate to more than the maximum pressure.

### Maintenance

No maintenance is required, although the system will be checked at the annual habitation service.

Washing with water is permitted to remove any salt which may collect during road use.

If there are any problems with the system contact your dealer, or an AL-KO approved service centre.

### Specification

Optimum working pressure: 1.8 bar (26 psi) to 2.5 bar (36 psi).

Minimum working pressure: 1.5 bar (22 psi).

Maximum working pressure: 3.0 bar (44 psi).



## GENERAL

In order to keep your Auto-Sleeper in first class condition, periodic maintenance will be required to both the bodywork, windows, upholstery and other parts of the conversion. This maintenance should be carried out as follows:

### Servicing

Servicing of the conversion is the responsibility of your local franchised Auto-Sleeper dealer to whom all queries should be referred. Your local base vehicle commercial dealer should carry out servicing of the base vehicle.

## GLASSFIBRE BODYWORK AND ACRYLIC WINDOWS

### General Cleaning

At regular intervals, you should wash the fibreglass bodywork with a recognised cleaner for use on fibreglass gel coats. Should marks remain, use a cleaner with chemical and abrasion agents formulated for use on gel coats.

### Discolouration

Fading or discolouration of the gel coat is a natural ageing process caused by ultraviolet light. To overcome this, use a mild abrasive, which removes a thin layer of the discoloured surface. This will restore the bodywork to its original colour and surface lustre. Since discolouration develops gradually, it should not be necessary to carry out this procedure more than every three years. Frequent use of abrasive materials can reduce the thickness of the gel coat, to a potentially harmful extent.

### Removing Scratches from Bodywork

Scratches can be removed from both gel and painted surfaces. The method depends upon the depth of the scratch, as care has to be taken to avoid penetrating the paint or gel coat. Very fine, hairline scratches can be removed by rubbing across the line of the scratch with rubbing compound. Slightly deeper scratches should be lightly wet sanded first using very fine (1200 grit or finer) abrasive paper. Rubbing compound will then

remove the flattening marks created by the abrasive paper. For deep gouge type scratches, where the paint or gel may have been penetrated, you should first seek the advice of your supplying Auto-Sleeper dealer.

### Removing Scratches from Acrylic Windows

All windows, except the chassis cab and Luton, are manufactured in acrylic. Over time these become scratched and their clarity impaired. An Acrylic Window Polish removes unwanted scratches and blemishes leaving a clear, haze free finish. Minor scratches can be polished out directly.

### Cleaning Interior Plastics

Interior plastic parts, such as the shower and wash basin, should only be cleaned with warm soapy water, or non-abrasive cleaners specified as being suitable for use on plastic items.

### Recommended Materials

*G3 Paste Compound:* This is a cutting compound and polish, recommended for use on painted surfaces and GRP. It is ideal for removing the traffic film that builds up on glassfibre coachwork and not only restores it to its former glory, but adds a high level of polish as well.

*G10 Extra Fine Grade Liquid:* This is again ideal for polishing surfaces and removes swirl marks and very fine scratches. It is less abrasive than G3 yet has the same polish properties and cleans and restores discoloured surfaces. It is ideal for use on dark colours.

*Black Top Hand Glaze:* This is ideal for use on stains, vinyls, body mouldings and provides a long lasting high gloss finish. It is resistant to car wash and abrasive solvents and is easy to apply. Economical in use, only a small amount is needed to give a very fine finish.

*Finishing Cloths:* These are very fine grade cloths, woven and thus easily washable that are recommended by Farecia for use with their materials.

The above can be purchased from our Service Centre, Willerby (01386) 853511.



## UPHOLSTERY MAINTENANCE

### Cleaning

Upholstery should be brushed or vacuumed regularly. Fabrics should be wiped every six to eight weeks with a lint free cloth and fabric cleaning fluid. Velour materials may be dry-cleaned.

### Fabric Care

Fabric snags caused by sharp objects such as toys, nails, etc., should be trimmed off immediately. Never attempt to pull them off since this could cause the snag to run.

Whenever possible, avoid exposing the upholstery to direct sunlight which might eventually cause the colour to fade.

Fabrics with a velour type pile finish will develop crush marks in use - this is unavoidable and does not affect the quality of the product in any way.

### Stain Removal

A proprietary dry cleaning fluid will remove most household stains. However, stubborn stains, such as coffee, wine or ice-cream may need pre-treatment with a mild soap and distilled water.

Small marks in velour type fabrics can usually be removed by stroking along the pile using a small brush and warm water.

We strongly recommend that before commencing any treatment an inconspicuous piece of material is tested for colourfastness and shrinkage. If in doubt, please contact a professional dry cleaning company. Do not apply cleaning solvents to velour piping, otherwise the flock will be removed.

### Work Surfaces

Laminated work surfaces are fitted to the tops of all furniture units. Whilst these are hard wearing, hot pans should not be placed directly on these surfaces, since damage may result.

## STAINLESS STEEL COMPONENTS

### External

In the event of discolouration of the stainless steel ladder, this should be removed with T-Cut or any other mild abrasive and the surface protected with WD40 or a similar product.

### Internal

Do not clean stainless steel fittings, i.e. splash plate and sinks with bleach since this reacts with the stainless steel and may lead to corrosion.

### Furniture

Furniture should be cleaned with a proprietary furniture polish periodically. Any watermarks that may occur on the hardwood edging of the furniture units should be removed by use of fine grade wire wool and furniture wax.

Heavy stains may need to be sanded out and the edging re-polished with a proprietary varnish (Ronseal etc.). The high gloss finish is achieved by using wire wool and wax.

## GAS INSTALLATION

All gas vents and flue pipes should be periodically checked for damage and should be kept free from dirt.

Blocking of vents or flues is extremely hazardous and should be avoided at all times.

### Gas Appliance Igniters

It is advisable, periodically, to check visually the igniters on hobs, grills and ovens are sparking correctly.

### Annual Inspection

The gas installations should be inspected annually by qualified personnel. If in doubt contact your supplying Auto-Sleeper dealer. Modifications to the gas systems should not take place unless carried out by qualified technicians.



## SEAT RESTRAINTS

**WARNING: In the event of any impact of 25 mph or over in which seat belts have been worn, they must be replaced before the vehicle is used again.**

## WATER SYSTEM

### Fresh Water Tank

At regular intervals, and at least every three months, the fresh water system should be flushed through with fresh water. Furthermore it is advisable that prior to using your Auto-Sleeper, the fresh water system is thoroughly flushed with fresh water.

### Waste Water Tank

Since the waste water tank can hold foreign matter, it should be regularly flushed with fresh water. To prevent odours working back through the shower and sink outlets, flush the waste tank through with a small amount of mild disinfectant.

Depending on the use of the waste tank, it is possible that this will collect solid waste matter, which in some instances may build up and block the waste tank outlet tap. In this case it will be necessary to drop the tank for cleaning. Access is through a large diameter fitting in the tank top. Once removed this will allow the tank to be flushed out in an inverted position and all solids removed.

## WINTERISATION

### General

This section contains information on the winterisation of your Auto-Sleeper, particularly when you may wish to lay up your vehicle for the winter months.

### Water System

The water system should be fully emptied, by opening the drain valve located adjacent to the water heater (see heater section for more details), and the drain taps on both the fresh water tank and waste water tank left in the open position. Likewise, all internal taps should be left open and the water pump run until the last traces of water have come out of the taps. Purely as a precaution, against very severe freezing conditions, the water filter that is attached to the water pump on the outlet side should be removed and cleared of all water. In doing so it will give you the opportunity of cleaning it, if necessary, ready for the coming season. Remove all sink plugs to allow the water system to breathe.

Flush fully the waste water tank to remove any excess debris and waste material. Flush through again with disinfectant as part of the final drain. Leave drain tap open.

### Upholstery

We advise that any detachable upholstery is removed and taken indoors during prolonged winter storage, particularly detachable upper bed mattresses and scatter cushions.

### Curtains/Blinds

To prevent uneven bleaching, and possible excess sunlight onto the furniture and fabrics, we recommend that either the curtains or blinds are left drawn.

### Refrigerator

Leave the refrigerator door open, on its intermediate lock position; this will allow the refrigerator to breathe and prevent any unpleasant odours in the storage department.

### Ventilation

There is fixed upper and lower ventilation in your Auto-Sleeper which is built-in in the interests of safety. There is therefore no need



to leave any windows or roof ventilators ajar - indeed the roof ventilators have sufficient fixed ventilation to allow the interior of the vehicle to breathe satisfactorily.

## Exterior

Fit, where appropriate, the Electrolux winter covers to the fridge ventilators. Give your Auto-Sleeper a good wash and polish before laying up, and apply a small film of protective oil to the stainless steel roof rack, ladder and any other external polished metal components.

## Electrical

Turn the electrical system off at the control panel.

Peugeot recommend that if the vehicle is to be parked up for a period of more than one month then it is advisable to disconnect the main vehicle battery. For full instructions on the correct procedure refer to the Peugeot handbook supplied with the vehicle and look for the section covering the battery. If this advice is followed, bear in mind that the remote central locking will not function, although it will still be possible to unlock and lock the doors manually using the key.

To maintain the vehicle battery in good condition it is recommended that it is fully charged prior to storage and then recharged every 3 months.

## Windows

Open all windows fully. Check all window seals are intact and shut firmly. Ensure locks and over centre catches are applied as appropriate.

## Automotive

Follow the advice laid down by the base vehicle manufacturer. In particular,

- Secure the vehicle using chocks. Release the handbrake to prevent the brake linings from seizing on.
- **Increase the tyre pressure (by approximately 2 bar above the standard pressure) to prevent the tyres from becoming flat.**

**WARNING: Do not exceed the maximum pressure noted on the sidewall of the tyre.**

Alternatively, jack up the vehicle to relieve the load on the tyres.

- Cover the tyres to protect from sunlight, as they will deteriorate rapidly in ultra-violet light. A light proof cover will help to prevent cracking of sidewalls and premature ageing.
- Check coolant for antifreeze protection, correct as required.
- Check windscreen and headlamp cleaning systems for antifreeze protection, correct as required.





## TROUBLESHOOTING

The following are a series of fault finding charts to which you should refer in the event of problems you may have regarding 230/12V, LPG and water. This should be used as a guide only, and in the case of an electrical fault, where a fuse has blown or an MCB tripped out, the fault must be located before replacing the fuse. If a fault is suspected with the LPG system, consult a GAS SAFE registered technician.

If in doubt consult a qualified technician or your local Auto-Sleeper dealer.

### 12V TROUBLESHOOTING CHART

Symptom	Cause	Remedy
<b>Habitation 12V does not operate</b>	Main 20A fuse blown	Check/Replace
	Battery Discharged	Recharge
	Switch on control panel in off position	Switch to on
	Vehicle ignition 'on'	Switch 'off' ignition
<b>Habitation battery not charging</b>	Main 20A fuse blown	Check/Replace
	Relay fault	Refer to dealer
	Contacts dirty/loose on battery terminals	Clean and check for tightness
	Poor earthing	Check earthing to chassis point
<b>Battery does not hold its charge</b>	Failed battery	Check cells with hydrometer change electrolyte if necessary
	Current being drawn	Check all appliances are off when not in use
<b>Battery discharges over a short time with appliances operating</b>	Poor battery cell condition	Check cells with hydrometer
	Failed battery	Change battery
	Battery not fully charged	Fully recharge battery
<b>No power to one or more 12V appliances</b>	Circuit fuse blown	Find fault and replace fuse with same rating
<b>Lights dull/only one tube illuminating</b>	Low battery charge	Check battery
	Faulty light unit/tube	Replace/Check
<b>Water pump not operating</b>	Switch on panel 'off'	Switch it 'on'
	Pressure switch on pump not operating	Refer to dealer
	Fuse 4 blown	Find fault and replace fuse with same rating
<b>No power on 12V socket outlet</b>	Fuse 9 blown	Find fault and replace fuse with same rating
	12V plug incorrectly connected/wired	Check plug

**12V TROUBLESHOOTING CHART (continued)**

Symptom	Cause	Remedy
<b>Water Heater not operating/cuts out</b>	Fuse 11 blown	Find fault and replace fuse with same rating
	Low battery charge	Recharge battery
	Unit fault	Refer to dealer
<b>Cooker ignition not operating</b>	Fuse 11 blown	Find fault and replace fuse with same rating
	Spark unit fault	Refer to dealer
	Fault on cooker unit	Refer to dealer
<b>Fridge gas ignition not operating</b>	Fuse 11 blown	Find fault and replace fuse with same rating
	Ignition control switch fault	Refer to dealer
<b>Fridge ignition switch flashes but gas does not ignite</b>	Fault on fridge unit	Refer to dealer
<b>Ignition can be heard to be sparking but no flashing on fridge switch</b>	Faulty fridge ignition switch	Refer to dealer
<b>Fridge does not operate on 12V when engine is running</b>	Fuse 3 blown	Find fault and replace fuse with same rating
	Fuse 7 in EM50 interface box blown	Find fault and replace fuse with same rating
	Fault on fridge relay	Refer to dealer
	Fault on fridge unit	Refer to dealer

**230V TROUBLESHOOTING CHART**

Symptom	Cause	Remedy
<b>230V system inoperative</b>	No site power	Check site supply
	RCD/MCB switches tripped out	Reset circuit breakers
<b>RCD/MCB keeps tripping out</b>	Fault on 230V supply	Check supply including polarity
	Faulty appliance	Turn off all appliances, reset circuit breakers, turn on appliances until fault occurs. Isolate faulty appliance
	Overload on current consumption by appliance	10A maximum available do not use appliance
<b>Water heater does not operate on 230V</b>	No power	Switch on isolator switch/ check MCB is on
	Overtemperature trip activated	Reset thermal cut-out (refer to operating instructions)
<b>Battery charger does not operate</b>	Charger switched off	Switch on at control box/ check MCB is on
<b>Refrigerator does not operate on 230V</b>	Switch on refrigerator thermostat dial not 'on'	Check position of thermostat dial
	Element fault	Refer to dealer
<b>Cooker Hotplate not heating up</b>	No power	Check MCB is on

**LPG TROUBLESHOOTING CHART**

Symptom	Cause	Remedy
<b>Appliance will not light</b>	No gas	Change the cylinder
		Check cylinder is turned on
		Check isolation valve is open
	Low battery (auto ignition)	Charge battery
<b>Appliance lights but goes out immediately the FSD override is released</b>	Flame supervision device (FSD) is not functioning correctly	Refer to dealer
<b>Odour</b>	Gas leak	Turn off the gas at the cylinder and do not use the gas system until the problem has been rectified
		In the event of a leaking cylinder, if possible, position the cylinder in an open area away from any sources of ignition. Contact the site warden and/or the local gas supplier
<b>Yellow flame</b>	Lack of primary air. please note yellow tipping to the flame is normal	Refer to dealer
<b>Orange flame</b>	Particles of dust or dirt in the mixing tube being carried through the burner ports	Reduce the amount of dust in air
	Burner ports partially blocked	Refer to dealer
<b>Floating flame</b>	Lack of secondary air	Check all vents are clear (air inlet to vehicle)
	Blocked retention ports	Check retention ports are clear
	If in an oven	Check the flue way is clear



## WATER TROUBLESHOOTING CHART

**Note:** For more help with water pump issues, please refer to page 7-3 of this handbook.

Symptom	Cause	Remedy
<b>Continuous running of water pump</b>	1. No water	1. Fill tank
	2. Major leak	2. Switch off immediately and check system
<b>Intermittent operation of water pump</b>	Minor leak in water system	Check push fit joints
	Water pump pressure release valve reasserting itself	No action - part of pump design
<b>Water pump does not operate</b>	Fuse 4 blown	Find fault and replace fuse with same rating
<b>Water gauge does not operate</b>	Probe fault	Refer to dealer (check probe connections)
<b>No hot water (mains system)</b>	Water heater tripped	Check and press re-set button
<b>No hot water (gas system)</b>	Gas module not lighting	Refer to dealer
	Igniter not working	Check 12V switched on
<b>Slow drainage from sink/shower tray</b>	Blocked breathers in waste tank	Drop tank and clear breathers
<b>Tip-up handbasin slow to drain</b>	Blocked drain hole	Remove basin and clear
<b>Unsatisfactory operation of water pump</b>	Filter blocked	Clean filter



## DATA RECORD

We suggest that you record key details in the spaces below should you accidentally mislay your keys or other vital documentation.

Vehicle Type .....

Vehicle Model .....

Auto-Sleepers Production Number .....

Keys .....

Ignition Key .....

Door Key (if applicable) .....

Fuel Filler (if applicable) .....

Water Filler .....

Gas Compartment Key .....

Toilet Compartment Key .....

Alarm Code (if fitted) .....

AA/RAC/etc. Membership Number .....

Radio Security Code .....

Supplying Dealer Contact Number .....



### **AUTO-SLEEPER DEALERS**

To find your nearest Auto-Sleepers dealer please go to [www.auto-sleepers.co.uk](http://www.auto-sleepers.co.uk) and click on 'Find a Dealer'.



## RECOMMENDED ANNUAL SERVICE CHECK FOR MOTOR CARAVAN BODIES AND CONVERSIONS

It is recommended that the annual service is carried out by an approved motorhome service centre.

### Introduction

This entire section offers guidelines for the checking of a motorhome's habitation area and to ensure continual compliance with EN1646-1.

It does not cover any part of the base vehicle, although there may be minor overlapping (such as tyre pressures, cab seats, internal lights, battery and windows) in a van conversion. The base vehicle must be serviced in accordance with the chassis manufacturer's instructions.

Reference should also be made to:

- Any owner's manual or equivalent supplied with the vehicle by the motorhome converter.
- Appliance manufacturer's instructions.
- Driver's handbook or equivalent supplied by the chassis manufacturer.
- A vehicle is accepted for service at the dealer's discretion.
- Any defects, repairs, adjustments, cleaning or lubrication required will be noted on the checklist. The customer's approval will be obtained before any work is done.

Not all of the equipment mentioned in this manual is fitted as standard to every motorhome.

This guide is published as an aide de memoire for dealers. Any work carried out following the check, and the sufficiency of the work in the check itself, is subject to the contract between the customer and the dealer.

## SECTION 1 - BODY MOUNTING

### Body to Chassis

Examine all fixings retaining the body to the chassis - this may be direct or through a sub-frame. Where practical, all fittings should be checked to ensure they are all present and correctly secured.

### Body to Cab

Examine joint between body and cab for signs of movement and soundness of sealing media.

### Body Retention (dismountables)

Check serviceability and tightness of body retaining gear.

Check serviceability of body support struts and mountings. (Note: whether it will be necessary to demount the body to check the body supports must be agreed between dealer and customer).

## SECTION 2 - WINDOWS

### Windows

Check window glazing rubber or sealing for cracks and general condition. Check for satisfactory operation and closing.

Check fixing of top hinge rail on top hung windows.

Check for good weather seal when window is closed and latched.

Check catches and stays for satisfactory operation.

## SECTION 3 - DOORS

### EXTERNAL DOORS

Not including base vehicle doors.

### Security:

- Check that hinges and catches are satisfactory and that, when latched, doors are held securely shut.
- Check that the keys or internal latches lock the doors correctly.
- Check that any device fitted to hold a door in the open position is satisfactory.



## Sealing:

- Check all door seals for cracking and general condition.
- Check correct closing to give a weather-tight seal.

## Childproof Lock:

- Where a door is fitted with a childproof lock check that an appropriate warning notice is fixed adjacent to the door. Appropriate warning notices are available from motorhome manufacturers.

## INTERNAL DOORS

### Security:

- Check that hinges and catches are satisfactory and that, when latched, the door is held securely shut.

### Safety:

- Check that any device fitted to hold a door in the closed position can be operated from both sides to open the door in an emergency.

## SECTION 4 - ATTACHMENTS TO CHASSIS OR UNDERBODY

### Corner Steadies

Check that attachments to chassis are secure.

Ensure steadies work freely and satisfactorily.

Lubricate screw to ensure correct operation.

### Folding/Retractable Steps

Check that step pivots are satisfactory and not worn. Check that, when closed, the retaining mechanism holds the step securely. If fitted, check device is working.

### Underfloor Water Tank Mountings

Check mounting frames are secure to body. Any fastenings that require releasing to remove the tank should be free of rust and operate freely. (Removal, flushing, cleaning and replacing of tanks will be carried out at the prior request of the customer or will be done subsequently with other work).

## Spare Wheel

Remove spare wheel. Check for damage. Check tyre pressure.

Check mounting frame for security to body and for secure retention of spare wheel.

## Wheel Boxes

Check for damage, corrosion, water seepage, signs of tyre scrubbing.

## SECTION 5 - ATTACHMENTS TO BODY EXTERIOR

### Roof Lights

Check security, general condition, and that sealing has not deteriorated.

### Roof Racks and Ladders

Check security to body and general condition.

Check roof for damage adjacent to rack.

### Mouldings, Trims

Check security. Check sealing has not deteriorated.

### Flue Terminals, Air Vents

Check security. Check sealing has not deteriorated.

Check that these are not blocked.

## SECTION 6 - INTERNAL

### Body Seepage Check

Examine for moisture/water staining of areas under windows, at side of roof and at corners, which could indicate water seepage problems. A moisture meter should be used where appropriate.

### Furniture

Check furniture is securely fixed.

Check door hinges, catches and stays for satisfactory operation.

### Dinette Seats/Beds

Check seat bases for security of fixings and for damage.

Make up beds according to manufacturer's instructions and check for rigidity and safety.





### Upper Bunks

Check there is a secure means of access to upper bunks and that, where applicable, protection against falling out and entrapment is provided.

### Curtains/Blinds/Nets

Check track is secure and curtains draw freely without snagging.

Check blinds and/or nets for correct operation.

Check flyscreens in roof lights and air vents.

### Cab Seats

Where cab seats form part of the living area and/or bed layout they should be checked for security of attachment, smooth and easy operation of seat slides, swivels and seat back operation.

### Fire Extinguisher

Check condition and expiry date. If an extinguisher is not fitted, inform the customer of the advisability of such equipment

### Fire Blanket

Check position (should be near cooker).

If one is not present, inform the customer of the advisability of such equipment.

### Advice to Occupiers/Warning Notice

Check presence and condition and advise customers accordingly.

The wording and layout of the notice should be set out as follows:

### ADVICE TO USERS

#### VENTILATION

Do not obstruct the ventilators which are fitted; your safety depends on them.

#### IN CASE OF FIRE

1. Get everyone out.
2. Turn off outside gas valve and/or oil valve (if fitted).
3. Disconnect the mains electricity supply.
4. Raise the alarm and call the fire brigade.
5. Tackle fire if safe to do so.

#### FIRE PRECAUTIONS

**Children:** Do not leave them alone.

**Means of Escape:** Make sure you know the location and operation of the emergency exits, keep all escape routes clear.

**Combustible Materials:** Keep them clear of all heating and cooking appliances.

**Fire Fighting:** Provide, at least, a 1kg power fire extinguisher, that complies with BS5423 by the main exit door, and a fire blanket next to the cooker. Make yourself familiar with the instructions on your fire extinguisher and the fire precaution arrangements on the caravan park.

### Portable or Open Flame Heating Equipment

Check for its presence. The customer must be advised against its use.



## SECTION 7 - ELEVATING ROOFS

### Lifting Mechanism

Gas struts or spring struts should be checked for corrosion (particularly on the piston rods of gas struts), smooth operation when operating roof up and down and to ensure that they support the roof when fully up.

Check attachment points of struts to body and roof.

### Canvas side walls

Check for satisfactory attachment to body and roof.

Check for splits or holes, particularly at fold lines.

Check that the canvas stows satisfactorily when roof is lowered. (A waterproofing check will be done at the request of the customer).

### Solid Side Wall

Check sides and end panels fold up and down correctly, that they seal against each other where appropriate and that retaining mechanisms are satisfactory.

Check all hinges for security and freedom from strain.

### Locking of Roof

It is important to ensure that, when the roof is in the travelling position, it is safely and positively locked down. Any locking retaining mechanism should be carefully examined.

## SECTION 8 - GAS SYSTEMS

### Cylinders, Regulators and Feed Hoses

Establish that the cylinder and feed hose is compatible.

Since the introduction of BS EN1949 the gas pressures for Butane (blue) cylinders and propane (red) cylinders have been harmonised across Europe. The gas system pressure is now 30mbar for both gases.

The gas regulator is now fitted as standard equipment by Auto-Sleepers. Your supplying dealer will need to supply you with the correct hose compatible with the cylinder to be fitted.

Check cylinder compartment vents and gas drop hole in floor are free from obstruction.

Check seals on internal doors.

### Hose and Piping

Check any flexible hose is of an approved type. Check its condition and any evidence of cracking.

The maximum permissible hose length is 400mm, longer hoses should not be used. The hose length is the length of the flexible portion of the hose assembly. Do not use external cylinders and or extension hoses.

Check piping for condition, damage and correct support.

Carry out an overall leak test.

### Appliances

In general, the checking of gas appliances can be divided into the following:

1. Cleaning.
2. Operation of controls.
3. Correct flame structure.
4. Flues.
5. Flame failure device.
6. Security.

### Cleaning

- Where appropriate, remove cover(s) to gain access to heat exchanger. Clean away any fluff or foreign matter. Reassemble and test. Clean flame viewing window.



## Controls

- Check that all knobs etc. work smoothly and are secure on their spindles. If gas taps require greasing to ease stiffness, use only approved LPG grease. Check that appliances can be brought into service using the normal controls.

## Correct Flame Structure

- Check that all pilot flames burn quietly and clearly.

*Refrigerator:* With the refrigerator gas control turned to maximum, the colour of the flame should be predominantly blue.

*Instantaneous Water Heating:* The main burner flame should be of even height and blue in colour. A flame burning yellow will allow sooting to occur.

*Ovens:* The oven flame should burn quietly and be of even height, mainly blue/green in colour. If the gas is propane, the flame will normally develop yellow tips as the burner heats up. If the gas is butane, a small amount of yellow tipping will be seen immediately after lighting, increasing as the burner heats up.

*Grill Burners:* It is normal for the flames on this type of burner to develop yellow tips as it heats up, particularly on butane.

*General:* A flame lifting away from the burners is an indication of too high a pressure, although it may happen with grill burners whilst the frets are heating up. A yellow flame will cause sooting and is an indication of too low a pressure. Providing the regulator and piping have been checked and found satisfactory, the above faults should not appear.

## Flues:

- Flues should be examined for security of fixing and for correct attachment to appliances and flue terminals. They should be free from damage and corrosion. Check for leakage of flue gases into the vehicle.

## Flame Failure Device (FFD):

- Where fitted, FFD should be checked to ensure satisfactory operation. After the

appliance has been successfully checked, allow time for the thermocouple to cool. Attempt to relight the appliance by turning it on without pushing in the gas control knob. (Do not override the FFD). If appliance does not light, FFD is satisfactory.

## Security:

- Check appliance is securely fixed to the vehicle/furniture and will be free from rattles. Where applicable, check that water pipes are satisfactorily attached with no sign of leakage.

## Protection of adjacent surfaces:

- Check that surfaces adjacent to open flame cooking appliance have adequate protection.

## Inspections:

- It is recommended that inspections are carried out by a qualified trained fitter trained to GAS SAFE standards.

## SECTION 9 - WATER SYSTEM

Before operating the water system, a visual check of the following items may show up an obvious leak source...

### Fresh Water Tank

Check condition, fill tank and check for leaks. Check the external filler and filler pipe to tank. Check for satisfactory venting. Check condition and presence of filler cap.

### Waste Water Tank

Check drain tap is clear and working. Check condition and presence of drain hose. (The water tank will be drained, flushed, cleaned and charged with a measure of toilet fluid/disinfectant at the prior request of the customer).

### Pump Filter

When applicable, remove filter and replace.

Check the in-line pump for security and condition. Remove the submersible pump from tank, check condition.

Check pump inlet and outlet are clear and not



obstructed.

Check delivery hose and electric cable are secure and satisfactory.

## System Check

Operate pump. Check all piping for leaks.

Operate taps and shower. If a hot water system is fitted, it can be checked for leaks etc., using cold water. (Note: Aerated water from tap could be due to a leak on the suction side of the pump).

## Waste Water System

With water running through the drain pipes, check for leaks and satisfactory draining of water from sinks etc.

## Couplings and Fluids

Check that the appropriate markings are used - blue for fresh water, grey for waste water. Ensure a sealing off cover is supplied for each coupling.

Check that filler positions are designated "petrol", "diesel" or "water" as appropriate.

## Toilet Waste Tank

Check that any fixed tank intended to receive discharge from a toilet is fitted with either a level or full indicator.

## SECTION 10 - ELECTRICAL SYSTEMS

### Extra Low Voltage 12 Volts (excluding vehicle)

#### Battery/ies:

- Check battery/ies for condition.
- Check connections, wires, fuses and relays appertaining to the habitation electrics.

#### Wiring:

- Examine all visible wiring.
- Check all connections and joints are sound and satisfactory.

#### Fuses/Fuse Holders:

- Ensure that fuses and fuse holders used to protect the habitation electrics are satisfactory and that fuse ratings are compatible with the circuit appliances

being protected.

#### Appliances:

- Inspect all appliances for damage, signs of overheating and secure fixing.  
Function test all appliances.

## Mains 230 Volt System

It is recommended that the inspection and certification of the 230 volt system be carried out by a qualified electrician who is an approved contractor of the NICEIC (National Inspection Council for Electrical Installation Contracting) or a member of the Electrical Contractors Association.

## SECTION 11- VENTILATION

### High Level

Check all high level ventilators, including roof lights, are free from obstruction and allow a free flow of air.

### Low Level

Check all low level ventilators are free from obstructions and allow a free flow of air. If the ventilator is manually adjustable then ensure the mechanism is free and operating correctly.



### **AUTO-SLEEPERS SERVICE CENTRE ANNUAL HABITATION CHECK**

#### **Introduction**

It is recommended that every 12 months the habitation side of your motorhome is inspected by qualified technicians. Attached to this brief, is a list of all the points that are checked.

A few customers are of the belief that this check includes rectification of faults. It is stressed that this is not the case, the annual service is a check only of the habitation aspect of the motorhome.

If faults are found, the technician will advise you, the customer, of the fault and the recommended course of action to resolve this.

Servicing is not included in this check.

All facilities are run and tested through their operational envelope. For example, the flame propagation on the refrigerator and other main gas appliances (where visible) is checked. If the flame is burning a wrong colour or burning too far from the jet, we again advise you, the customer, as to how this should be rectified.

We also recommend and are only too happy to arrange for the refrigerator of your Auto-Sleeper to be checked here at the Service Centre by a qualified Dometic engineer. In this instance we call upon Leisure Appliances and Repairs of Hereford who come, by appointment, to carry out the necessary work.

The only component that is changed during the course of the annual check is the flexible gas hose, the hose that leads from the bulkhead fitting in the gas compartment to the gas regulator.

A further aspect of the test is a gas pressure test.

You will see also that we check that key components are serviceable (fire extinguishers etc) and furthermore that where appropriate, items are lubricated and checked for serviceability.



## MOTOR CARAVAN ANNUAL HABITATION SERVICE CHECK

### CHECK SHEET CUSTOMER COPY

<b>Vehicle Reg. Mark</b>
Make & Model
Year of Manufacture
Recorded Mileage

<b>A Class</b>
Coachbuilt
High top conversion
Elevating Roof
Dismountable

CHECK ITEM	Manual	OK	Remarks - Advice to Customers
<b>SECTION 1: BODY MOUNTING</b>			
BODY TO CHASSIS			
BODY TO CAB			
BODY RETENTION			
<b>SECTION 2: WINDOWS</b>			
WINDOWS			
<b>SECTION 3: DOORS</b>			
EXTERNAL			
INTERNAL			
<b>SECTION 4: CHASSIS</b>			
CORNER STEADIES			
FOLDING STEP			
WATER TANK MOUNTS			
SPARE WHEEL			
WHEEL BOXES			
<b>SECTION 5: BODY EXTERIOR</b>			
ROOF LIGHTS			
ROOF RACK AND LADDER			
MOULDINGS AND TRIM			
FLUE TERMINALS, AIR VENTS			
<b>SECTION 6: INTERNAL</b>			
SEEPAGE CHECK			
FURNITURE			
DINETTE SEATS/BEDS			
CURTAINS, BLINDS, NETS			
CAB SEATS			
FIRE EXTINGUISHER			
FIRE BLANKET			
WARNING NOTICE			
HEATING EQUIPMENT			



## SERVICE DETAILS



CHECK ITEM	Manual	OK	Remarks - Advice to Customers
<b>SECTION 7: LIFT UP ROOFS</b>			
LIFTING MECHANISM			
CANVAS SIDE WALLS			
SOLID SIDE WALLS			
LOCKING			
<b>SECTION 8: GAS SYSTEM</b>			
CYLINDERS & REGULATOR			
HOSE & PIPING			
APPLIANCES			
<b>SECTION 9: WATER SYSTEM</b>			
FRESH WATER TANK			
WASTE WATER TANK			
FILTER PUMP			
SYSTEM CHECK			
WASTE WATER SYSTEM			
COUPLINGS & FLUIDS			
<b>SECTION 10: ELECTRICS</b>			
12 VOLT SYSTEM			
BATTERIES			
WIRING			
FUSES, FUSE HOLDERS			
APPLIANCES			
MAINS 230 VOLT SYSTEM			
<b>SECTION 11: VENTILATION</b>			
HIGH LEVEL			
LOW LEVEL			

DEALER:	SIGNED:
	DATE:



<div>DEALER STAMP</div> <div>DATE:        /        /</div>	<div>DEALER STAMP</div> <div>DATE:        /        /</div>
<div>DEALER STAMP</div> <div>DATE:        /        /</div>	<div>DEALER STAMP</div> <div>DATE:        /        /</div>
<div>DEALER STAMP</div> <div>DATE:        /        /</div>	<div>DEALER STAMP</div> <div>DATE:        /        /</div>
<div>DEALER STAMP</div> <div>DATE:        /        /</div>	<div>DEALER STAMP</div> <div>DATE:        /        /</div>
<div>DEALER STAMP</div> <div>DATE:        /        /</div>	<div>DEALER STAMP</div> <div>DATE:        /        /</div>
<div>DEALER STAMP</div> <div>DATE:        /        /</div>	<div>DEALER STAMP</div> <div>DATE:        /        /</div>



**A**

Air Suspension .....	1-2, 9-38
Annual Service Checks .....	12-1
Awning .....	9-27
Awnings .....	6-1

**B**

Barbecue point .....	9-1
Bed Assembly .....	9-34

**C**

Cleaning .....	
General .....	10-1
Stainless Steel .....	10-2
Upholstery .....	10-2
Codes of Conduct .....	2-1
Cooker Hood .....	9-7
Cycle Rack .....	4-1

**D**

Data Record .....	11-1
Dealer Addresses .....	11-2

**E**

Electricity .....	7-7
Instructions for Electricity Supply .....	7-7
Overseas Connection .....	7-8
Power Control System .....	7-10
Power Distribution Unit .....	7-11
Electronic Control System .....	9-37
Equipment Arrangement .....	9-29, 9-36

**G**

Gas .....	7-2
Connection .....	7-6
Gas Safety Advice .....	7-6
Gas System .....	7-2

**I**

Internal Layout .....	9-28
-----------------------	------

**L**

Levelling .....	5-1
Loading of Weight .....	3-1
Location of Facilities .....	9-31

**M**

Marker Lights .....	4-1
Microwave .....	9-1

**R**

Refrigerator .....	9-16
Reversing Camera .....	9-27
Roof Rack Bars & Ladder .....	3-1

**S**

Safety .....	6-1
Air Bags .....	6-1
Awnings .....	6-1
Children .....	6-1
Fire Extinguishers .....	6-1
In case of fire .....	6-1
Ventilation .....	6-1
Seat Swivel .....	4-2
Seating Arrangement .....	9-33
Site Regulations .....	5-1
Siting your Motorhome .....	5-1
Sleeping Arrangement .....	9-32
Smoke Alarm .....	6-3
Space Heater .....	9-12
Step, Electric .....	9-27

**T**

Technical Data .....	8-1
Television .....	9-27
Toilet .....	
Thetford C-402 .....	9-22
Troubleshooting Chart .....	10-5

**V**

Ventilation .....	6-1, 7-5
-------------------	----------

**W**

Warranty .....	1-3
Water Heater .....	9-8
Water System .....	7-1
Weight & Dimension Data .....	8-3
Weights .....	8-1
Wheel Changing .....	4-1
Wheel, spare .....	4-1
Winterisation .....	10-3
Wiring Diagram .....	
12V/230V .....	7-18

