



DATE: 2023-08-10

MODEL: SR3 / SR10

**TRANSPORT PUSHRODS**

***PRIORITY – LOW (INFORMATION)***

Effective from 1<sup>st</sup> August 2023 all Radical SR3 and SR10 production builds will be fitted with Transport Pushrods (AT0179 – single) alongside standard front push rods to increase splitter ground clearance to 80mm allowing for easier loading and unloading.


Transport Pushrods will be fitted after full flat patch setup and final setup values will return to production setup sheet values once these plates are removed and standard pushrods are reattached.



As per images below, the Transport Pushrods will be mounted to the side of a standard pushrod. The removed spacers will be cable tied up together with the rocker side rose joint through the eyelet onto the plate.

Bolts will be fitted loosely to prevent binding during transport.

Dealers should remove the transport pushrods ahead of normal PDI flat patch.

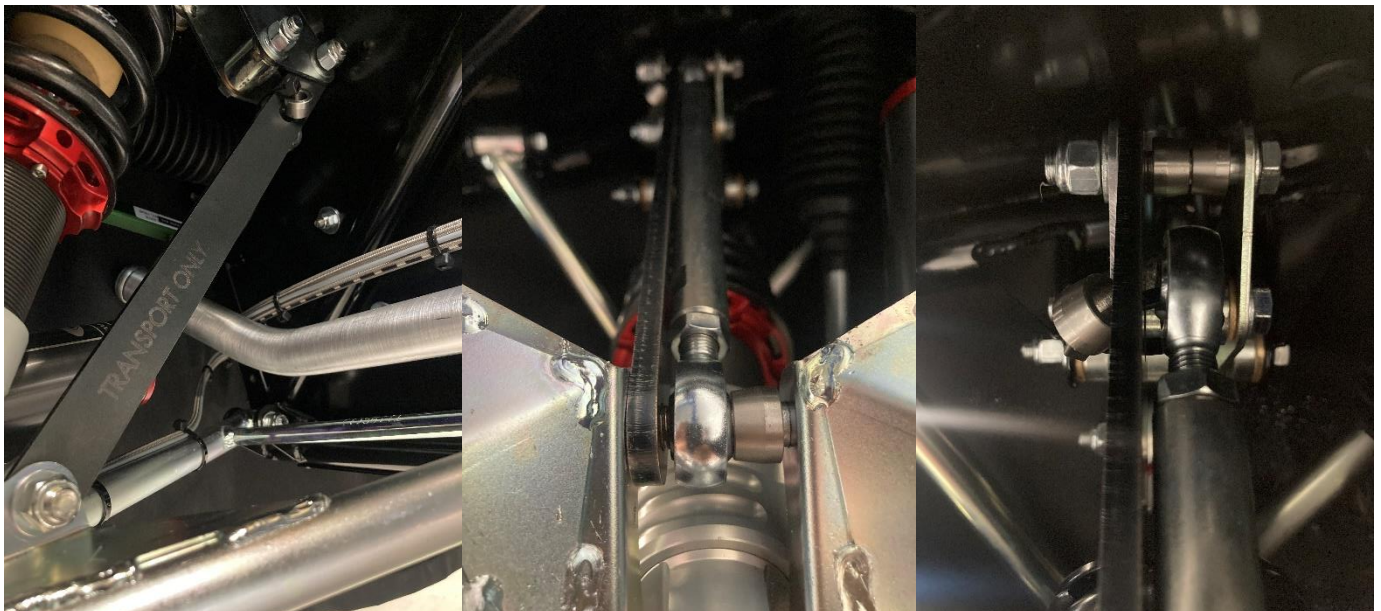

**Cars must NOT be driven with Transport Pushrods fitted!**